

AE PDX II 2000 Generator

July 2009 57020114-00B *User Manual*



User Manual

AE PDX II 2000 Generator

57020114-00B



COPYRIGHT

This manual and the information contained herein are the proprietary property of Advanced Energy Industries, Inc.

No part of this manual may be reproduced or copied without the express written permission of Advanced Energy Industries, Inc. Any unauthorized use of this manual or its contents is strictly prohibited. Copyright © 2008 - 2009 Advanced Energy Industries, Inc. All Rights Reserved.

DISCLAIMER AND LIMITATION OF LIABILITY

The information contained in this manual is subject to change by Advanced Energy Industries, Inc. without prior notice. Advanced Energy Industries, Inc. makes no warranty of any kind whatsoever, either expressed or implied, with respect to the information contained herein. Advanced Energy Industries, Inc. shall not be liable in damages, of whatever kind, as a result of the reliance on or use of the information contained herein.

PRODUCT USAGE STATEMENT



WARNING :

Read this entire manual and all other publications pertaining to the work to be performed before you install, operate, or maintain this equipment. Practice all plant and product safety instructions and precautions. Failure to follow instructions can cause personal injury and/or property damage. If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired. All personnel who work with or who are exposed to this equipment must take precautions to protect themselves against serious or possibly fatal bodily injury.

Advanced Energy Industries, Inc., (AE) provides information on its products and associated hazards, but it assumes no responsibility for the after-sale operation of the equipment or the safety practices of the owner or user. **NEVER DEFEAT INTERLOCKS OR GROUNDS.**

TRADEMARKS



is a registered trademark of Advanced Energy Industries, Inc.

PDX[®] is a registered trademark of Advanced Energy Industries, Inc.

Han[®] is a registered trademark of Harting, Inc of North America.

CUSTOMER FEEDBACK

Advanced Energy's technical writing staff has carefully developed this manual using research-based document design principles. However, improvement is ongoing, and the writing staff welcomes and appreciates customer feedback. Please send any comments on the content, organization, or format of this user manual to:

- tech.writing@aei.com

To order a manual, please contact Technical Support:

- technical.support@aei.com

Table of Contents

Chapter 1. Safety and Product Compliance Guidelines

Important Safety Information	1-1
Danger, Warning, and Caution Boxes in the Manual	1-1
Safety Guidelines	1-1
Rules for Safe Installation and Operation	1-2
Interpreting Product Labels	1-2
Product Compliance	1-3
Product Certification	1-3
Safety and EMC Directives and Standards	1-4
Electromagnetic Compatibility (EMC) Directives and Standards	1-4
Safety Directives and Standards	1-4
Industry Guidelines	1-5
Conditions of Use	1-5
Interlocks	1-6

Chapter 2. Product Overview

Product Description	2-1
General Description	2-1
Theory of Operation	2-1
Operation Overview	2-1
Rectifier Module	2-2
Inverter Module	2-2
Isolation Transformer	2-2
Filter	2-2
Directional Coupler/Detector	2-2
Voltage Control Mode	2-3
Controls	2-3
Power Regulation	2-3
Regulation Overview	2-3
Forward and Reflected Power	2-3
Load Power	2-4

Chapter 3. Specifications

Physical Specifications	3-1
Electrical Specifications	3-3
Cooling Specifications	3-9
Environmental Specifications	3-11

Chapter 4. Communication Controls

25-Pin User Port	4-1
25-Pin User Port Connector	4-1
Satisfying Minimal Requirements for the 25-Pin User Port	4-1
User Port Cabling Requirements	4-2
25-Pin User Port Signal and Pin Descriptions	4-2
Wiring Diagrams for the 25-Pin User Port	4-7
Host Interface	4-11
Host Connector	4-11
Host Port Pin Descriptions	4-12
AE Bus Transmission Parameters	4-12
Host Port Dip Switches	4-13
DIP Switch and Switch Settings	4-13
Switches	4-13
Setting the Baud Rate	4-13
Setting the Communication Mode	4-14
Default Dip Switch Settings	4-14
Setting the Unit AE Bus Address	4-14
AE Bus Protocol	4-15
AE Bus Header Byte	4-16
AE Bus Command Number Byte	4-17
AE Bus Optional Length Byte	4-17
AE Bus Data Bytes	4-17
AE Bus Checksum Byte	4-17
Creating an Ideal Communications Transaction	4-18
T 0: Host Transmits Message Packet	4-18
T 1: Unit Verifies Host Transmission Packet	4-19
T 2: Unit Transmits Response to Host	4-19
T 3: Host Acknowledges Unit Response	4-19
AE Bus Communications Transaction Example	4-19
AE Host Commands	4-20
AE Host Command Status Response (CSR) Codes	4-20
AE Host Port Command Set	4-21

Chapter 5. Installation, Setup, and Operation

Preparing to Install the Unit	5-1
Spacing and Mounting Requirements	5-1
Unit Drawings	5-2
Installation Requirements	5-6
Unpacking the Unit	5-7
Installing the Unit	5-7
Grounding	5-7
To Ground the Unit	5-7
Connecting Cooling Water	5-7
To Connect Cooling Water	5-8
Connecting Output Power	5-8
Calibrating the RF Output Interlock	5-8

Connecting Output Power and Satisfying RF Connector Interlock	5-11
Connecting AC Input Power	5-11
To Connect AC Input Power with the Harting Connector	5-13
Connecting I/O and Auxiliary Connectors	5-13
Connecting For External Voltage Regulation Mode	5-13
Front Panel Functions	5-14
Using the Front Panel to Monitor Unit Status and Unit Operating Data	5-14
LED and Numeric Display Behavior When a Fault is Present	5-15
LED and Numeric Display Behavior When Interlock is Not Satisfied	5-15
Status LED Indicators	5-15
Generator LEDs	5-16
First Time Operation	5-17
Minimum Operating Requirements	5-17
To Operate the Unit for the First Time	5-17
Command Sequence and Timing Recommendations	5-18
Unit Features	5-21
Automatic Tuning	5-22
Understanding Automatic Tuning and Sweep Frequency	5-22
.....	5-22
RF On Tuning	5-22
Retuning	5-23
Automatic Tuning Parameters	5-23
Pulsing Output	5-26
Understanding Pulsing	5-26
Pulsing Parameters	5-27
To Set Up Master/Slave Pulsing	5-27
To Enable/Disable Pulsing and Set Pulsing Parameters	5-28

Chapter 6. Troubleshooting and Global Services

Troubleshooting the Unit	6-1
To Troubleshoot an Overtemperature Condition	6-2
To Troubleshoot Set Point Problems	6-3
Internal Diagnostics	6-3
To Run Internal Diagnostics	6-4
Troubleshooting Using Error Codes	6-5
Accessing Error Codes	6-5
Fault and Warning Types and Clearing Faults	6-5
Error Code Table	6-6
AE Global Services	6-13
Returning Units for Repair	6-14

List of Tables

Table 1-1. Hardware interlocks	1-6
Table 3-1. Physical specifications	3-1
Table 3-2. Electrical specifications	3-3
Table 3-3. Cooling specifications	3-9
Table 3-4. Environmental standard specifications	3-11
Table 3-5. Climatic specifications (per EN50178)	3-11
Table 4-1. Jumpers on a dummy plug to satisfy minimal signal requirements	4-1
Table 4-2. User port signal descriptions	4-2
Table 4-3. 25-pin User port pin descriptions	4-3
Table 4-4. Host port pin descriptions	4-12
Table 4-5. DIP switch settings for variable baud rate, switches 6 and 7	4-13
Table 4-6. DIP switch settings for communication mode, switch 8	4-14
Table 4-7. Default dip switch settings	4-14
Table 4-8. AE Bus address settings	4-14
Table 4-9. AE Bus byte structure	4-17
Table 4-10. AE Host command status response (CSR) codes	4-20
Table 4-11. AE Host commands	4-21
Table 5-1. Harting 70 A connector pin descriptions	5-12
Table 5-2. I/O and auxiliary ports	5-13
Table 5-3. Status LED indicators	5-15
Table 5-4. Generator LEDs	5-16
Table 5-5. Recommended command sequence and timing	5-19
Table 5-6. Frequency tuning parameters	5-23
Table 5-7. Pulsing parameters	5-27
Table 6-1. Error codes	6-6
Table 6-2. AE Global Services 24 X 7 contact information	6-13

List of Figures

Figure 1-1. Interlock circuit	1-7
Figure 2-1. PDX II 2000 generator block diagram	2-2
Figure 3-1. Pressure drop	3-10
Figure 4-1. User port connector, 25-pin	4-1
Figure 4-2. REFL PWR MONITOR (pins 2 and 15)	4-7
Figure 4-3. FWD/LOAD PWR MONITOR (pins 3 and 16)	4-7
Figure 4-4. RF PWR ON (pins 4 and 17)	4-8
Figure 4-5. SET POINT (pins 5 and 18)	4-8
Figure 4-6. DC BIAS/POWER REGULATION (pins 6 and 19)	4-8
Figure 4-7. FWD/LOAD PWR REGULATION (pins 8 and 21)	4-9
Figure 4-8. INTERLOCK LOOP (pins 23 and 10)	4-9
Figure 4-9. +15 VDC (pins 13 and 21)	4-10
Figure 4-10. SET POINT STATUS (pins 14 and 1)	4-10
Figure 4-11. OVERTEMP (pins 22 and 9)	4-10
Figure 4-12. DC BUS OK (pins 24 and 11)	4-11
Figure 4-13. Host port connector	4-11
Figure 4-14. Slide DIP switch	4-13
Figure 4-15. Graphic representation of a message packet	4-16
Figure 4-16. AE Bus communications transaction	4-18
Figure 4-17. Communications transaction example	4-20
Figure 5-1. Front panel	5-2
Figure 5-2. Rear panel	5-2
Figure 5-3. Left side	5-3
Figure 5-4. Right side	5-4
Figure 5-5. Top side	5-5
Figure 5-6. Bottom side	5-6
Figure 5-7. RF output connector interlock adjustment tag	5-9
Figure 5-8. RF output connector and interlock adjustment screw	5-10
Figure 5-9. RF output connector	5-11
Figure 5-10. Harting Han modular 70 A AC power input connector	5-12
Figure 5-11. Front panel display with Status and Generator LEDs	5-14

Safety and Product Compliance Guidelines

IMPORTANT SAFETY INFORMATION

To ensure safe installation and operation of the Advanced Energy PDX II 2000 generator, read and understand this manual before attempting to install and operate this unit. At a minimum, read and follow the safety guidelines, instructions, and practices.

DANGER, WARNING, AND CAUTION BOXES IN THE MANUAL



This symbol represents important notes concerning potential harm to people, this unit, or associated equipment. Advanced Energy includes this symbol in Danger, Warning, and Caution boxes to identify specific levels of hazard seriousness.



DANGER:

DANGER indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury. **DANGER** is limited to the most extreme situations.



WARNING:

WARNING indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury, and/or property damage.



CAUTION:

CAUTION indicates a potentially hazardous situation that, if not avoided, could result in minor or moderate injury, and/or property damage. **CAUTION** is also used for property-damage-only accidents.

SAFETY GUIDELINES

Review the following information before attempting to install and operate the product.

Rules for Safe Installation and Operation

Please note the following rules:

- Do not attempt to install or operate this equipment without proper training.
- Ensure that this unit is properly grounded.
- Ensure that all cables are properly connected.
- Verify that input line voltage and current capacity are within specifications before turning on the power supplies.
- Use proper electrostatic discharge (ESD) precautions.
- Always be careful around this equipment.

INTERPRETING PRODUCT LABELS

The following labels may appear on your unit:



1020

CE label



1029

Protective Earth ground



1332

Hazardous voltage



1028

High voltage



1030

Nonionizing radiation



NRTL: Nationally Recognized Testing Laboratory



Refer to manual for more information



SEMI F47 compliant



Heavy object—can cause muscle strain or back injury

PRODUCT COMPLIANCE

The following sections include information about unit compliance and certification, including the conditions of use required to be in compliance with the standards and directives.

Product Certification

Certain options of this product may be certified according to the list below.

For more information, refer to the Certificate or Letter of Conformity (US) or Declaration of Conformity (EU) accompanying the product.

- NRTL – Safety certified by CSA International, a Nationally Recognized Testing Laboratory
- CE Marking – Self-declaration, assessed by AE Corporate Compliance
- EMC measurements – Verified by the AE Corporate Compliance Lab and/or an accredited third party lab

- SEMI guidelines – Verified by AE Corporate Compliance and/or a third party certification.

Safety and EMC Directives and Standards

Certain options of this unit have been tested for and comply with the following electromagnetic compatibility (EMC) and safety directives and standards and industry guidelines.



Important

This device must be installed and used only in compliance with the directives and standards listed in addition to EN 60204 (IEC 60204) and applicable requirements.



Important

This equipment must be installed and used in accordance with the Conditions of Use described in this manual. If this equipment is expanded, modified, or installed into a larger system, the user is responsible to guarantee the compliance of the overall system. If this equipment is used with external components, the user must ensure that the Safety and EMC requirements are not violated.

ELECTROMAGNETIC COMPATIBILITY (EMC) DIRECTIVES AND STANDARDS

- **2004/108/EC**
EC Council directive on the approximation of the laws of the Member States relating to electromagnetic compatibility (EMC Directive)
- **47 CFR Part 18**
Code of Federal Regulations—Limits and methods of measurement of radio interference characteristics of industrial, scientific, and medical equipment
- **EN 55011**
Limits and methods of measurement of radio disturbance characteristics of industrial, scientific, medical (ISM) radio frequency equipment (Class A, Group 2) (CISPR 11)
- **EN 61000-6-2**
Electromagnetic Compatibility (generic immunity standard—industrial)

SAFETY DIRECTIVES AND STANDARDS

- **2006/95/EC**
EC Council directive on the harmonization of the laws of the Member States relating to electrical equipment designed for use within certain voltage limits (LVD - Low Voltage Directive)
- **UL 61010-1 (2nd Edition)**

Safety requirements for electrical equipment for measurement, control, and laboratory use

- **CAN/CSA-C22.2 No. 61010-1-04**

Safety requirements for Electrical Equipment for Measurement, Control, and Laboratory Use - Part 1: General Requirements

- **EN 61010-1**

Safety requirements for electrical equipment for measurement, control, and laboratory use

INDUSTRY GUIDELINES

- **SEMI F47-0706**

Specification for Semiconductor Processing Equipment Voltage Sag Immunity



Important

Maintains power set point through a voltage sag.

- **SEMI S2-0706**

Environmental, health, and safety guidelines for semiconductor manufacturing equipment

Conditions of Use

To comply with the stated directives and standards, you must meet the following conditions of use:

- Before making any other connection to this device, connect the secondary Protective Earth (ground) terminal to a local earth (ground) terminal with a copper wire that is sized according to the applicable requirements.
- Install and operate this device in an overvoltage category II or better installation.
- Install and operate this device only in a pollution degree 2 or better environment, which means an indoor location such as a computer room, office, or factory floor where only nonconductive pollution occurs during operation. Occasionally, condensation causes temporary conductivity when the device is not operating.
- Operate this device under the ambient temperature and water specifications declared in the specification.
- Install and operate this device with a 50 A (maximum) circuit breaker switch on the AC input to provide the required over-current protection. The circuit breaker switch must be easily accessible and near the device.
- You must install and operate this device with a disconnect switch that conforms to the applicable requirements. The switch must be easily accessible, near the device, and able to lockout/ tagout all sources of input power.
- Use only a shielded cable on the input power connector.
- Use only a shielded power cable on the RF output power connector.

- Use only shielded cables on the **Host** (RS-232) and **User** port connectors.
- Install this device so that the input power connection is inaccessible to the user.
- Install this device so that the output power connection is inaccessible to the user.
- Dispose of this product as directed by applicable laws and regulations.

INTERLOCKS



WARNING:

Advanced Energy products only include interlocks when required by product specification. Interlocks in Advanced Energy products are not intended to meet or satisfy safety requirements. Where interlocks exist, you must still meet and satisfy safety requirements. The presence of interlocks does not imply operator protection.

Table 1-1. Hardware interlocks

Mechanism	Detection Method	Equipment Condition When Interlock is Open
Interlock relay disables DC power to the gate drivers of the RF section, which results in RF output being disabled.	There are two detection methods: <ul style="list-style-type: none"> • The User port interlock circuit is not satisfied • The RF output interlock switch detects when the RF cable is not fully attached. 	Green Interlock LED is not lit, interlock is not satisfied, and as a result RF out cannot be enabled.

The wiring diagram of the interlock shows the relay in the unit.

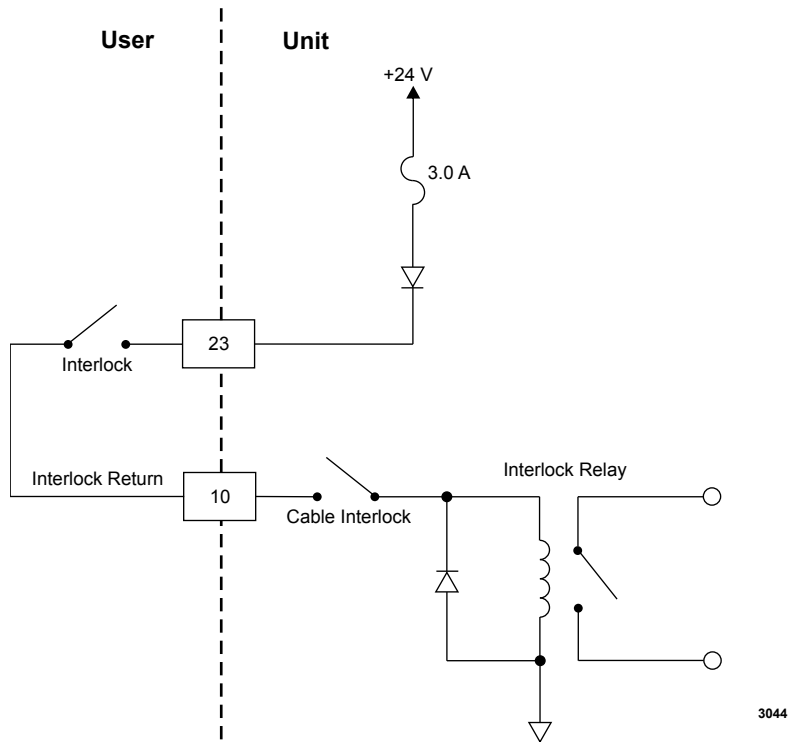


Figure 1-1. Interlock circuit

Product Overview

PRODUCT DESCRIPTION

General Description

The Advanced Energy PDX II 2000 generator is a 360 kHz to 440 kHz midfrequency generator designed to regulate on either forward power, load power, or voltage with an optional AE peak voltage sensor. The PDX II 2000 generator provides up to 2000 W into a 50 Ω , nonreactive load. The generator is capable of delivering 100% of its rated power into a 2.38:1 VSWR load, making it an ideal choice for applications with a fixed match.

The PDX II 2000 generator incorporates Direct Digital Synthesis (DDS) technology for control of the operating frequency. This technology can be useful when the application requires that the generator operate into an impedance mismatch. The frequency can be programmed to dither over a predetermined range to minimize the load mismatch to the generator. The DDS operating parameters are configured via the generator's serial **Host** port (RS-232/485 compatible) and are stored indefinitely in nonvolatile RAM.

The PDX II 2000 generator is a water and air cooled, 7" high, 19" rack-mountable unit. The generator has a front panel with a numeric display and six status LEDs for monitoring basic generator functions. Primary control of the unit is accomplished through a 9-pin RS-232 **Host** interface or a 25-pin analog/digital **User** port.

THEORY OF OPERATION

Operation Overview

The PDX II 2000 generator efficiently creates sinusoidal voltage waveforms by switching rectified DC power through a filter and an isolation transformer. A directional coupler/detector samples the RF power signal and uses the signal to control the switch waveforms and therefore, the output power. Depending upon the method of regulation, either the forward or load power can be used as a control signal. The PDX II 2000 generator can also control the voltage at the load with proper voltage feedback and setting the unit to voltage control mode.

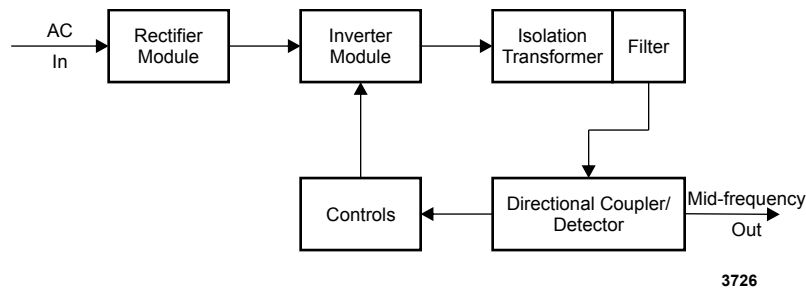


Figure 2-1. PDX II 2000 generator block diagram

Rectifier Module

The full-wave bridge rectifier converts the AC input voltage into a steady DC signal. This power is provided directly into the inverter module.

Inverter Module

The inverter module is composed of a set of MOSFETs which are either fully on or fully off. When the FETs are on, very little voltage drop occurs across them. When they are off, virtually no current flows through them. Since the power dissipated in a FET is the product of the voltage across and the current through the device, neither case represents a large power loss. This makes the generator very efficient.

Isolation Transformer

The inverter module produces a waveform with substantial energy at the fundamental switching frequency, which is set to the desired output frequency. This waveform goes to the isolation transformer.

The isolation transformer isolates RF output of the generator from the inverter module which is directly connected to the AC power line. The transformer also transforms the impedance to bring the output impedance of the generator to a standard 50 Ω level.

Filter

The filter is a combination of inductors and capacitors especially designed to pass only the frequency of interest and reject high frequency harmonics (a lowpass filter). The output of the filter is nearly a perfect sine wave. This wave is then delivered to the directional coupler/detector.

Directional Coupler/Detector

The directional coupler/detector samples the voltage and current of the RF power line and a digital signal processor (DSP) is used to calculate the forward and reflected power. The forward and reflected power can be thought of as the power flowing toward the load and the power reflected back from the load. Forward power minus reflected power

is the power dissipated in the load and is called the load power. The DSP uses the calculated values in the feedback control loop to control the power supply output.

The PDX II 2000 generator uses sophisticated signal processing to compensate for or eliminate offsets and nonlinearities inherent in the generator. As a result, the output power of the generator is accurate and linear. Forward, reflected, and load power levels are displayed on the front panel and are provided to the **User** port or can be accessed through the **Host** port.

Voltage Control Mode

The PDX II 2000 generator has the capability to control the amplitude of RF output voltage at the load with the use of the AE Low Frequency Fixed Match and voltage peak detector. The voltage from the peak detector is supplied to the generator and used to control the inverter.

Controls

The control section controls the inverter that regulates the output power. This section has limits and trip thresholds that prevent inverter failure.

POWER REGULATION

Regulation Overview

The PDX II 2000 generator can regulate power based on either forward or load power measurements. The method used by the generator is determined by **User** port pin 8, referenced to pin 21 (*FWD/LOAD POWER REGULATION*). You can also use command **3, set regulation mode** at the Host port to select the regulation mode. The front panel meter displays forward power if the method of output regulation is forward power and displays load power if the method of output regulation is load power.

Forward and Reflected Power

In a mismatched system, the load impedance does not match the connecting cable impedance, and this means there will always be a standing wave on the connecting cable. Think of this standing wave as being created by the interference of two travelling waves, one moving toward the load and one returning to the generator. The power in the imagined wave moving toward the load is the forward power, and the power in the imagined return wave is the reverse, or reflected, power.

Mathematically, in a system with a reference (cable) impedance Z_0 , forward and reflected voltages ($V_{f/r}$) and current ($I_{f/r}$) can be defined as:

$$V_{f/r} = V \pm (Z_0 I) / 2$$

$$I_{f/r} = (V / Z_0) \pm I / 2$$

The plus sign is used for forward voltage and current and the minus sign is used for reflected voltage and current. The forward and reflected powers are the product of the voltages and currents:

$$P_f = V_f \times I_f$$

$$P_r = V_r \times I_r$$

Neither the forward nor the reflected power directly determine the process results.

Load Power

The load power is the power actually dissipated in the load. If the load is not reactive, the load power is simply the voltage times the current. If the load is reactive, there will be phase angle between the voltage and current, and the load power will be equal to: $V * I * \cos(\text{phase angle})$.

In terms of forward and reflected power, the load power is the forward power minus the reflected power. Generally, the important factor in a process is the load power, because by definition that is the actual power delivered to the load.

Specifications

PHYSICAL SPECIFICATIONS

Table 3-1. Physical specifications


Description	Specification
Size	178 mm (H) x 435 mm (W) x 501 mm (D) 7" (H) x 17.1" (W) x 19.7" (D)  Important These measurements do not include handles, connectors, and switches.
Weight	35.38 kg (78 lb) maximum
Mounting	Standard 19" rack, optional rack mount kit
Clearance	A clearance of 13 mm (0.5") minimum is required at the sides of the unit for proper cooling. A clearance of 100 mm (4") is required at the rear of the unit for connections.
Connectors/Cable Specifications	
RF output connector	HN coaxial female (TRU-8371-SNT). Connector has an interlock which engages when output cable is fully connected.
AC power input	Harting Han Modular, 4-pin, 70 A male connector: <ul style="list-style-type: none"> • Frame: 09140060303 • Housing: 09300060301 • Insert (70 A): 09140022642
User port connector	25-pin subminiature-D, female
Host port connector	9-pin subminiature-D, female
Ethernet connector	RJ-45
Pulse In connector	SMA
Pulse Out connector	SMA
Bias voltage input Sense V-in connector	SMA

Table 3-1. Physical specifications (Continued)

Description	Specification
Scaled analog output for bias compensation Bias V-Out connector	SMA
Coolant connectors (water in and water out)	SS female Swagelok® 3/8" on nickel plated brass panel
Chassis ground terminal	10-32 stud with nut and star washer

ELECTRICAL SPECIFICATIONS

Table 3-2. Electrical specifications

Description	Specification
Input power specifications	
Standard operation	Standard operating specification: <ul style="list-style-type: none"> Nominal: VAC = 208 V, 60 Hz Output power = 2000 W Frequency = 400 kHz Load = 50 Ω
AC facility requirements <ul style="list-style-type: none"> Line voltage Line frequency Phase 	Facility requirements specification: <ul style="list-style-type: none"> 208 VAC \pm 10% (187 VAC to 229 VAC) 50 Hz to 60 Hz nominal (47 Hz to 63 Hz) 3ϕ with ground, no neutral
AC to RF efficiency	78%
AC input power factor	0.67
AC power consumption	2556 W
AC line current	< 16 A _{RMS} typical per phase at 2000 W, 208 VAC < 18 A _{RMS} typical per phase at 2000 W, low AC line
Overcurrent protection	50 A circuit breaker with lockout pin
Ground leakage current	Balanced or unbalanced three-phase systems: < 3.5 mA
RF output specifications	
Warm-up time	Generator minimum warm-up time of 2 minutes after AC on
Frequency tuning range	360 kHz to 440 kHz
Frequency stability	< 50 ppm of selected frequency
Reflected power limit	400 W maximum
Delivered power into mismatched loads (Automatic load mismatch protection, unlimited load impedance range, full frequency range)	Generator maximum delivered power is based on reflected power. <ul style="list-style-type: none"> Within VSWR 2.38:1 it is 2000 W Outside VSWR 2.38:1, maximum delivered power is restricted by reflected power limit, 400 W.

Table 3-2. Electrical specifications (Continued)

Description	Specification
Load power into 1.1:1 VSWR	2000 W
Load power into 2.0:1 VSWR	2000 W
Load power into 2.38:1 VSWR	2000 W
Load power infinity:1 VSWR	Maximum reflected power 400 W
Delivered power set point range	5 W to 2000 W
Frequency resolution	1 Hz
Regulation modes selected by tool interface	Forward power regulation, load power regulation, or voltage regulation mode
Measured power accuracy in full frequency range and across full line voltage range	<p>Measured power accuracy is a combination of the generator and measurement equipment accuracy.</p> <p>These specifications were created per an AE test measurement procedure. Using alternate test measurement devices and/or procedures will result in deviations from the provided numbers and values listed in this specification.</p>
Measured power accuracy into 50 Ω	<p>Power accuracy:</p> <ul style="list-style-type: none"> • ± 0.5 W of set point for 5 W to 50 W • $\pm 1\%$ of set point or ± 2 W, whichever is greater, when operating at 400 kHz, into a 50 Ω, non-reactive load for 50 W to 2000 W • $\pm 1.5\%$ of set point or ± 2 W, whichever is greater, over entire frequency range when operated into a 50 Ω, nonreactive load, for 50 W to 2000 W
Measured power accuracy into 2:1 VSWR circle	<p>Power accuracy:</p> <ul style="list-style-type: none"> • ± 1.5 W of set point for 5 W to 50 W, over entire frequency range • $\pm 2.5\%$ of set point or ± 2 W for 50 W to 2000 W, whichever is greater, over entire frequency range
Measured power accuracy into 4:1 VSWR circle	<p>Power accuracy:</p> <ul style="list-style-type: none"> • ± 2 W of set point for 5 W to 50 W, over entire frequency range • $\pm 3.5\%$ of set point or ± 2 W for 50 W to 700 W, whichever is greater, over entire frequency range

Table 3-2. Electrical specifications (Continued)

Description	Specification
Repeatability (same generator) over the full frequency and power range into 50 Ω non-reactive load	Same generator repeatability: <ul style="list-style-type: none"> • ± 1 W of set point for 5 W to 50 W • $\pm 1\%$ of set point or ± 1.5 W, whichever is greater, when operating at 400 kHz, into a 50 Ω, nonreactive load for 50 W to 2000 W • $\pm 1.5\%$ of set point or ± 2 W, whichever is greater, over entire frequency range when operated into a 50 Ω, nonreactive load, for 50 W to 2000 W
Load mismatch over full frequency and power	The generator will operate continuously into any load impedance without failure.
Short term output power drift operating into a 50 Ω load	< 1.0% during one continuous hour of operation beginning with a set point of 0 W at 400 kHz and giving the generator a 2000 W set point operating into a 50 Ω load.
RF on/off response time	Analog User interface: <ul style="list-style-type: none"> • RF rise time: < 20 ms from leading edge of <i>RF ENABLE</i> signal to 81% of set point (90% of the output voltage) provided a single command received by the generator. No overshoot. • RF fall time: < 6 ms from falling edge of <i>RF ENABLE</i> signal to < 5 W provided a single command received by the generator.
RF on/off response time	Serial Host interface: <ul style="list-style-type: none"> • RF rise time: < 20 ms upon receipt of AE Bus command to 81% of set point provided a single command received by the generator. No overshoot. • RF fall time: < 6 ms upon receipt of AE Bus command to < 5 W provided a single command received by the generator.
Set point change response time Analog User interface	Analog response time is measured from step set point change to 90% change of the RF output voltage. <ul style="list-style-type: none"> • RF rise time < 30 ms over full power range into a broadband load • RF fall time < 30 ms over full power range into a broadband load
Set point change response time Serial Host interface	Serial interface response time is measured upon receipt of an AE Bus command to 90% change of the output RF voltage. <ul style="list-style-type: none"> • RF rise time < 25 ms over full power range into a broadband load • RF fall time < 25 ms over full power range into a broadband load
Spurious signals in full frequency and power range	- 50 dBc

Table 3-2. Electrical specifications (Continued)

Description	Specification
Harmonics in full frequency range at maximum power on 50 Ω load	- 30 dBc
Maximum allowable forward power incident upon the RF outputs from external sources/ load	50 W minimum between 2 MHz and 300 MHz
Zero/Low set point	<p>RF output is disabled if set point in power control mode is less than 5 W.</p> <p>RF output is disabled if set point in external voltage control mode is less than 20 V.</p> <p>RF ON LED on the front panel and on VFP are still on.</p>
RF ramp rate control	<p>The rise and fall rate of the RF output can be programmed via the serial Host interface. This function is enabled for RF ON and set point up or down changes via the serial Host interface.</p> <p>For safety reasons, an RF OFF command will not ramp down the output. The rate can be defined in watts per second or absolute time through the serial Host interface.</p> <p>Watts per second mode can be set in 1 W increments.</p> <p>Absolute time mode range in 1 ms increments:</p> <ul style="list-style-type: none"> • Minimum ramp time: 100 ms • Maximum ramp time: 30000 ms <p>The ramp rate parameters are not allowed to change while a set point ramp is currently in progress.</p>
Diagnostics	The generator will evaluate its internal parameters for the relative health of the generator. Special diagnostic capability is provided for testing into short (0 Ω) load.
<p>Tuning algorithm</p> <p>The unit is designed and programmed to utilize a sweep frequency algorithm to minimize reflected power as detected by the unit's output sensor. The algorithm is able to:</p> <ul style="list-style-type: none"> • Minimize reflected power • Lock the generator at a tune point • Track (re-tune) frequency to follow changes in load conditions to minimize reflected power 	
Frequency tuning range	360.1 kHz to 439.6 kHz
Frequency preset: Start minimum and maximum frequency	360.1 kHz to 439.6 kHz, 1 kHz resolution

Table 3-2. Electrical specifications (Continued)

Description	Specification
Tune time	< 0.1 second from RF enabled at a preset frequency (within 10% or 2 W of the minimum reflected power, whichever is greater)
Typical tune time for factory set tuning parameters	60 msec tuning delay + 25 msec tuning
Tracking and re-tune	< 0.1 s maximum If reflected power increases above a user defined threshold expressed as a % of the power set point, the generator will re-tune
Tuned frequency repeatability	± 2 kHz
Pulsing specifications into broadband 50 Ω	
Frequency range	10 Hz to 2 kHz (minimum on width has to be satisfied)
Duty cycle range	10% to 90% (minimum on width has to be satisfied)
Minimum on width	225 μ s
Rise/ fall time	When output voltage reaches 67% of nominal: <ul style="list-style-type: none"> • Rise time 10 μs maximum • Fall time 10 μs maximum
Settling time	When output voltage settles within 10% of nominal: <ul style="list-style-type: none"> • 300 μs at 5 W output power • 30 μs at 2000 W output power
Voltage overshoot	With a 50 Ω broadband load: <ul style="list-style-type: none"> • Maximum 25%
Power accuracy	Pulse power level is the same as CW after pulse settling time
Pulse to pulse jitter	Maximum 1 RF period (2.5 μ s at 400 kHz)
Synchronization	Start of pulse is synchronized to the phase of the RF clock
Pulsing specifications into non 50 Ω loads	
Load is a fixed matching network loaded to the "plasma model", which is 30 Ω to 116 Ω resistor in series with 1.1 nF capacitor.	
Minimum on width	225 μ s
Settling time	Less than 500 μ s
Voltage overshoot	x 6 times (typical)
RF Voltage Detection Sampling	
Sample delay	150 μ s

Table 3-2. Electrical specifications (Continued)

Description	Specification
Sample rate	36 μ s sampling rate of voltage in voltage control mode 16 μ s sampling rate of power in power control mode
Averaging	Control loop--averaging by integrator, readback--Moving average of 8 samples
External Voltage Control Mode	
General specification	When operating the unit in external voltage regulation mode: <ul style="list-style-type: none"> • Minimum voltage set point in this mode = 0.1 V • Maximum forward power in the voltage control mode = 1800 W
Control loop response time	Typical settling time is between 8 and 10 μ s when operating on 50 Ω load with peak detector from the Low Frequency Fixed Match. Settling time is measured from the start of step disturbance to 90% change of the output voltage.
Sense Voltage In input characteristics	Input specification for this SMA connector: <ul style="list-style-type: none"> • Input voltage 0 V to 10 V • Accuracy of voltage measurement $\pm 0.6\%$ or ± 20 mV • The input impedance for all analog signals is greater than 10 kΩ <p>The input has protection from a disconnected cable using a 70 kΩ pull-up resistor. If the cable is not connected, input voltage is 10.7 V, which causes the generator to pull back output power down to 0 W.</p>
Bias Voltage Out output characteristics	Output specification for this SMA connector: <ul style="list-style-type: none"> • Output voltage range 0 V to -5 V • Accuracy of output voltage $\pm 0.7\%$ or ± 80 mV (accuracy is the difference between the digital signal sent to DAC and the actual output voltage) • The load impedance should be greater than 1 kΩ

COOLING SPECIFICATIONS



CAUTION:

Do not use de-ionized water for cooling purposes. De-ionized water causes both corrosion and erosion of cooling manifolds.

Table 3-3. Cooling specifications

Description	Specification
Coolant Requirements	
Inlet water temperature	+5°C to +35°C (+41°F to +95°F)
Flow rate	7.6 lpm (2 gpm), minimum
Maximum inlet water pressure	6.9 bar (100 psi)
Pressure drop	See pressure drop graph below
Contaminates	<p>AE recommends the following specifications for the water used to cool the PDX II 2000 generator:</p> <ul style="list-style-type: none"> • pH between 7.0 and 9.0 • Total chlorine < 20 ppm • Total nitrate < 10 ppm • Total sulfate < 100 ppm • Total dissolved solids < 250 ppm • Total hardness expressed as calcium carbonate equivalent less than 250 ppm • Specific resistivity of 2500 Ω/cm or higher at 25°C • Total dissolved solids (TDS) as estimated by the following: <ul style="list-style-type: none"> – TDS ≤ 640,000/ specific resistivity (Ω/cm)

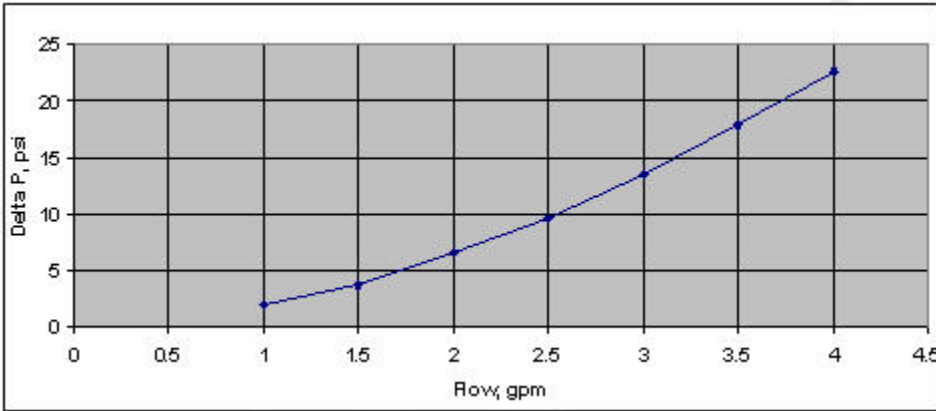


Figure 3-1. Pressure drop

ENVIRONMENTAL SPECIFICATIONS

Table 3-4. Environmental standard specifications

Description	Specification
Overvoltage	Category II
Pollution degree	2

Table 3-5. Climatic specifications (per EN50178)

	Temperature	Relative Humidity	Air Pressure
Operating	5°C to +40°C +41°F to +104°F	5% to 85% ^{note 1} +1 g/m ³ to +25 g/m ³	78.8 kPa to 106 kPa 788 mbar to 1060 mbar Equivalent altitude: 2000 m to -500 m (6562' to -1640')
Storage	-25°C to +55°C -13°F to +131°F	5% to 95% +1 g/m ³ to +29 g/m ³	78.8 kPa to 106 kPa 788 mbar to 1060 mbar Equivalent altitude: 2000 m to -500 m (6562' to -1640')
Transportation	-25°C to +70°C -13°F to +158°F	95% ^{note 2} +60 g/m ³ ^{note 3}	65.6 kPa to 106 kPa 656 mbar to 1060 mbar Equivalent altitude: 3500 m to -500 m (11480' to -1640')
^{note 1} Non-condensing, no formation of ice ^{note 2} Maximum relative humidity when the unit temperature slowly increases, or when the unit temperature directly increases from -25°C to +30°C ^{note 3} Maximum absolute humidity when the unit temperature directly decreases from +70°C to +15°C			

Communication Controls

25-PIN USER PORT

The **User** port on your unit is compatible with an AE Apex[®] generator.

25-Pin User Port Connector

The **User** port uses a 25-pin, shielded, female, subminiature-D connector. Ground/return lines are floating and need to be connected as close to the system as possible.

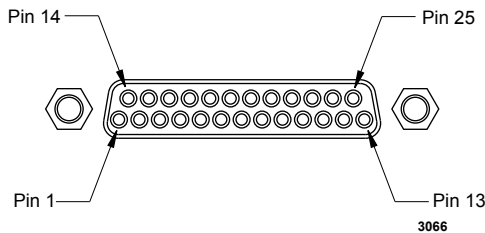


Figure 4-1. *User port connector, 25-pin*

Satisfying Minimal Requirements for the 25-Pin User Port

Regardless of whether you are controlling and monitoring the generator through the **User** port or through another port, two **User** port signals must be satisfied for the unit to be operational: *RF PWR ON* (pin 4) and *INTERLOCK LOOP* (pins 10 and 23). In other words, even if you are controlling the generator through the serial port interface, the RF signal must be enabled on the **User** port, and the interlock satisfied.

 **Important**

If you are controlling your generator through a port other than the **User** port, make sure that the control mode is set appropriately (to host mode to control through the **Host** port, for example). The control mode can be set through an AE Host command.

If you are not using the **User** port to control or monitor the unit, you can use a “dummy” or “cheater” plug to satisfy these signals, thereby ignoring the **User** port. To make a dummy plug, solder these jumpers on a mating connector.

Table 4-1. *Jumpers on a dummy plug to satisfy minimal signal requirements*

Jumper Between Pins	Description
4 and 13	Connects <i>RF PWR ON</i> pin to +15 V pin

Table 4-1. Jumpers on a dummy plug to satisfy minimal signal requirements
(Continued)

Jumper Between Pins	Description
17 and 21	Satisfies <i>RF PWR ON</i> return to ground
10 and 23	Satisfies <i>INTERLOCK LOOP</i> signal

If desired, you can add an emergency off switch in series with the *RF PWR ON* signal (pin 4) and/or tie your system interlocks in series with the generator *INTERLOCK LOOP* signal (pins 10 and 23).

If the minimum requirements are met and then AC power is applied, RF output will not automatically be activated. Choose a control mode, and then, to activate RF output:

- If you are in host control mode, send an RF on command.
- If you are in user control mode, send an RF off signal and then an RF on signal.

User Port Cabling Requirements

The cable used to connect the generator's **User** port to the system controller must be a shielded, 25-wire I/O cable. Twisted-pair wiring may be used but is not mandatory. Signal losses should be minimized by keeping the cable length as short as possible. The maximum recommended cable length between the generator and the controller is 10 meters (33'). To minimize interference from adjacent electrical equipment, the EMI shield in the cable must be terminated to the metal shells of the cable's connectors. Additionally, the chassis of the generator must be tied to a local earth ground through an adequately sized copper grounding strap.

25-Pin User Port Signal and Pin Descriptions

The following tables describe the 25-pin **User** port signals and pin descriptions. Wiring diagrams are also provided.

Table 4-2. User port signal descriptions

Description	Specification
Digital inputs (DI)	Optocouple-insulated Logic high: 4 V to 25 V, typical input current 11 mA Logic low: Less than 1 V

Table 4-2. User port signal descriptions (Continued)

Description	Specification
Digital outputs (DO)	Optocouplers open or close state Open: V maximum = 30 V (IC < 500 μ A) Close: I maximum = 11 mA; Voltage drop is less than: <ul style="list-style-type: none"> • 1.2 V at 0.1 mA • 3.2 V at 5 mA • 5.6 V at 11 mA
Analog inputs (AI)	Voltage range 0 V to 10 V Return wire should be connected to system ground. Accuracy of voltage measurement: $\pm 0.6\%$ or ± 20 mV. The input impedance for all analog input signals is greater than 10 k Ω .
Analog outputs (AO)	Voltage range 0 V to 10 V Return wire should be connected to system ground. Accuracy of voltage measurement: $\pm 0.6\%$ or ± 15 mV. The load impedance for all analog output signals should be greater than 1 k Ω .

Table 4-3. 25-pin User port pin descriptions

Signal Pin	Related Pin	Name	Signal Type	Description
1	14	<i>SET POINT STATUS RETURN</i>	Digital output	See pin 14.
2	15	<i>RFL PWR MONITOR</i>	Analog output	This signal provides a linearly scaled readback of reflected power. <ul style="list-style-type: none"> • 0 V = 0 W • 2.6667 V = 400 W reflected power See Figure 4-2 on page 4-7 for the wiring diagram.

Table 4-3. 25-pin User port pin descriptions (Continued)


Signal Pin	Related Pin	Name	Signal Type	Description
3	16	<i>FWD/LOAD PWR MONITOR</i>	Analog output	<p>This signal provides a linearly scaled readback of forward power when the generator is operated in forward power regulation mode or the load power when operated in load power regulation mode. In voltage control mode, this signal provides readback of forward power.</p> <ul style="list-style-type: none"> • 0 V = 0 W • 10 V = 2000 W <p>See Figure 4-3 on page 4-7 for the wiring diagram.</p>
4	17	<i>RF PWR ON</i>	Digital input	<p>When logic high is applied to this pin, RF output is enabled (if generator is in user control mode). Logic low disables the RF output. Logic low disables the RF output in either user control mode or host control mode.</p> <p> Important The interlocks must be satisfied and the set point must be within the output power range before unit will deliver power.</p> <p>See Figure 4-4 on page 4-8 for the wiring diagram.</p>
5	18	<i>SET POINT</i>	Analog input	<p>This pin linearly controls the RF output of the generator in either forward power mode or load power mode.</p> <ul style="list-style-type: none"> • 0 V to 10 V = 0 W to maximum rated power output. <p>This input also provides set point in the voltage control mode.</p> <ul style="list-style-type: none"> • 0 V to 10 V = 0 V to 2000 V peak to peak <p>See Figure 4-5 on page 4-8 for the wiring diagram.</p>

Table 4-3. 25-pin User port pin descriptions (Continued)

Signal Pin	Related Pin	Name	Signal Type	Description
6	19	<i>DC BIAS/POWER REGULATION</i>	Digital input	<p>This pin switches the regulation mode of the generator.</p> <p>When logic low is applied to this pin, or if there is no connection to this pin, the generator regulates output power (either forward or load, as defined by the signal on pin 8).</p> <p>When logic high is applied to this pin, the generator regulates in the voltage control mode.</p> <p>See Figure 4-6 on page 4-8 for the wiring diagram.</p>
7				Not connected.
8	21	<i>FWD/LOAD PWR REGULATION</i>	Digital input	<p>Applying logic high to this pin causes the generator to regulate on load power. Logic low or no connection to this pin causes the generator to default to forward power regulation.</p> <p>In voltage control mode, this pin is ignored.</p> <p>See Figure 4-7 on page 4-9 for the wiring diagram.</p>
9	22	<i>OVERTEMP RETURN</i>	Digital output	See pin 22.
10	23	<i>INTERLOCK LOOP</i>		<p>This pin should connect to pin 23 to complete the interlock chain. If the interlock chain is broken, the unit will not operate. External circuit should be capable of switching 50 mA at 24 VAC.</p> <p>Maximum allowed resistance of the interlock chain is 75 Ω.</p> <p>See Figure 4-8 on page 4-9 for the wiring diagram.</p>
11	24	<i>DC BUS OK RETURN</i>	Digital output	See pin 24.
12				Not connected.

Table 4-3. 25-pin User port pin descriptions (Continued)

Signal Pin	Related Pin	Name	Signal Type	Description
13	21	+15 VDC	Analog output	This pin provides a +15 VDC \pm 1 V auxiliary supply for external use (100 mA maximum). Short-circuit protected. See Figure 4-9 on page 4-10 for the wiring diagram.
14	1	SET POINT STATUS	Digital output	When the generator is out of set point by more than 1% and 3 W, a low (opto-coupler output) impedance is created between this pin and pin 1. See Figure 4-10 on page 4-10 for the wiring diagram.
15	2	RFL POWER MONITOR RETURN	Analog output	Signal return for pin 2.
16	3	FWD/LOAD PWR MONITOR RETURN	Analog output	Signal return for pin 3.
17	4	RF PWR ON RETURN	Digital input	Signal return for pin 4.
18	5	SET POINT RETURN	Analog input	Signal return for pin 5.
19		GROUND		Signal/chassis ground.
20				Not connected.
21		GROUND		Signal/chassis ground. Maximum current 300 mA.
22	9	OVERTEMP	Digital output	When an internal overtemperature shutdown condition is detected, a low (opto-coupler output) impedance is created between this pin and pin 9. See Figure 4-11 on page 4-10 for the wiring diagram.
23	10	INTERLOCK LOOP RETURN		See pin 10.
24	11	DC BUS OK	Digital output	When the interlocks are satisfied and the AC input voltage is within its specifications, a low (opto-coupler output) impedance is created between this pin and pin 11. See Figure 4-12 on page 4-11 for the wiring diagram.

Table 4-3. 25-pin User port pin descriptions (Continued)

Signal Pin	Related Pin	Name	Signal Type	Description
25				Not connected.

WIRING DIAGRAMS FOR THE 25-PIN USER PORT

The diagrams in this section provide wiring information to connect to the 25-pin User port.

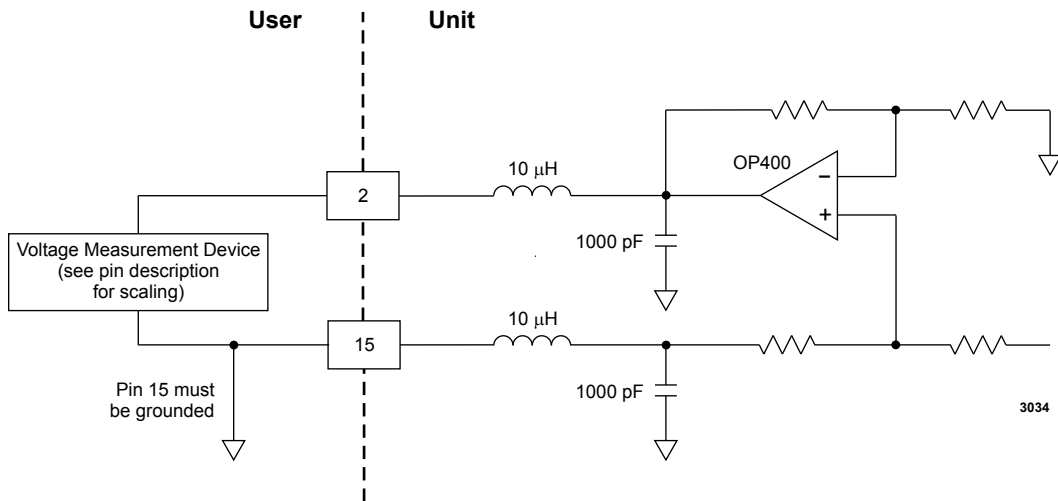


Figure 4-2. REFL PWR MONITOR (pins 2 and 15)

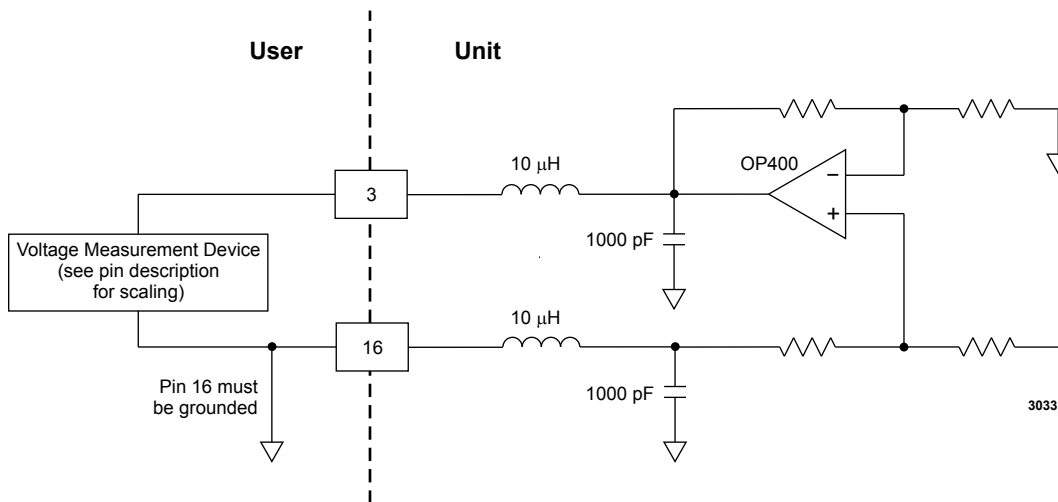


Figure 4-3. FWD/LOAD PWR MONITOR (pins 3 and 16)

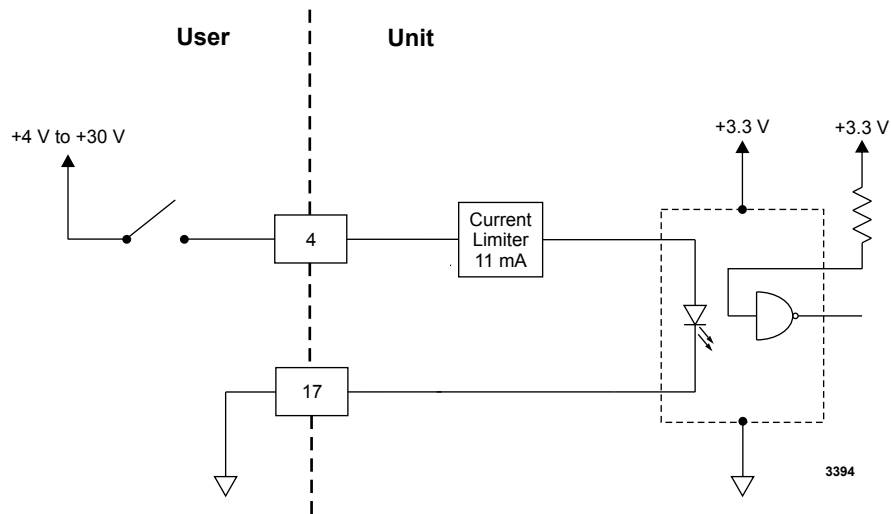


Figure 4-4. RF PWR ON (pins 4 and 17)

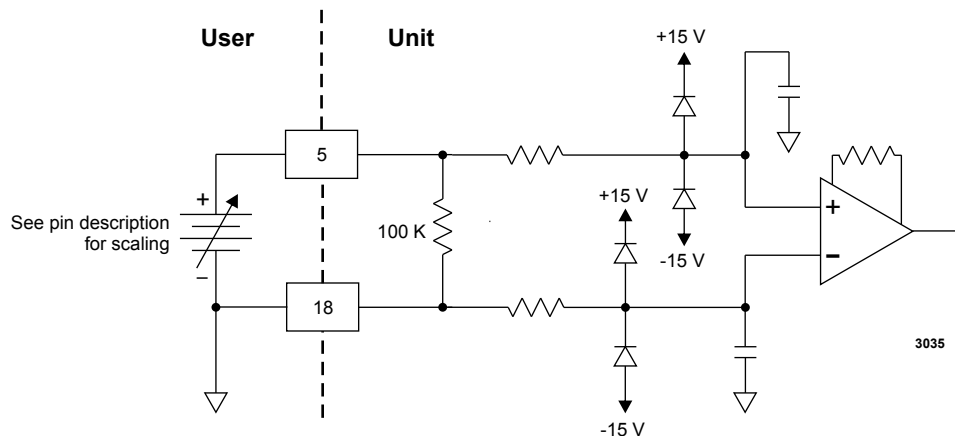


Figure 4-5. SET POINT (pins 5 and 18)

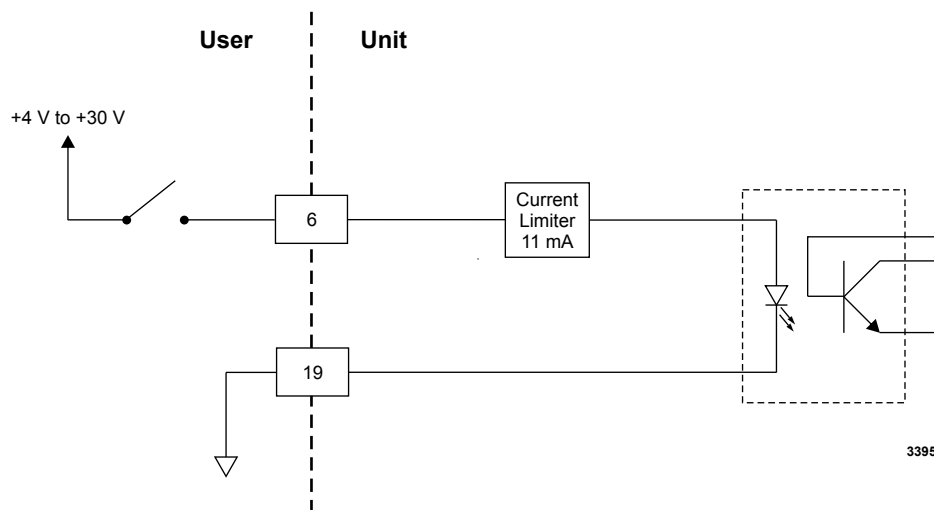


Figure 4-6. DC BIAS/POWER REGULATION (pins 6 and 19)

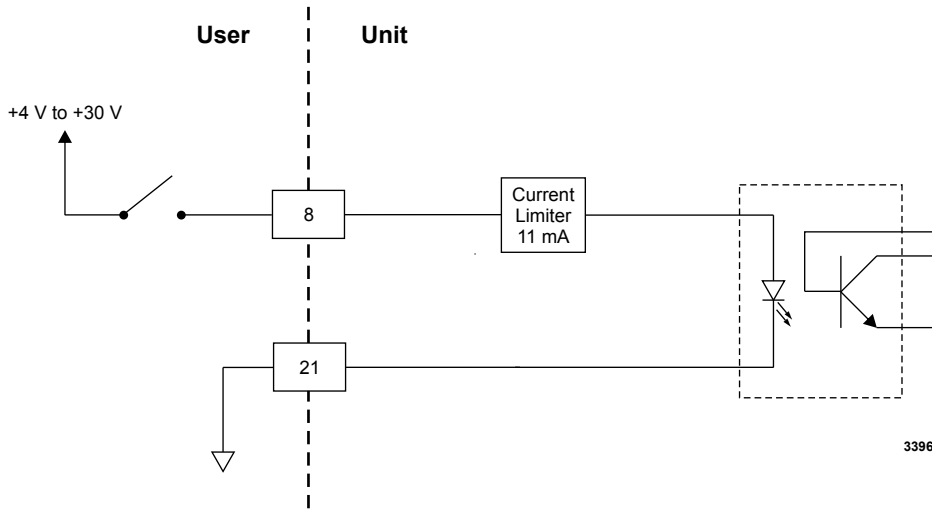


Figure 4-7. FWD/LOAD PWR REGULATION (pins 8 and 21)

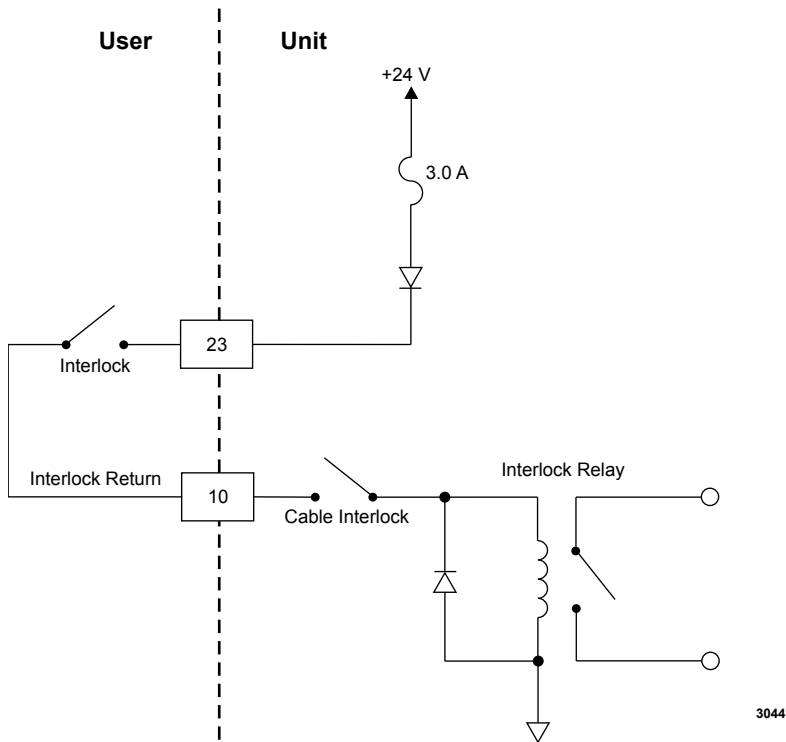


Figure 4-8. INTERLOCK LOOP (pins 23 and 10)

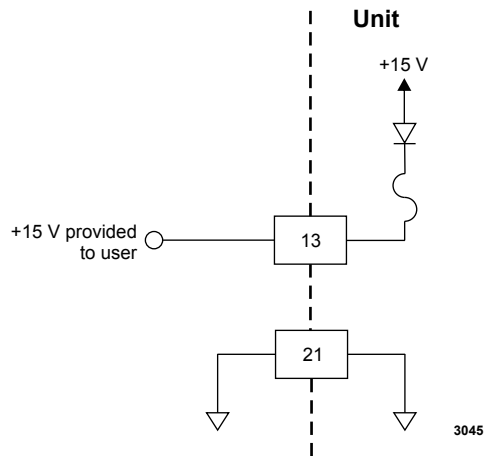


Figure 4-9. +15 VDC (pins 13 and 21)

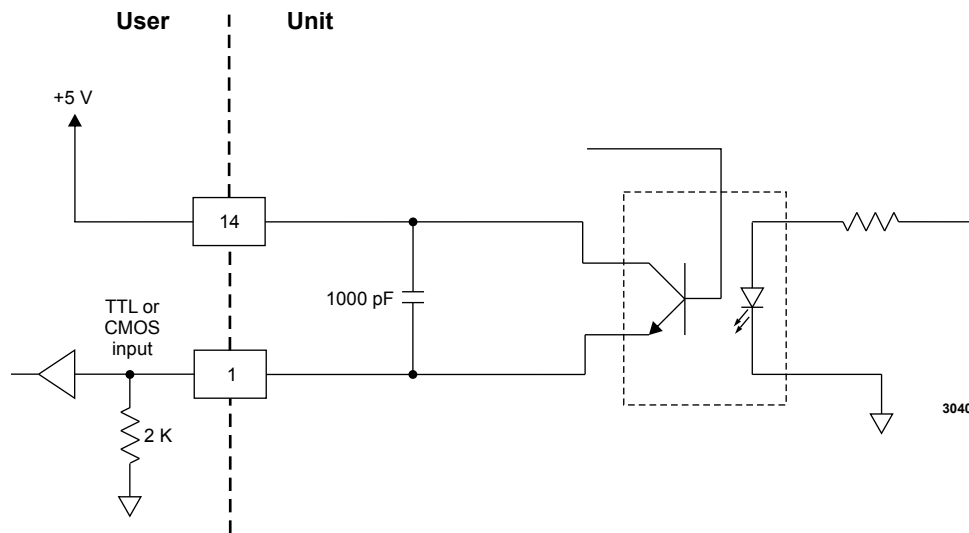


Figure 4-10. SET POINT STATUS (pins 14 and 1)

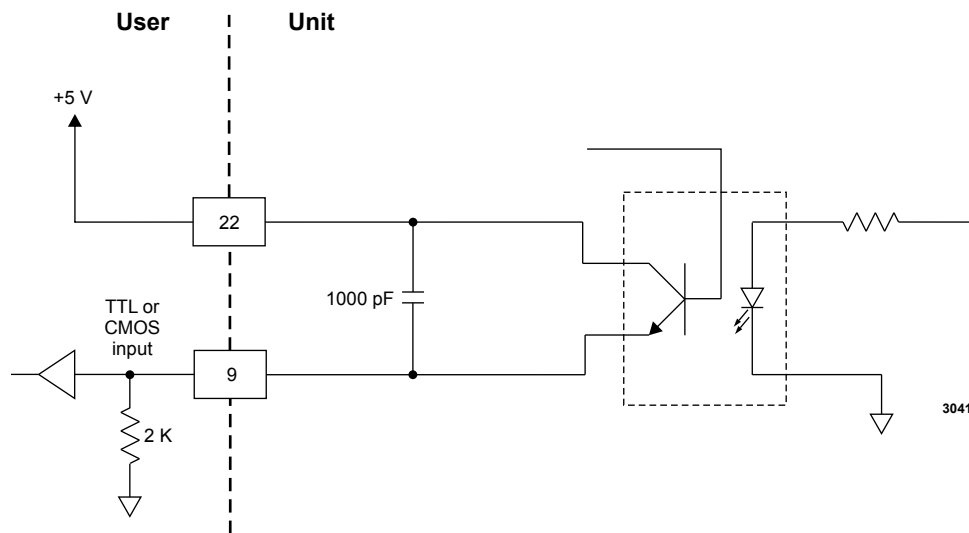


Figure 4-11. OVERTEMP (pins 22 and 9)

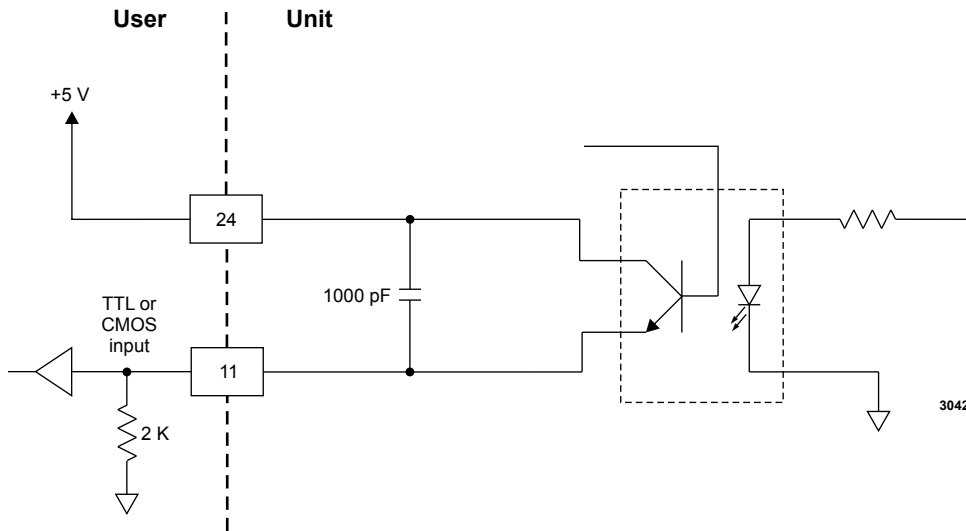


Figure 4-12. DC BUS OK (pins 24 and 11)

HOST INTERFACE

The PDX II 2000 generator provides a serial communications interface through the **Host** port. This interface allows the PDX II 2000 generator to interface with a host computer using the AE Bus protocol.

To obtain a basic sample of host software for the **Host** port, please call AE Global Services.

AE manufactures a more full-function interface software for some products, called Virtual Front Panel, which allows you to use a host computer to communicate with the unit through the **Host** port. To find out more about this software, please call AE Global Services.

Host Connector

The serial **Host** port connector is a 9-pin, female, shielded, subminiature-D connector for interfacing with a host computer.

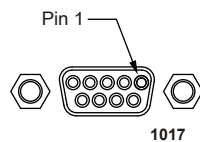


Figure 4-13. Host port connector

Host Port Pin Descriptions

Table 4-4. Host port pin descriptions

Signal Pin	Name	Description
1	RESERVED	Reserved for future use
2	tx RS232	RS-232 transmit data
3	rx RS232	RS-232 receive data
4	RESERVED	Reserved for future use
5	Digital Ground	This pin connects to the digital ground of the controller
6	RS485 -	RS-485 LOW
7	RS485 +	RS-485 HIGH
8	RESERVED	Reserved for future use
9*	RESERVED (FACTORY)	Reserved for future use
* Do not connect pins marked <i>RESERVED</i> . Do not ground this factory reserved pin. Grounding this pin disrupts the operation of the unit.		

AE Bus Transmission Parameters

The communications capability of the **Host** port is limited to the following parameters:

- RS-232 or RS-485 transmission standard
- Baud rates:
 - 9600, 19,200, 57,600, 115,200
- PDX II 2000 generator unit addresses 1 to 31
- Odd parity
- One start bit, eight data bits, one stop bit
- Low-order bytes transmitted before high-order bytes (little endian)

The time-out period for the PDX II 2000 generator is factory set at 0.75 seconds (that is, no more than 0.75 seconds can elapse between bytes, or the unit will reset and begin searching for a new message packet). Use command **40** to change this value.

The host computer must finish one transaction with the PDX II 2000 generator before it initiates another one, either with the same unit or any other unit.

The PDX II 2000 generator sends data through pin 2 (*TX RS232*). This pin must be connected to the receive pin (*RX RS232*) on the host computer's serial connector. The

receive pin is normally pin 2 for a standard, 9-pin serial port and normally pin 3 for a standard, 25-pin serial port.

If you are using RS-485, the PDX II 2000 generator sends and receives data differentially. Thus, pin 6 (*RS-485-*) and pin 7 (*RS-485+*) are RS-485 transmit and receiver lines.

Host Port Dip Switches

DIP SWITCH AND SWITCH SETTINGS

Use the DIP switch to set the unit AE Bus address, the baud rate, and the communication mode for your unit.

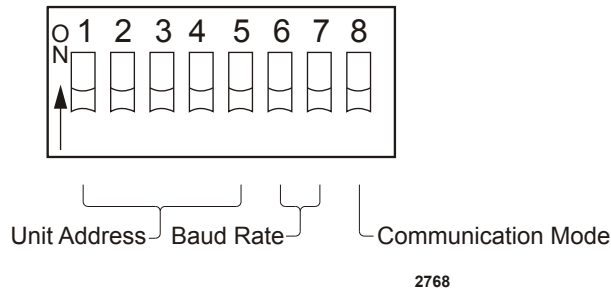


Figure 4-14. Slide DIP switch

The DIP switch contains eight individual switches. Setting a switch to the “on” position means sliding the switch toward the numbers on the DIP, and setting a switch to the “off” position means sliding it away from the numbers.

SWITCHES

The first five switches (1 to 5) specify the address of the unit, which a host computer must include in the message packet it sends.

The next two switches (6 and 7) specify the AE Bus port’s baud rate. Switch 8 sets communication mode, either RS-232 or RS-485.

SETTING THE BAUD RATE

Use DIP switches 6 and 7 to set the serial AE Bus port’s baud rate. Use switch 8 to select communication mode, either RS-232 or RS-485.

Table 4-5. DIP switch settings for variable baud rate, switches 6 and 7

Baud	Switch 6	Switch 7
9600	on	on

Table 4-5. DIP switch settings for variable baud rate, switches 6 and 7 (Continued)

Baud	Switch 6	Switch 7
19,200	on	off
57,600	off	on
115,200	off	off

SETTING THE COMMUNICATION MODE

Table 4-6. DIP switch settings for communication mode, switch 8

Switch Position	Communication Mode
On	RS-232
Off	RS-485

DEFAULT DIP SWITCH SETTINGS

The default Host settings for the unit are AE Bus address 1, baud rate 19200, and RS-232 communication mode.

Table 4-7. Default dip switch settings

Switch number	1	2	3	4	5	6	7	8
Default position	on	on	on	on	off	on	off	on

SETTING THE UNIT AE BUS ADDRESS

Use the DIP switch to set the unit's AE Bus address.

Table 4-8. AE Bus address settings

Address	Switch 1	Switch 2	Switch 3	Switch 4	Switch 5
0	Don't assign this address to a unit; it is the AE Bus broadcast address—all AE Bus units receive a message sent to this address by the host, but will not reply. If you set the address to 0, the unit automatically re-assigns the address to 1				
1	on	on	on	on	off
2	on	on	on	off	on
3	on	on	on	off	off

Table 4-8. AE Bus address settings (Continued)

Address	Switch 1	Switch 2	Switch 3	Switch 4	Switch 5
4	on	on	off	on	on
5	on	on	off	on	off
6	on	on	off	off	on
7	on	on	off	off	off
8	on	off	on	on	on
9	on	off	on	on	off
10	on	off	on	off	on
11	on	off	on	off	off
12	on	off	off	on	on
13	on	off	off	on	off
14	on	off	off	off	on
15	on	off	off	off	off
16	off	on	on	on	on
17	off	on	on	on	off
18	off	on	on	off	on
19	off	on	on	off	off
20	off	on	off	on	on
21	off	on	off	on	off
22	off	on	off	off	on
23	off	on	off	off	off
24	off	off	on	on	on
25	off	off	on	on	off
26	off	off	on	off	on
27	off	off	on	off	off
28	off	off	off	on	on
29	off	off	off	on	off
30	off	off	off	off	on
31	off	off	off	off	off


AE Bus Protocol

The AE Bus protocol uses pure binary data (nothing is coded in ASCII) and is designed to facilitate direct communications between a host computer and the PDX II 2000 generator. The AE Bus message packet combines a set quantity of bits and bytes in such

a way that groups of information can be sent over communications lines at one time. Five types of information (fields) make up a communications message packet.

- Header (address and the length of Data field)
- Command Number
- Optional Length byte
- Data
- Checksum

Figure 4-15 shows the organization of these fields in the AE Bus message packet. The subsequent paragraphs describe each field in detail.

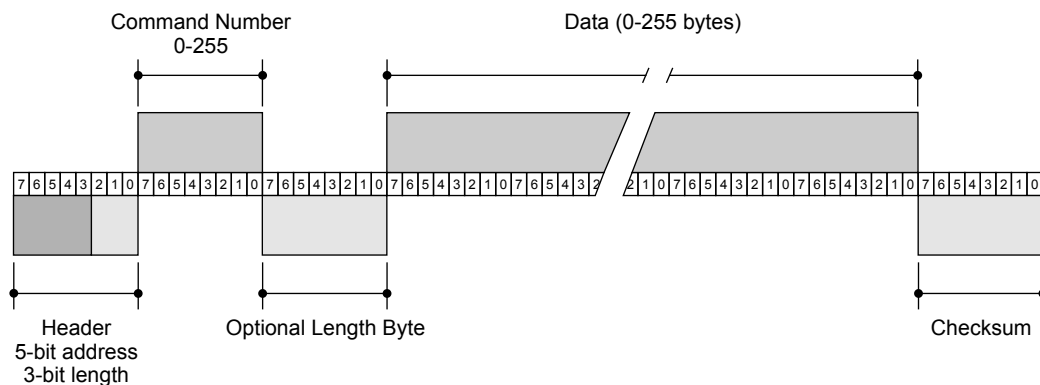

1138

Figure 4-15. Graphic representation of a message packet

AE BUS HEADER BYTE

The first byte in each packet contains two pieces of information: five bits contain the packet address, and three bits contain the data byte count. If the message packet originates with the host computer, the address specifies the packet destination (to the PDX II 2000 generator, for example). If the packet is going to the host, the address specifies the packet origin (from the PDX II 2000 generator). The address section of the Header field is five bits long (bits 3-7), which allows a total of 32 distinct addresses. Address 0 (zero) is reserved for the network broadcast address, which the PDX II 2000 generator does not support.

The remaining three bits (bits 0, 1, and 2) are the length bits. These bits tell the receiving unit how long the Data field is so that the unit can determine when it has received the entire message. If the Data field contains more than six bytes, the value of these three bits will be set to 7 (07h), and the Optional length byte field will contain a value indicating the number of data bytes in the Data field.

Note: The value of these bits refers only to the number of actual data bytes in the Data field. Do not include the checksum byte when calculating the value for these bits.

AE BUS COMMAND NUMBER BYTE

This one-byte field contains an 8-bit value from 0 to 255 (00h to ffh) representing the command number. If the message packet originates with the host computer, this value specifies the purpose of the message packet. If the message originates with the PDX II 2000 generator, the value specifies the command to which it is responding.

AE BUS OPTIONAL LENGTH BYTE

This field supplements the Header field and exists only when the length bits (bits 0, 1, and 2) in the Header field contain a value of 7 (07h). If the number of data bytes in the Data field is six or less, then the three length bits in the Header field are sufficient to represent this amount 0 to 6 (00h to 06h). Since the Data field may contain up to 255 bytes of information, the Optional Length byte is required when the Data field is larger than six bytes.

When the Data field is larger than six bytes, the length bits in the header (bits 0, 1, and 2) equals 7 (07h), and the Optional Length byte contains a one-byte value, from 7 to 255 (07h to ffh), representing the number of data bytes in the Data field.

AE BUS DATA BYTES

The Data field may contain from 0 to 255 bytes of binary data. This field contains command-related data or a command status response (CSR). Since some commands do not require data, sometimes the Data field is not present.

If the value specified in the length bits (bits 0, 1, and 2) of the Header field is 0 to 6, the PDX II 2000 generator expects zero to six data bytes. However, if the value in the Header field is 7 (07h), the PDX II 2000 generator looks for the Optional Length byte after the Command field and reads this value to calculate the data byte count.

Unless otherwise specified for individual commands, AE Bus protocol is little endian, which means that all values greater than 1 byte are sent in little endian order. For example, a command with 7 data bytes that included one 8-bit value, one 16-bit value, and one 32-bit value, would be sent as shown in [Table 4-9](#).

Table 4-9. AE Bus byte structure

Value to send	Byte configuration
8-bit value = 15	Byte 1 = 0x0F
16-bit value = 23450	Bytes 2 and 3 = 0x9A 0x5B
32-bit value = 147679	Bytes 4 through 7 = 0xDF 0x40 0x02 0x00

AE BUS CHECKSUM BYTE


This one-byte field is the last byte in the packet. The value of this byte depends upon the number of bytes in each of the preceding fields. The transmitting unit determines

this value by accumulating the exclusive-or (XOR) of all bytes of the packet up to, but not including, the checksum value. The receiving unit accumulates the XOR of all bytes of the packet, including the checksum. If the result is zero, the unit has received the packet intact.

The unit will act on the message only if the address is valid and the checksum is validated.

Creating an Ideal Communications Transaction

Figure 4-16 illustrates the steps in an ideal communications transaction between a host computer and the PDX II 2000 generator.

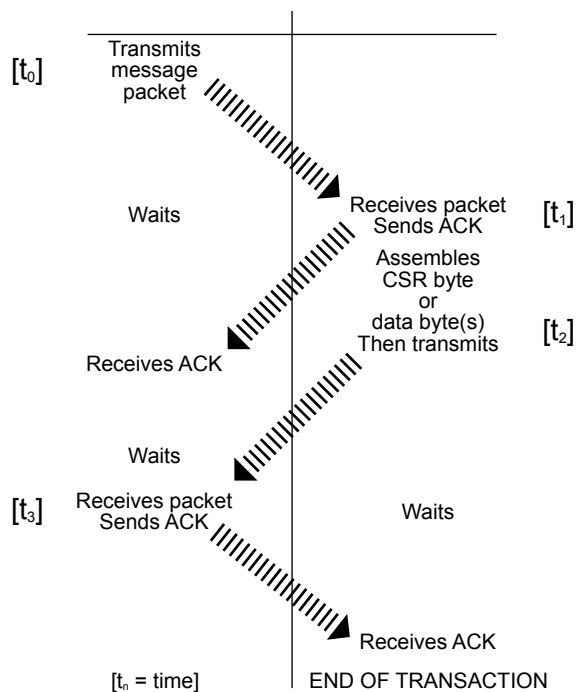

1139

Figure 4-16. AE Bus communications transaction

T₀: HOST TRANSMITS MESSAGE PACKET

The host computer sends a message packet to the PDX II 2000 generator. The packet contains one of the following:

- A command that requests data or status information
- A command and data that change a parameter setting
- An executable command

T₁: UNIT VERIFIES HOST TRANSMISSION PACKET

Once the PDX II 2000 generator receives the host computer transmission message packet, the PDX II 2000 generator verifies that the message is intended for it and not for another unit on the network. At this time, the PDX II 2000 generator also analyzes the checksum to verify that the message was received correctly.

- If the address does not match, the PDX II 2000 generator does not respond to the host computer; the PDX II 2000 generator resets and resumes waiting for a message addressed to it. If the address matches but the exclusive-or (XOR) sum of the bytes in the packet (including the checksum) is not zero, the PDX II 2000 generator sends a negative acknowledgment (NAK), hexadecimal 15h, to the host computer.
- If the address matches and the message is intact, the PDX II 2000 generator sends an acknowledgment (ACK), hexadecimal 06h, to the host computer.

If the PDX II 2000 generator receives a request for data or status information, it gathers and sends the requested information. Otherwise, it evaluates the incoming command and sends a message packet that contains a one-byte data value (CSR code) to the host. The power supply sends CSR code 0 when it has accepted the command.

If the host computer receives a NAK from the PDX II 2000 generator, the host computer either retransmits the packet or does whatever else it has been programmed to do in this situation. If the host computer receives an ACK, it waits for the requested data or status information, or it waits for the CSR code telling it whether or not the new parameter was accepted. If the host computer receives no response within a reasonable period, it takes whatever action it has been programmed to take.

T₂: UNIT TRANSMITS RESPONSE TO HOST

The PDX II 2000 generator prepares a response packet with the requested information or appropriate CSR code, which it then transmits to the host computer. The host computer then determines, by means of the checksum, if the response packet is complete. If the host computer detects an error in the transmission (the checksum is not validated), it can request the packet be sent again by transmitting a NAK.

T₃: HOST ACKNOWLEDGES UNIT RESPONSE

If the PDX II 2000 generator receives an ACK from the host computer, it returns to the normal waiting state. If the PDX II 2000 generator receives a NAK from the host computer, the PDX II 2000 generator retransmits the response packet. The PDX II 2000 generator continues to retransmit in response to NAK transmissions until the host computer stops the cycle. If the PDX II 2000 generator receives no response, it assumes an ACK and returns to the waiting state.

AE BUS COMMUNICATIONS TRANSACTION EXAMPLE

Figure 4-17 illustrates the steps in an example communications transaction between a host computer and a PDX II 2000 generator.

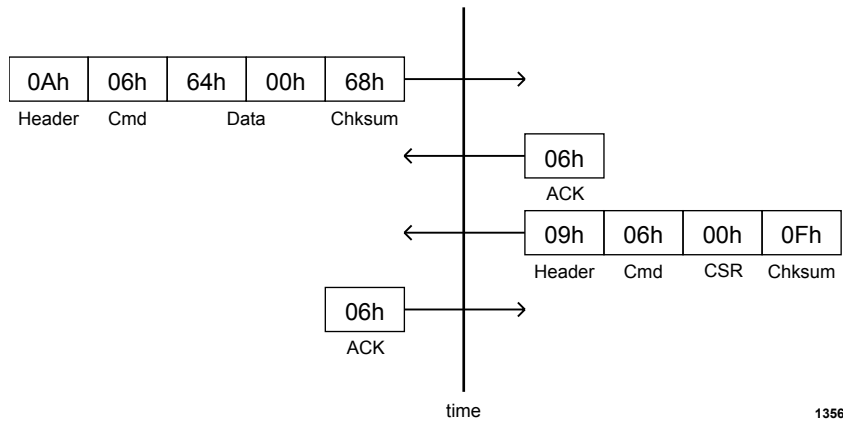


Figure 4-17. Communications transaction example

1356

AE HOST COMMANDS

The following sections describe the command status response (CSR) codes returned by the PDX II 2000 generator in response to a command, as well as the AE Host commands for the PDX II 2000 generator.

AE Host Command Status Response (CSR) Codes

When the PDX II 2000 generator receives a command requesting a change in unit operation (command numbers 1 through 127), or when the PDX II 2000 generator receives any command that it rejects (command numbers 1 through 255), it responds with a command status response (CSR) code. The CSR is a single-byte number that indicates whether the unit accepted or rejected the command and, in the case of rejection, the reason the unit could not respond to the command.

Table 4-10. AE Host command status response (CSR) codes

Code	Meaning
0	Command accepted
The following CSR codes are sent in response to a command that was not accepted and provide an indication of why the command was not accepted	
1	Control code is incorrect
2	Output is on (change not allowed)
4	Command specifies a value that exceeds the limit for that parameter
5	User port off signal is active.
7	One or more faults are active.
8	Set point ramping is active.

Table 4-10. AE Host command status response (CSR) codes (Continued)

Code	Meaning
9	Command's data byte count is incorrect.
12	Feature is not available on this unit.
17	Minimum off time is active.
28	Set point exceeds user limit.
30	EEPROM read/write error.
41	One or more warnings are active.
42	DHCP is active.
50	Frequency is out of range.
51	Duty cycle is out of range.
52	Minimum on or off time is violated.
61	Real time clock was busy.
63	Flash mode is active.
99	Command not accepted (there is no such command).

AE Host Port Command Set

- Commands **1** through **127** request a change to the PDX II 2000 generator, such as changing a setting in the unit. The unit responds to these commands by sending a command status response (CSR). This single-byte response indicates whether the unit has accepted or rejected the command and, in the case of rejection, the reason the unit could not respond to the command.
- Command numbers **128** through **255** request information from the unit, such as unit settings. The unit responds to these commands by sending the data requested if the command was successful, and a CSR if the command was not successful.

Unless otherwise specified for individual commands, AE Bus protocol is little endian, which means that all values greater than 1 byte are sent least significant byte first.

Table 4-11. AE Host commands

Command	Description	Data Bytes Sent	Data Bytes Returned
1 RF Off	Turns RF output off. Accepted regardless of control mode. This command explicitly clears all latched faults, but it does not clear any faults that are currently active. Command 162 reports this value.	0	1

Table 4-11. AE Host commands (Continued)


Command	Description	Data Bytes Sent	Data Bytes Returned
2 RF On	Turns RF output on if there are no active or latched faults or warnings. Accepted only when host control mode is active. Command 162 reports this value.	0	1
3 set regulation mode	Sets the regulation mode. If output is off, you can select any mode. If output is on and you are in 6 or 7, you can toggle between 6 and 7, but you cannot choose any other mode. In any other mode with output on, you cannot change the mode. Send 1 data byte (8-bit value): <ul style="list-style-type: none"> • 6 = Forward • 7 = Delivered or load • 8 = External (DC bias) Command 154 reports this value.	1	1
4 set user power limit	Sets the user power limit. You cannot change the power limit while the unit is on. Valid values are from the low power limit to the unit maximum power. <ul style="list-style-type: none"> • Low power limit = 5 W • Unit maximum power = 2000 W  Important The user power limit is directly related to the active regulation mode. For example, when in load regulation mode, the user power limit will limit delivered power. Send 2 data bytes (16-bit value) = Power limit in watts Command 169 reports this value.	2	1

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
5 set user reflected power limit	<p>Sets the user reflected power limit in watts. The user reflected power limit affects all regulation modes. The unit retains the user reflected power limit as long as power is applied. If power is cycled, the reflected power limit returns to the default value, 20% of maximum power, 400 W.</p> <p>You cannot change the user reflected power limit while the output is on. Valid values are from 100 W minimum to 20% of the unit maximum power.</p> <p>Send 2 data bytes (16-bit value) = Reflected power limit in watts</p> <p>Command 170 reports this value.</p>	2	1
6 set user external feedback limit	<p>Sets the user external feedback limit in volts. The user external feedback limit affects only the external DC bias regulation mode. The unit retains the user external feedback limit as long as power is applied. If power is cycled, the external feedback limit returns to the default value, 2000 V.</p> <p>You cannot change the user external feedback limit while the output is on. Valid values are from 1% of the maximum external feedback value minimum up to the maximum external feedback value (set with command 9).</p> <p>Send 2 data bytes (16-bit value) = External feedback limit in volts</p> <p>Command 171 reports this value.</p>	2	1
7 restore factory defaults	<p>Restores all nonvolatile RAM values to the factory preset values.</p> <p>Send 2 data bytes (16-bit value):</p> <ul style="list-style-type: none"> • 0 = Restore all default values 	2	1

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
<p align="center">8</p> <p>set power set point</p>	<p>Sets a power set point in watts. Sets a set point in volts when operating in external (DC bias) regulation mode. Set point cannot be greater than the unit's maximum output power or the user power limit.</p> <ul style="list-style-type: none"> • Unit maximum output power = 2000 W • User power limit = Set with command 4 <p>Set point cannot be greater than the maximum external feedback value when in external regulation mode. Accepted only when host control mode is active.</p> <p>Send 2 data bytes (16-bit value) = Power set point in watts</p> <p>Command 164 reports this value.</p>	2	1
<p align="center">9</p> <p>set maximum external feedback value (NV)</p>	<p>Sets the maximum external feedback value in volts. This setting only affects the unit in the external (DC bias) regulation mode. The unit stores the maximum external feedback value in nonvolatile memory. You cannot change the maximum external feedback value while the output is on.</p> <p>Valid values are from 10 V to 65535 V. If the new maximum external feedback value is less than the user external feedback limit, the unit reduces the user external feedback limit to equal to the new maximum external feedback value.</p> <p>Send 3 data bytes:</p> <ul style="list-style-type: none"> • Bytes 0 and 1 = Maximum external feedback value in volts • Byte 2 = Dummy byte for RFX II compatibility (can contain any value) 	3	1

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned																												
<p>14 set active control mode</p>	<p>Sets the control mode. This mode cannot be changed while the output is on. Send 1 data byte (8-bit value):</p> <ul style="list-style-type: none"> • 2 = Host • 4 = User port (analog) • 8 = Diagnostic <p>Command 155 reports this value.</p>	<p>1</p>	<p>1</p>																												
<p>26 set pulsing configuration</p>	<p>Set pulsing configuration. Set unit as master or slave, turn pulse sync input on or off, set memory mode, set explicit enable mode, and enable or disable pulsing mode.</p> <p>This command allows you to send subcommands. Send a value in the first two bytes that selects the parameter to set, and then send subcommands to set parameter values.</p> <table border="1" data-bbox="500 1035 1086 1465"> <thead> <tr> <th>Byte 0 =</th> <th>Subcommand</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Set pulsing mode</td> </tr> <tr> <td>2</td> <td>Set pulse sync output</td> </tr> <tr> <td>3</td> <td>Reserved</td> </tr> <tr> <td>4</td> <td>Reserved</td> </tr> <tr> <td>5</td> <td>Set memory mode</td> </tr> <tr> <td>6</td> <td>Set explicit enable mode</td> </tr> <tr> <td>7</td> <td>Pulsing on/off</td> </tr> <tr> <td>8</td> <td>Enable or disable pulsing mode</td> </tr> </tbody> </table> <p>The following table shows the factory set/default values for pulsing parameters.</p> <table border="1" data-bbox="500 1560 1086 1871"> <thead> <tr> <th>Parameter</th> <th>Factory Set/ Default Value</th> </tr> </thead> <tbody> <tr> <td>Pulsing mode</td> <td>Master mode</td> </tr> <tr> <td>Enable pulse sync output</td> <td>Pulse sync output enabled</td> </tr> <tr> <td>Slave input delay</td> <td>0</td> </tr> <tr> <td>Memory mode</td> <td>RAM</td> </tr> </tbody> </table> <p>(Continued on next page)</p>	Byte 0 =	Subcommand	1	Set pulsing mode	2	Set pulse sync output	3	Reserved	4	Reserved	5	Set memory mode	6	Set explicit enable mode	7	Pulsing on/off	8	Enable or disable pulsing mode	Parameter	Factory Set/ Default Value	Pulsing mode	Master mode	Enable pulse sync output	Pulse sync output enabled	Slave input delay	0	Memory mode	RAM	<p>6</p>	<p>1</p>
Byte 0 =	Subcommand																														
1	Set pulsing mode																														
2	Set pulse sync output																														
3	Reserved																														
4	Reserved																														
5	Set memory mode																														
6	Set explicit enable mode																														
7	Pulsing on/off																														
8	Enable or disable pulsing mode																														
Parameter	Factory Set/ Default Value																														
Pulsing mode	Master mode																														
Enable pulse sync output	Pulse sync output enabled																														
Slave input delay	0																														
Memory mode	RAM																														

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned								
	<table border="1"> <thead> <tr> <th data-bbox="407 401 699 485">Parameter</th> <th data-bbox="699 401 992 485">Factory Set/ Default Value</th> </tr> </thead> <tbody> <tr> <td data-bbox="407 485 699 537">Explicit enable mode</td> <td data-bbox="699 485 992 537">Implicit enable</td> </tr> <tr> <td data-bbox="407 537 699 590">Pulsing on/off</td> <td data-bbox="699 537 992 590">Pulsing off</td> </tr> <tr> <td data-bbox="407 590 699 663">Enable or disable pulsing mode</td> <td data-bbox="699 590 992 663">Disabled</td> </tr> </tbody> </table>	Parameter	Factory Set/ Default Value	Explicit enable mode	Implicit enable	Pulsing on/off	Pulsing off	Enable or disable pulsing mode	Disabled		
Parameter	Factory Set/ Default Value										
Explicit enable mode	Implicit enable										
Pulsing on/off	Pulsing off										
Enable or disable pulsing mode	Disabled										
<p>26 set pulsing mode (subcommand 1)</p>	<p>Sets the unit pulsing mode to master or slave. You can not use this command while RF output is on. Send 6 data bytes.</p> <ul style="list-style-type: none"> • Bytes 0 and 1 = 1 (set pulsing mode) • Bytes 2 and 3 = Pulsing mode <ul style="list-style-type: none"> – 1 = Master mode – 2 = Slave mode • Bytes 4 and 5 = Reserved <p>Command 172 B0 = 1 reports these values.</p>	6	1								
<p>26 enable pulse sync output (subcommand 2)</p>	<p>Enables or disables pulse sync output. Send 6 data bytes.</p> <ul style="list-style-type: none"> • Bytes 0 and 1 = 1 (enable/disable pulse sync output) • Bytes 2 and 3 = Pulse sync output on or off <ul style="list-style-type: none"> – 1 = Pulse sync output off – 2 = Pulse sync output on • Bytes 4 and 5 = Reserved <p>Command 172 B0 = 2 reports these values.</p>	6	1								

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
<p>26 set memory mode (subcommand 5)</p>	<p>Sets the unit memory mode to RAM or NVRAM. The unit saves parameters to the currently active memory as specified by this value. Send 6 data bytes.</p> <ul style="list-style-type: none"> • Bytes 0 and 1 = 1 (set memory mode) • Bytes 2 and 3 = Memory mode <ul style="list-style-type: none"> – 1 = RAM – 2 = NVRAM • Bytes 4 and 5 = Reserved <p>Command 172 B0 = 5 reports these values.</p>	6	1
<p>26 set explicit enable mode (subcommand 6)</p>	<p>Sets explicit enable mode. When in explicit enable mode, you can use command 26, subcommand 7 to turn pulsing on or off while output is on. Send 6 data bytes.</p> <ul style="list-style-type: none"> • Bytes 0 and 1 = 1 (set explicit enable mode) • Bytes 2 and 3 = Explicit enable mode <ul style="list-style-type: none"> – 1 = Implicit enable – 2 = Explicit enable • Bytes 4 and 5 = Reserved <p>Command 172 B0 = 6 reports these values.</p>	6	1
<p>26 pulsing on/off (subcommand 7)</p>	<p>Turns pulsing on or off while output is on. You can only use this command while operating in explicit enable mode (see command 26, subcommand 6). Send 6 data bytes.</p> <ul style="list-style-type: none"> • Bytes 0 and 1 = 1 (pulsing on/off) • Bytes 2 and 3 = Pulsing on/off <ul style="list-style-type: none"> – 1 = Pulsing off – 2 = Pulsing on • Bytes 4 and 5 = Reserved <p>Command 172 B0 = 7 reports these values.</p>	6	1

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
<p>26 enable/disable pulsing mode (subcommand 8)</p>	<p>Enables or disables pulsing mode. You can not use this command while RF output is turned on</p> <p>Send 6 data bytes.</p> <ul style="list-style-type: none"> • Bytes 0 and 1 = 1 (enable/disable pulsing)) • Bytes 2 and 3 = Pulsing enable/disable <ul style="list-style-type: none"> – 1 = Pulsing disabled – 2 = Pulsing enabled • Bytes 4 and 5 = Reserved <p>Command 172 B0 = 8 reports these values.</p>	6	1
<p>31 set set point ramping parameters</p>	<p>Sets the set point ramping mode and ramp parameters. The ramp up and down parameters can be set independently.</p> <p>Send 6 data bytes (three 16-bit values):</p> <ul style="list-style-type: none"> • Bytes 0 and 1 = Ramp mode <ul style="list-style-type: none"> – 0 = Disabled – 1 = Watts/second (W/s) – 2 = Timed (in ms) • Bytes 2 and 3 (16-bit value) = Ramp up (in W/s or time in ms) • Bytes 4 and 5 (16-bit value) = Ramp down (in W/s or time in ms) <p>In W/s mode, the ramp parameters represent the ramp rate in watts per second. The acceptable range for the ramp up and ramp down parameters in W/s mode is 1 W/s to 65535 W/s.</p> <p>In timed mode, the ramp parameters represent the time in ms. The acceptable range for the ramp up and ramp down parameters in timed mode is 1 ms to 65535 ms.</p> <p>The set point ramp parameters can be set while output is on. The ramp parameters are not allowed to change during a set point ramp that is currently in progress. The set point will not be ramped in either mode if the set point change is less than 1 W.</p> <p>Command 151 reports this value.</p>	6	1

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
38 set tuning time-out value	<p>Sets the time in ms that the generator is allowed to tune without finding a match before it turns off RF output and activates a fault. The unit stores this setting in nonvolatile memory. You cannot change this mode while output is on. The default value is 0. A value of 0 disables tuning time-out, causing the generator to tune indefinitely.</p> <p>Send 4 data bytes.</p> <p>Command 138 reports this value.</p>	4	1
39 set communications watchdog timer	<p>Sets the communications watchdog timer value in ms. This timer denotes the amount of time that can pass without a successful communication. If this timer value is exceeded, the unit will turn output off if the output is on.</p> <p>Each AE Bus communications interface has its own unique watchdog timer. To set the watchdog timer value for a given port (for example, the Host port), send this command from that port. You can set up any combination of enable, disable, or time-out values among the interfaces. A value of 0 disables the watchdog timer.</p> <p>This parameter is volatile and defaults to 0 each time you turn the unit on. The maximum value is 65535. The unit stores the watchdog timer value internally in 10 ms increments, and truncates any fractional remainder. The unit accepts a value from 1 to 9, but stores it as a time-out period of 10 ms.</p> <p>Send 3 data bytes:</p> <ul style="list-style-type: none"> • Byte 0 = Enable/disable timer • Bytes 1 and 2 = Timer value in ms. Valid values are 1 to 65535 ms <p>Command 139 reports this value</p>	3	1

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
<p>40 set host port time-out</p>	<p>Sets the amount of time that the generator waits between bytes from the host before resetting and waiting for a new packet. Each AE Bus communications interface has its own unique host port time-out. To set the host port time-out value for a given port (for example, the Host port), send this command from that port.</p> <p>Send 2 data bytes (16-bit value) representing units of 10 ms for the time-out value. The valid range of values is from 2 to 500 (20 ms to 5.0 s). The default value is 750 ms.</p> <p>Command 140 reports this value.</p>	2	1
<p>44 set minimum tuning frequency</p>	<p>Sets the minimum frequency that the generator uses for automatic tuning. The unit stores this parameter in nonvolatile memory. You cannot change this setting while output is on.</p> <p>Send 4 data bytes to set the value in kHz, or 5 data bytes to set the value in either kHz or Hz.</p> <p>Send 4 data bytes:</p> <ul style="list-style-type: none"> • Frequency in kHz <p>Send 5 data bytes:</p> <ul style="list-style-type: none"> • Byte 0 = kHz or Hz <ul style="list-style-type: none"> – 0 = Frequency is in kHz – 1 = Frequency is in Hz • Bytes 1 through 4 = Frequency value <p>Command 144 reports this value.</p>	4 or 5	1

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
<p style="text-align: center;">45</p> <p>set maximum tuning frequency</p>	<p>Sets the maximum frequency that the generator uses for automatic tuning. The unit stores this parameter in nonvolatile memory. You cannot change this setting while output is on.</p> <p>Send 4 data bytes to set the value in kHz, or 5 data bytes to set the value in either kHz or Hz.</p> <p>Send 4 data bytes:</p> <ul style="list-style-type: none"> • Frequency in kHz <p>Send 5 data bytes:</p> <ul style="list-style-type: none"> • Byte 0 = kHz or Hz <ul style="list-style-type: none"> – 0 = Frequency is in kHz – 1 = Frequency is in Hz • Bytes 1 through 4 = Frequency value <p>Command 145 reports this value</p>	4	1
<p style="text-align: center;">46</p> <p>set tuning start frequency</p>	<p>Sets the frequency at which the generator starts automatic tuning. The unit stores this parameter in nonvolatile memory. You cannot change this setting while output is on.</p> <p>Send 4 data bytes to set the value in kHz, or 5 data bytes to set the value in either kHz or Hz.</p> <p>Send 4 data bytes:</p> <ul style="list-style-type: none"> • Frequency in kHz <p>Send 5 data bytes:</p> <ul style="list-style-type: none"> • Byte 0 = kHz or Hz <ul style="list-style-type: none"> – 0 = Frequency is in kHz – 1 = Frequency is in Hz • Bytes 1 through 4 = Frequency value <p>Command 146 reports this value.</p>	4 or 5	1

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
48 set fixed or variable frequency mode	<p>Sets the frequency control mode. You can change this mode while the output is on.</p> <p>While the output is on, changing to fixed frequency mode causes the unit to change immediately to the previously set fixed frequency. Changing to variable frequency mode causes the unit to output the start frequency first, and then to begin sweeping according to the tuning algorithm.</p> <p>The default setting is variable frequency mode. The unit stores this value in nonvolatile memory.</p> <p>Send 1 data byte (8-bit value):</p> <ul style="list-style-type: none"> • 0 = Fixed frequency mode • 1 = Variable frequency mode <p>Command 148 reports this value.</p>	1	1
58 set retuning threshold	<p>Sets the tuning criteria level at which the tuning algorithm determines that the generator requires retuning. The unit stores this parameter in nonvolatile memory. You cannot change this setting while output is on. Valid values are from 1 to 3000.</p> <p>Send 4 data bytes (32-bit value).</p> <p>Command 158 reports this value.</p>	4	1
60 set tune delay	<p>Sets the time in ms that the tuning algorithm waits before beginning to tune the generator automatically. The unit stores this parameter in nonvolatile memory. You cannot change this setting while output is on. The maximum tune delay value is 60,000. The default value is 50 ms.</p> <p>Send 2 or 4 data bytes = Tune delay time in ms..</p> <p>You can send either two or four bytes. If the value doesn't fit into two bytes, it should be sent in four.</p> <p>Command 160 reports this value.</p>	2 or 4	1

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
<p>61 set fixed frequency</p>	<p>Sets the generator output frequency when operating in fixed frequency mode. You can change the generator frequency while the output is on when operating in the fixed frequency mode. The fixed frequency value must be within the unit frequency range.</p> <p>Send 4 data bytes to set the value in kHz, or 5 data bytes to set the value in either kHz or Hz.</p> <p>Send 4 data bytes (32-bit value):</p> <ul style="list-style-type: none"> • Frequency in kHz <p>Send 5 data bytes:</p> <ul style="list-style-type: none"> • Byte 0 = kHz or Hz <ul style="list-style-type: none"> – 0 = Frequency is in kHz – 1 = Frequency is in Hz • Bytes 1 through 4 = Frequency value <p>Command 161 reports this value</p>	4 or 5	1

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
<p>70 set real time clock</p>	<p>Sets the system real time clock to the time/date specified. The data transmitted must be encoded in BCD (binary coded decimal) format. For example, to set the seconds to 48, the data value transmitted must be 0x48. The real time clock features automatic leap year compensation for years up to 2100.</p> <p>Send 7 data bytes (8-bit values):</p> <ul style="list-style-type: none"> • Byte 0 = Seconds (valid values are 0 to 59) • Byte 1 = Minutes (valid values are 0 to 59) • Byte 2 = Hours (valid values are 0 to 23) • Byte 3 = Day of the week (valid values are 1 to 7) <ul style="list-style-type: none"> – 1 = Sunday – 2 = Monday – 3 = Tuesday – 4 = Wednesday – 5 = Thursday – 6 = Friday – 7 = Saturday • Byte 4 = Date (valid values are 1 to 31) • Byte 5 = Month (valid values are 1 to 12) • Byte 6 = Year (valid values are 00 to 99) <p>Command 215 reports this value.</p>	7	1

Table 4-11. AE Host commands (Continued)


Command	Description	Data Bytes Sent	Data Bytes Returned										
<p>71 set system control</p>	<p>Set the IP address, default gateway, subnet mask, and DHCP client enable.</p> <p>This command allows you to send subcommands. The name and function of a subcommand depends on the value of the first byte:</p> <table border="1" data-bbox="500 590 1086 831"> <thead> <tr> <th>Byte 0 =</th> <th>Subcommand</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>IP Address</td> </tr> <tr> <td>1</td> <td>Default Gateway</td> </tr> <tr> <td>2</td> <td>Subnet mask</td> </tr> <tr> <td>5</td> <td>DHCP Client Enable</td> </tr> </tbody> </table> <p> Important AE commands use little endian byte ordering (LSB first). For example, if the IP address is 10.1.2.3, then send the bytes:</p> <ul style="list-style-type: none"> • Byte 0 = 0 (set IP address) • Byte 1 = 3 • Byte 2 = 2 • Byte 3 = 1 • Byte 4 = 10 	Byte 0 =	Subcommand	0	IP Address	1	Default Gateway	2	Subnet mask	5	DHCP Client Enable	<p>2 or 5</p>	<p>1</p>
Byte 0 =	Subcommand												
0	IP Address												
1	Default Gateway												
2	Subnet mask												
5	DHCP Client Enable												
<p>71 set IP address (subcommand 0)</p>	<p>Sets the unit network IP address. Make sure to check with your network administrator before setting any IP address on an established network. The unit stores the address in nonvolatile memory. Once you set the parameters, you must cycle power to the unit for the new parameters to take effect. This command affects the unit only if DHCP client is disabled.</p> <p>Send 5 data bytes.</p> <ul style="list-style-type: none"> • Byte 0 = 0 (set IP address) • Bytes 1 through 4 = IP address (four 8-bit values) <p>Command 204 reports this value.</p>	<p>5</p>	<p>1</p>										

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
<p>71 set default gateway address (subcommand 1)</p>	<p>Sets the unit network default gateway address. The unit stores the address in nonvolatile memory and restores it each time you cycle power. Once you set the parameters, you must cycle power to the unit for the new parameters to take effect. Note that the default gateway address is sent LSB first; that is, Byte 1 = least significant octet of the default gateway address. This command affects the unit only if DHCP client is disabled.</p> <p>Send 5 data bytes.</p> <ul style="list-style-type: none"> • Byte 0 = 1 (set default gateway) • Bytes 1 through 4 = Default gateway address (four 8-bit values) <p>Command 204 reports this value.</p>	5	1
<p>71 set subnet (SN) mask (subcommand 2)</p>	<p>Sets the unit network subnet (SN) mask. The unit stores the subnet mask in nonvolatile memory and restores it each time you cycle power. Once you set the parameters, you must cycle power to the unit for the new parameters to take effect. Note that the default gateway address is sent LSB first; that is, Byte 1 = least significant octet of the default gateway address. This command affects the unit only if DHCP client is disabled.</p> <p>Send 5 data bytes.</p> <ul style="list-style-type: none"> • Byte 0 = 2 (set subnet mask) • Bytes 1 through 4 = SN mask (four 8-bit values) <p>Command 204 reports this value.</p>	5	1

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
71 set DHCP client enable (subcommand 5)	<p>Sets the unit network DHCP client enable mode. The unit stores the DHCP client enable mode in nonvolatile memory and restores the setting each time you cycle power. Once you set the parameters, you must cycle power to the unit for the new parameters to take effect.</p> <p>Send 2 data bytes:</p> <ul style="list-style-type: none"> • Byte 0 = 5 (set DHCP client enable) • Byte 1 = DHCP client enable mode: <ul style="list-style-type: none"> – 0 = Disabled – 1 = Enabled <p>Command 204 reports this value.</p>	2	1

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
<p>93 set pulsing frequency</p>	<p>Sets the RF pulsing frequency in Hz. Valid values range from 10 Hz to 2000 Hz.</p> <p>Either a master or a slave unit can store this value in volatile or nonvolatile memory.</p> <p>You can set the memory mode (volatile or nonvolatile memory) with command 26.</p> <p>For Master Units</p> <p>If the unit is a master unit, setting the pulsing frequency to 0 disables pulsing. If the master unit is operating in volatile storage mode, the unit always begins operation with pulsing disabled.</p> <p>You must enter a valid command for pulsing frequency and duty cycle to enable pulsing. Any combination of pulsing frequency and duty cycle that results in an output on or off time less than 5 μs is invalid and returns a CSR error code.</p> <p>For Slave Units</p> <p>If the unit is a slave unit, this command sets the minimum pulse on time the unit accepts without asserting an error. The unit uses this frequency with an implied duty cycle of 50% to calculate the minimum pulse on time. The default minimum pulse on time is 25 μs and can be reduced to 5 μs with reduced measurement accuracy.</p> <p>Send 4 data bytes.</p> <ul style="list-style-type: none"> • Bytes 0 through 3 = pulsing frequency in Hz <p>Command 193 reports this value.</p>	4	1

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
<p>95 set diagnostic command</p>	<p>Controls the diagnostic self-test. The unit must be in diagnostic control mode before using this command (see command 14). Sending a value of 0 disables the self-test and clears the self-test results from the previous run (if any). Sending a value of 1 clears the self-test results from the previous run (if any) and starts the diagnostic self-test.</p> <p>Send 1 byte.</p> <ul style="list-style-type: none"> • Byte 0 = Enable/disable diagnostics. <ul style="list-style-type: none"> – 0 = Disable diagnostics mode – 1 = Enable diagnostic mode and start diagnostics <p>Command 244 reports this value.</p>	1	1

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
<p>96 set pulsing duty cycle</p>	<p>Sets the RF pulsing duty cycle in percentage.</p> <p>The unit can store this value in one of two storage locations:</p> <ul style="list-style-type: none"> • Volatile memory • Nonvolatile memory <p>You can set the memory mode (volatile or nonvolatile memory) with command 26.</p> <p>If the unit is a master unit, setting the pulsing duty cycle to 0 disables pulsing. If the master unit is operating in volatile storage mode, the unit always starts operation with pulsing disabled.</p> <p>You must enter a valid command for pulsing frequency and duty cycle to enable pulsing. Any combination of pulsing frequency and duty cycle that results in an output on or off time less than 5 μs is invalid and returns a CSR error code. Default value is 0.</p> <p>Valid values range from 10% to 90% and represent output on time. Setting this value to 0 disables pulsing.</p> <p>This command is valid only when operating in master mode. When operating in slave mode, this command returns CSR 12, Feature Not Available.</p> <p>Send 2 data bytes = Duty cycle in %</p> <p>Command 196 reports this value.</p>	2	1

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned																						
<p>118 set frequency tuning sub-commands</p>	<p>Sets frequency tuning parameters.</p> <p>This command allows you to send subcommands. Send a value in the first two bytes that selects the parameter to set, and then send subcommands to set parameter values.</p> <p>Your unit may not have all the features in this list. If you issue a command for a feature that your unit does not have, the unit returns CSR 12, Feature Not Available.</p> <table border="1" data-bbox="500 741 1084 1270"> <thead> <tr> <th data-bbox="500 741 711 793">Byte 0 =</th> <th data-bbox="711 741 1084 793">Subcommand</th> </tr> </thead> <tbody> <tr> <td data-bbox="500 793 711 840">1</td> <td data-bbox="711 793 1084 840">Set frequency step minimum</td> </tr> <tr> <td data-bbox="500 840 711 886">2</td> <td data-bbox="711 840 1084 886">Set frequency step maximum</td> </tr> <tr> <td data-bbox="500 886 711 932">3</td> <td data-bbox="711 886 1084 932">Set step up gain</td> </tr> <tr> <td data-bbox="500 932 711 978">4</td> <td data-bbox="711 932 1084 978">Set step down gain</td> </tr> <tr> <td data-bbox="500 978 711 1024">5</td> <td data-bbox="711 978 1084 1024">Set frequency step start</td> </tr> <tr> <td data-bbox="500 1024 711 1071">6</td> <td data-bbox="711 1024 1084 1071">Set gamma threshold high</td> </tr> <tr> <td data-bbox="500 1071 711 1117">7</td> <td data-bbox="711 1071 1084 1117">Set gamma threshold low</td> </tr> <tr> <td data-bbox="500 1117 711 1163">8</td> <td data-bbox="711 1117 1084 1163">Set maximum tuning count</td> </tr> <tr> <td data-bbox="500 1163 711 1209">22</td> <td data-bbox="711 1163 1084 1209">Set tuning step time</td> </tr> <tr> <td data-bbox="500 1209 711 1255">23</td> <td data-bbox="711 1209 1084 1255">Set tuning gain delay</td> </tr> </tbody> </table>	Byte 0 =	Subcommand	1	Set frequency step minimum	2	Set frequency step maximum	3	Set step up gain	4	Set step down gain	5	Set frequency step start	6	Set gamma threshold high	7	Set gamma threshold low	8	Set maximum tuning count	22	Set tuning step time	23	Set tuning gain delay	Variable	1
Byte 0 =	Subcommand																								
1	Set frequency step minimum																								
2	Set frequency step maximum																								
3	Set step up gain																								
4	Set step down gain																								
5	Set frequency step start																								
6	Set gamma threshold high																								
7	Set gamma threshold low																								
8	Set maximum tuning count																								
22	Set tuning step time																								
23	Set tuning gain delay																								
<p>118 set frequency step minimum (NV) (subcommand 1)</p>	<p>Sets the frequency tuning frequency step minimum size in Hz. Valid values must be less than the frequency step maximum and greater than 200. Send 6 data bytes.</p> <ul style="list-style-type: none"> • Bytes 0 and 1 = 1 (set frequency step minimum) • Bytes 2 through 5 = Frequency step minimum <p>Command 248 reports this value; B0 = 1.</p>	6	1																						

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
118 set frequency step maximum (NV) (subcommand 2)	Sets the frequency tuning frequency step maximum size in Hz. Valid values must be greater than the frequency step minimum and less than 100,000. Send 6 data bytes. <ul style="list-style-type: none"> • Bytes 0 and 1 = 2 (set frequency step maximum) • Bytes 2 through 5 = Frequency step maximum Command 248 reports this value; B0 = 2.	6	1
118 set step up gain (NV) (subcommand 3)	Sets the frequency tuning step up gain. Valid values are 1 to 7. Send 4 data bytes. <ul style="list-style-type: none"> • Bytes 0 and 1 = 3 (set step up gain) • Bytes 2 and 3 = Step up gain Command 248 reports this value; B0 = 3.	4	1
118 set step down gain (NV) (subcommand 4)	Sets the frequency tuning step down gain. Valid values are 1 to 7. Send 4 data bytes. <ul style="list-style-type: none"> • Bytes 0 and 1 = 3 (set step up gain) • Bytes 2 and 3 = Step up gain Send 4 data bytes. <ul style="list-style-type: none"> • Bytes 0 and 1 = 4 (set step down gain) • Bytes 2 and 3 = Step down gain Command 248 reports this value; B0 = 4.	4	1

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
118 set gamma threshold high (NV) (subcommand 6)	<p>Sets the frequency tuning gamma threshold high. The generator will use the high threshold after first attempting (and failing) to achieve a tuning criteria less than the low threshold. The generator also uses this value as the threshold to determine when to begin retuning. Valid values for gamma threshold high must be greater than or equal to gamma threshold low and less than 3000.</p> <p>Send 4 data bytes.</p> <ul style="list-style-type: none"> • Bytes 0 and 1 = 6 (set gamma threshold high, LSB first) • Bytes 2 and 3 = Gamma threshold high <p>Command 248 reports this value; B0 = 6.</p>	4	1
118 set gamma threshold low (NV) (subcommand 7)	<p>Sets the frequency tuning gamma threshold low. The generator first attempts to achieve a tuning criterion less than the low threshold. If the unit cannot find a tuning criterion less than the low threshold, and if the maximum tuning counter expires, the generator gives up and tries the high threshold. Valid values for gamma threshold low must be less than or equal to gamma threshold high.</p> <p>Send 4 data bytes.</p> <ul style="list-style-type: none"> • Bytes 0 and 1 = 7 (set gamma threshold low, LSB first) • Bytes 2 and 3 = Gamma threshold low <p>Command 248 reports this value; B0 = 7.</p>	4	1
118 set maximum tuning count (NV) (subcommand 8)	<p>Sets the frequency tuning maximum tuning count. This sets the number of attempts to tune to the low threshold before trying the high threshold. Valid values for maximum tuning count are from 0 to 65535.</p> <p>Send 4 data bytes.</p> <ul style="list-style-type: none"> • Bytes 0 and 1 = 8 (set maximum tuning count, LSB first) • Bytes 2 and 3 = Maximum tuning count <p>Command 248 reports this value; B0 = 8.</p>	4	1

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
118 set tuning step time (NV) (subcommand 22)	<p>Sets the tuning step time. This command is not available while the RF output is on.</p> <p>The range of valid values is from 8 μs to 4096 μs. The resolution for setting tuning step time is 16 μs. The unit rounds all values of tuning step time to the nearest multiple of 16 μs; for example, the minimum value of 8 is rounded up to 16.</p> <p>Send 4 data bytes.</p> <ul style="list-style-type: none"> • Bytes 0 and 1 = 22 (set tuning step time) • Bytes 2 and 3 = Tuning step time <p>Command 248 reports this value; B0 =22.</p>	4	1
118 set tuning gain delay (NV) (subcommand 23)	<p>Sets the tuning gain delay. This command is not available while RF output is turned on. The range of valid values is from 0 to 7. This parameter specifies the delay before increasing the step size after a change in direction. The factory default value is set by an EEPROM value.</p> <p>Send 4 data bytes.</p> <ul style="list-style-type: none"> • Bytes 0 and 1 = 23 (set tuning gain delay) • Bytes 2 and 3 = Tuning gain delay <p>Command 248 reports this value; B0 =23.</p>	4	1
128 report power supply type	<p>Reports the power supply type.</p> <p>You can send 0 or 1 data bytes.</p> <p>Send 0 data bytes:</p> <p>Returns a nonterminated 9-character ASCII string that represents the power supply type (“PDX II”).</p> <p>Send 1 data byte:</p> <ul style="list-style-type: none"> • Byte 0 = 3 <p>Returns 10 bytes:</p> <ul style="list-style-type: none"> • Bytes 0 through 3 = 4 ASCII characters • Bytes 4 through 9 = Six-digit ASCII representation of the 3 least significant bytes of the unit MAC ID. 	0 or 1	9 or 10 ASCII characters

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
129 report power supply size	<p>Reports the power supply size in kW, in four or six digits, depending on the sent data bytes.</p> <p>Send 0 or 1 data bytes.</p> <p>Send 0 data bytes:</p> <ul style="list-style-type: none"> • Returns four data bytes = Power supply size formatted to four ASCII characters. <p>Optional: Send 1 data byte (with a value of 0):</p> <ul style="list-style-type: none"> • Returns six data bytes = Power supply size formatted to six ASCII characters, right justified. 	0 or 1	4 or 6 ASCII characters

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
<p>130 report software part number</p>	<p>Returns a nonterminated ASCII string that represents the AE software part number (for example, “7432006”). You can use this number in conjunction with the revision number returned by command 198 to identify the software in the unit.</p> <p>Sending a request data byte is optional. If you issue command 130 with zero data bytes, it returns the Coldfire application firmware part number. Sending 1 data byte allows you to select the software part number to be returned.</p> <p>Send 1 data byte (8-bit value).</p> <ul style="list-style-type: none"> • Byte 0 = Software request <ul style="list-style-type: none"> – 0 = Coldfire application firmware part number – 1 = Measurement board FPGA firmware part number – 3 = Bootloader firmware part number – 13 = Display board application firmware part number – 14 = Display board FPGA firmware part number – 15 = Display board bootloader firmware part number <p>Returns 7 data bytes:</p> <ul style="list-style-type: none"> • Bytes 0 through 6 = ASCII string representing the software part number. 	0 or 1	7 ASCII characters
<p>138 report tuning time-out value</p>	<p>Reports the time in ms that the generator is allowed to tune without finding a match before it turns off RF output and activates a fault. The maximum tuning time-out value is 60,000. A value of 0 disables the tuning time-out feature, causing the generator to tune indefinitely.</p> <p>Returns 4 data bytes:</p> <ul style="list-style-type: none"> • Bytes 0 through 4 = Time in ms <p>Set this value with command 38.</p>	0	4

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
<p>139 report communication watchdog timer</p>	<p>Reports the communications watchdog timer value in ms. A value of 0 indicates that the watchdog timer is disabled. This parameter is volatile and defaults to 0 each time you turn the unit on. The maximum value is 65535. The unit stores the watchdog timer value internally in 10 ms increments and truncates any fractional remainder. The unit reports all values in multiples of 10 ms. Returns 2 data bytes.</p> <ul style="list-style-type: none"> • Bytes 0 and 1 = Watchdog timer value in ms (unsigned short) <p>Set this value with command 39.</p>	<p>1</p>	<p>2</p>
<p>140 report host time-out</p>	<p>Reports the current host port time-out value for the serial Host port. Host port time-out value is the maximum time allowed between bytes received. This value is in units of 10 ms. The allowable range of values is from 2 to 500, representing 20 ms to 5.00 seconds. Returns 2 data bytes (16-bit value):</p> <ul style="list-style-type: none"> • Bytes 0 and 1 = Host port time-out value. <p>Set this value with command 40.</p>	<p>0</p>	<p>1</p>
<p>144 report minimum tuning frequency</p>	<p>Reports the minimum frequency that the generator uses for automatic tuning. The minimum tuning frequency must be within the unit's factory-set frequency range. The unit stores this parameter in nonvolatile memory.</p> <p>Send 0 data bytes to return frequency in kHz, or send 1 data byte to return frequency in kHz or Hz. Send 0 data bytes:.</p> <ul style="list-style-type: none"> • Returns 4 data bytes = Frequency in kHz <p>Send 1 data byte:</p> <ul style="list-style-type: none"> • Byte 0 = Frequency in kHz or Hz <ul style="list-style-type: none"> – 0 = Returns frequency in kHz – 1 = Returns frequency in Hz <p>Returns 4 data bytes = Frequency in kHz or Hz Set this value with command 44.</p>	<p>0 or 1</p>	<p>4</p>

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
<p>145 report maximum tuning frequency</p>	<p>Reports the maximum frequency that the generator uses for automatic tuning. The maximum tuning frequency must be within the unit's factory-set frequency range. The unit stores this parameter in nonvolatile memory.</p> <p>Send 0 data bytes to return frequency in kHz, or send 1 data byte to return frequency in kHz or Hz.</p> <p>Send 0 data bytes:.</p> <ul style="list-style-type: none"> • Returns 4 data bytes = Frequency in kHz <p>Send 1 data byte:</p> <ul style="list-style-type: none"> • Byte 0 = Frequency in kHz or Hz <ul style="list-style-type: none"> – 0 = Returns frequency in kHz – 1 = Returns frequency in Hz <p>Returns 4 data bytes = Frequency in kHz or Hz</p> <p>Set this value with command 45.</p>	0 or 1	4
<p>146 report tuning start frequency</p>	<p>Reports the frequency in kHz at which the generator starts automatic tuning. The tuning start frequency must be greater than or equal to the current minimum tuning frequency and less than or equal to the current maximum tuning frequency. The unit stores this parameter in nonvolatile memory.</p> <p>Send 0 data bytes to return frequency in kHz, or send 1 data byte to return frequency in kHz or Hz</p> <p>Send 0 data bytes:.</p> <ul style="list-style-type: none"> • Returns 4 data bytes = Frequency in kHz <p>Send 1 data byte:</p> <ul style="list-style-type: none"> • Byte 0 = Frequency in kHz or Hz <ul style="list-style-type: none"> – 0 = Returns frequency in kHz – 1 = Returns frequency in Hz <p>Returns 4 data bytes = Frequency in kHz or Hz</p> <p>Set this value with command 46.</p>	0 or 1	4

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
<p>147 report generator actual frequency</p>	<p>If output is on when you send this command, it reports the actual output frequency.</p> <p>If output is off when you send this command:</p> <ul style="list-style-type: none"> • If the unit is in fixed frequency mode, the command reports the fixed frequency (as in command 161). • If the unit is in variable frequency mode, the command reports the tuning start frequency (as in command 146). <p>In either fixed or variable mode, if the output is off when you send this command, the unit reports the frequency that it will first output the next time you turn the unit on.</p> <p>Send 0 data bytes to return frequency in kHz, or send 1 data byte to return frequency in kHz or Hz</p> <p>Send 0 data bytes:.</p> <ul style="list-style-type: none"> • Returns 4 data bytes = Frequency in kHz <p>Send 1 data byte:</p> <ul style="list-style-type: none"> • Byte 0 = Frequency in kHz or Hz <ul style="list-style-type: none"> – 0 = Returns frequency in kHz – 1 = Returns frequency in Hz <p>Returns 4 data bytes (32-bit value) = Frequency in kHz or Hz</p>	0 or 1	4
<p>148 report fixed or variable frequency mode</p>	<p>Reports the frequency mode.</p> <p>Returns 1 data byte (8-bit value). Reports the frequency mode:</p> <ul style="list-style-type: none"> • 0 = Fixed frequency mode • 1 = Variable frequency mode <p>Set this value with command 48.</p>	0	1

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
<p>151 report set point ramping parameters</p>	<p>Reports the set point ramping mode and the ramping parameters.</p> <p>The ramp up and ramp down parameters are independent. In W/s mode, the ramp parameters represent the ramp rate in watts per second. The acceptable range for the ramp up and ramp down parameters in W/s mode is 1 W/s to 65535 W/s. In timed mode, the ramp parameters represent the time in ms. The acceptable range for the ramp up and ramp down parameters in timed mode is 1 ms to 65535 ms. The set point will not be ramped in either mode if the set point change is less than 1 watt.</p> <p>Returns 6 data bytes (three 16-bit values):</p> <ul style="list-style-type: none"> • Bytes 0 and 1 (16-bit value) = Ramp mode <ul style="list-style-type: none"> – 0 = Disabled – 1 = W/s – 2 = Timed (in ms) • Bytes 2 and 3 (16-bit value) = Ramp up (in W/s or time in ms) • Bytes 4 and 5 (16-bit value) = Ramp down (in W/s or time in ms) <p>Set this value with command 31.</p>	0	6
<p>154 report regulation mode</p>	<p>Reports the active regulation mode.</p> <p>Returns 1 data byte (8-bit value):</p> <ul style="list-style-type: none"> • 6 = Forward • 7 = Delivered or real • 8 = External (DC bias) <p>Set this value with command 3.</p>	0	1

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
155 report active control mode	<p>Reports the active control mode.</p> <p>Returns 1 data byte (8-bit value):</p> <ul style="list-style-type: none"> • 2 = Host • 4 = User port (analog) • 8 = Diagnostic <p>Set this value with command 14.</p>	0	1
158 report retuning threshold	<p>Reports the tuning criteria level at which the tuning algorithm determines that the generator requires retuning. The unit stores this parameter in nonvolatile memory.</p> <p>Returns 4 data bytes:</p> <ul style="list-style-type: none"> • Bytes 0 through 3 = Tuning criteria <p>Set this value with command 58.</p>	0	4
159 report tuning time	<p>Reports the time in ms from an RF on (command 2) to the first time that the tuning algorithm declares the generator to be tuned.</p> <p>Returns 4 data bytes:</p> <ul style="list-style-type: none"> • Bytes 0 through 3 = Time in ms 	0	4
160 report tune delay	<p>Reports the time in ms that the tuning algorithm waits before beginning to automatically tune the generator. The maximum tune delay value is 60,000. The unit stores this parameter in nonvolatile memory.</p> <p>Returns 4 data bytes:</p> <ul style="list-style-type: none"> • Bytes 0 through 3 = Time in ms <p>Set this value with command 60.</p>	0	4

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
161 report fixed frequency	<p>Reports the output frequency when the generator is operating in fixed frequency mode. The fixed frequency value must be within the unit frequency range.</p> <p>Send 0 data bytes to return frequency in kHz, or send 1 data byte to return frequency in kHz or Hz.</p> <p>Send 0 data bytes:.</p> <ul style="list-style-type: none"> • Returns 4 data bytes = Frequency in kHz <p>Send 1 data byte:</p> <ul style="list-style-type: none"> • Byte 0 = Frequency in kHz or Hz <ul style="list-style-type: none"> – 0 = Returns frequency in kHz – 1 = Returns frequency in Hz <p>Returns 4 data bytes (32-bit value) = Frequency in kHz or Hz</p> <p>Set this value with command 61.</p>	0 or 1	4
162 report process status	<p>Reports the generator process status.</p> <p>Returns 4 data bytes (bit flags):</p> <ul style="list-style-type: none"> • Byte 0: <ul style="list-style-type: none"> – Bit 0 = Tuning status (0 = Not tuned, 1 = Tuned) – Bit 1 = Set point ramping (0 = Not ramping, 1 = Ramp in progress) – Bit 2 = Reserved for recipe active – Bits 3 and 4 = Reserved – Bit 5 = RF output on (0 = Off, 1 = On) – Bit 6 = RF On requested (0 = Off, 1 = On) – Bit 7 = Set point tolerance (0 = In tolerance, 1 = Out of tolerance) • Byte 1: <ul style="list-style-type: none"> – Bit 0 = Reserved for end of target life – Bits 1 and 2 = Reserved <p>(Continued on next page)</p>	0	4

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
	<p>(Continued from previous page)</p> <ul style="list-style-type: none"> - Bit 3 = Coldplate overtemperature fault (1 = Fault) - Bits 4 through 6 = Reserved - Bit 7 = Interlock (0 = Interlock closed, 1 = Interlock open) <p>• Byte 2:</p> <ul style="list-style-type: none"> - Bits 0 and 1 = Reserved - Bit 2 = High AC line voltage warning (1 = Warning) - Bit 3 = Reserved - Bit 4 = Low AC line voltage warning (1 = Warning) - Bit 5 = Protection Limit (1 = Limit active) - Bits 6 and 7 = Reserved <p>• Byte 3:</p> <ul style="list-style-type: none"> - Bit 0 = Reserved - Bit 1 = Inverter not ready (1 = Not ready) - Bit 2 = Reserved - Bits 3 and 4 = Reserved - Bit 5 = Fault present (0 = No faults, 1 = Faults exist) - Bit 6 = Warning present (0 = No warnings, 1 = Warnings exist) - Bit 7 = CEX is locked (1 = CEX is locked) <p>When either of the fault present or warning present bits are set, one or more active or latched faults or warnings currently exist in the unit. You can obtain a list of current faults or warnings by issuing command 223 with the appropriate parameter.</p>		

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
164 report set point and regulation mode	<p>Reports the output set point set with command 8 and the output regulation mode set with command 3. Reports the set point value in watts when operating in forward or delivered power regulation modes. If the unit is in DC bias regulation mode, the set point is returned in volts. This command also returns the active regulation mode.</p> <p>Returns 3 data bytes (one 16-bit value, one 8-bit value):</p> <ul style="list-style-type: none"> • Bytes 0 and 1 = Set point value in watts or volts • Byte 2 = Output regulation mode <ul style="list-style-type: none"> – 6 = Forward – 7 = Delivered or load – 8 = External (DC Bias) <p>Set the set point with command 8 and the regulation mode with command 3.</p>	0	3
165 report forward power	<p>Reports the forward power in watts.</p> <p>Returns 2 data bytes (16-bit value):</p> <ul style="list-style-type: none"> • Bytes 0 and 1 = Forward power 	0	2
166 report reflected power	<p>Reports the reflected power in watts.</p> <p>Returns 2 data bytes (16-bit value):</p> <ul style="list-style-type: none"> • Bytes 0 and 1 = Reflected power 	0	2
167 report delivered power	<p>Reports the delivered power in watts.</p> <p>Returns 2 data bytes (16-bit value):</p> <ul style="list-style-type: none"> • Bytes 0 and 1 = Delivered power 	0	2
168 report DC bias external feedback	<p>Reports the external feedback value in volts as measured at the DC bias input on the user card.</p> <p>Returns 2 data bytes.</p> <ul style="list-style-type: none"> • Bytes 0 and 1 = External feedback 	0	2

Table 4-11. AE Host commands (Continued)


Command	Description	Data Bytes Sent	Data Bytes Returned				
<p>169 report user power limit</p>	<p>Reports the user power limit in watts.</p> <p> Important The user power limit is directly related to the active regulation mode. For example, when in load regulation mode, the user power limit will limit delivered power.</p> <p>Returns 2 data bytes (16-bit value):</p> <ul style="list-style-type: none"> • Bytes 0 and 1 = Power limit <p>Set this value with command 4.</p>	0	2				
<p>170 report user reflected power limit</p>	<p>Reports the user reflected power limit in watts. The user reflected power limit affects all regulation modes. The unit retains the user reflected power limit as long as power is applied. You cannot change the user reflected power limit while the unit is on. Valid values are from 100 W minimum to 20% of the unit maximum power.</p> <p>Returns 2 data bytes (16-bit value):</p> <ul style="list-style-type: none"> • Bytes 0 and 1 = User reflected power limit <p>Set this value with command 5.</p>	0	2				
<p>171 report DC bias external feedback limit</p>	<p>Reports the DC bias value when operating in external (DC bias) regulation mode.</p> <p>Returns 2 data bytes.</p> <ul style="list-style-type: none"> • Bytes 0 and 1 = User external feedback limit 	0	2				
<p>172 reports pulsing configuration</p>	<p>Reports pulsing configuration. Reports unit as master or slave, pulse sync input on or off, slave input delay time, memory mode, explicit enable mode, pulsing on or off status, and status of enable or disable pulsing mode.</p> <p>This command allows you to send subcommands. Send a value in the first two bytes that selects the parameter to report, and then send subcommands to report parameter values.</p> <table border="1" data-bbox="500 1738 1089 1871"> <thead> <tr> <th data-bbox="500 1738 711 1791">Byte 0 =</th> <th data-bbox="711 1738 1089 1791">Subcommand</th> </tr> </thead> <tbody> <tr> <td data-bbox="500 1791 711 1871">1</td> <td data-bbox="711 1791 1089 1871">Report pulsing mode (master or slave)</td> </tr> </tbody> </table> <p>(Continued on next page)</p>	Byte 0 =	Subcommand	1	Report pulsing mode (master or slave)	6	1
Byte 0 =	Subcommand						
1	Report pulsing mode (master or slave)						

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned																
	<table border="1"> <thead> <tr> <th>Byte 0 =</th> <th>Subcommand</th> </tr> </thead> <tbody> <tr> <td>2</td> <td>Report pulse sync output status</td> </tr> <tr> <td>3</td> <td>Reserved</td> </tr> <tr> <td>4</td> <td>Report slave input delay time</td> </tr> <tr> <td>5</td> <td>Report memory mode</td> </tr> <tr> <td>6</td> <td>Report explicit enable mode</td> </tr> <tr> <td>7</td> <td>Report pulsing on/off status</td> </tr> <tr> <td>8</td> <td>Report enable or disable pulsing mode status</td> </tr> </tbody> </table>	Byte 0 =	Subcommand	2	Report pulse sync output status	3	Reserved	4	Report slave input delay time	5	Report memory mode	6	Report explicit enable mode	7	Report pulsing on/off status	8	Report enable or disable pulsing mode status		
Byte 0 =	Subcommand																		
2	Report pulse sync output status																		
3	Reserved																		
4	Report slave input delay time																		
5	Report memory mode																		
6	Report explicit enable mode																		
7	Report pulsing on/off status																		
8	Report enable or disable pulsing mode status																		
172 report pulsing mode (subcommand 1)	<p>Reports whether the unit is set to master or slave pulsing mode. Send 4 data bytes.</p> <ul style="list-style-type: none"> • Bytes 0 and 1 = 1 (report pulsing mode) <p>Returns 4 data bytes.</p> <ul style="list-style-type: none"> • Bytes 2 and 3 = Pulsing mode <ul style="list-style-type: none"> – 1 = Master mode – 2 = Slave mode • Bytes 4 and 5 = Reserved <p>Command 26 B0 = 1 sets these values.</p>	6	1																
172 report pulse sync output status (subcommand 2)	<p>Reports the status of pulse sync output. Send 2 data bytes.</p> <ul style="list-style-type: none"> • Bytes 0 and 1 = 2 (report pulse sync output status) <p>Returns 4 data bytes.</p> <ul style="list-style-type: none"> • Bytes 2 and 3 = Pulse sync output on or off <ul style="list-style-type: none"> – 1 = Pulse sync output off – 2 = Pulse sync output on • Bytes 4 and 5 = Reserved <p>Command 26 B0 = 2 sets these values.</p>	6	1																

Table 4-11. AE Host commands (Continued)


Command	Description	Data Bytes Sent	Data Bytes Returned
172 report slave input delay (subcommand 4)	Reports slave input delay time in μ s. Valid range is 0 to 100000. Send 2 data bytes. <ul style="list-style-type: none"> • Bytes 0 and 1 = 4 (report slave input delay) Returns 4 data bytes. <ul style="list-style-type: none"> • Bytes 2 through 5 = Slave input delay in μs  Important This parameter uses bytes 2 through 5; unsigned long Command 26 B0 = 4 sets these values.	6	1
172 report memory mode (subcommand 5)	Reports the unit memory mode settings. Send 2 data bytes. <ul style="list-style-type: none"> • Bytes 0 and 1 = 5 (report memory mode) Returns 4 data bytes. <ul style="list-style-type: none"> • Bytes 2 and 3 = Memory mode <ul style="list-style-type: none"> – 1 = RAM – 2 = NVRAM • Bytes 4 and 5 = Reserved Command 26 B0 = 5 sets these values.	6	1
172 report explicit enable mode (subcommand 6)	Reports explicit enable mode. Send 2 data bytes. <ul style="list-style-type: none"> • Bytes 0 and 1 = 6 (report explicit enable mode) Returns 4 data bytes. <ul style="list-style-type: none"> • Bytes 2 and 3 = Explicit enable mode <ul style="list-style-type: none"> – 1 = Implicit enable – 2 = Explicit enable • Bytes 4 and 5 = Reserved Command 26 B0 = 6 sets these values.	6	1

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
172 report pulsing on/off status (subcommand 7)	<p>Reports whether pulsing is on or off.</p> <p>Send 2 data bytes.</p> <ul style="list-style-type: none"> • Bytes 0 and 1 = 7 (report pulsing on/off status) <p>Returns 4 data bytes.</p> <ul style="list-style-type: none"> • Bytes 2 and 3 = Pulsing on/off status <ul style="list-style-type: none"> – 1 = Pulsing off – 2 = Pulsing on • Bytes 4 and 5 = Reserved <p>Command 26 B0 = 7 sets these values.</p>	6	1
172 report enable/disable pulsing status (subcommand 8)	<p>Reports the status of pulsing mode.</p> <p>Send 2 data bytes.</p> <ul style="list-style-type: none"> • Bytes 0 and 1 = 8 (report pulsing enable/disable status) <p>Returns 4 data bytes.</p> <ul style="list-style-type: none"> • Bytes 2 and 3 = Pulsing enable/disable status <ul style="list-style-type: none"> – 1 = Pulsing disabled – 2 = Pulsing enabled • Bytes 4 and 5 = Reserved <p>Command 26 B0 = 8 sets these values.</p>	6	1
193 report pulsing frequency	<p>Reports the pulsing frequency in Hz. Valid values range from 10 Hz to 2,000 Hz. The unit may store pulsing frequency values in either volatile or nonvolatile memory, depending on the current memory mode (see command 26). The unit reports the value from the currently active memory. This command is available in both master and slave modes.</p> <p>Returns 4 data bytes:</p> <ul style="list-style-type: none"> • Bytes 0 to 3 = Pulsing frequency in Hz. <p>Command 93 sets this value.</p>	0	4

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
<p>196 report pulsing duty cycle</p>	<p>Reports the pulsing duty cycle in increments of 1%. Valid values range from 10% to 90%. The unit may store pulsing duty cycle values in either volatile or nonvolatile memory, depending on the current memory mode (see command 26). The unit reports the value from the currently active memory. When operating in slave mode, the unit returns CSR 12, Feature Not Available.</p> <p>Returns 2 data bytes:</p> <ul style="list-style-type: none"> • Bytes 0 and 1= Pulsing duty cycle in % (on time) <p>Command 96 sets this value.</p>	0	2

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
<p>198 report software revision level</p>	<p>Reports the software revision level as a three-character ASCII string: one letter and two numbers. You can use this number in conjunction with the part number returned by command 130 to identify the software in the unit.</p> <p>Sending a request data byte is optional. If you issue command 198 with zero data bytes, it returns the Coldfire application firmware part number. Sending 1 data byte allows you to select the software part number to be returned.</p> <p>Send 1 data byte (8-bit value).</p> <ul style="list-style-type: none"> • Byte 0 = Software request <ul style="list-style-type: none"> – 0 = Coldfire application firmware revision – 1 = Motherboard FPGA firmware revision – 2 = Measurement board FPGA firmware revision – 4 = ColdFire bootloader firmware revision – 13 = Display board application firmware revision – 14 = Display board FPGA firmware revision – 15 = Display board bootloader firmware revision <p>Returns a 3-element ASCII character string:</p> <ul style="list-style-type: none"> • Byte 0 = ASCII revision level letter • Bytes 1 and 2 = ASCII revision level numerals (0 to 99) 	0 or 1	3 ASCII characters
<p>201 report unit on events</p>	<p>Reports the number of unit on events stored in nonvolatile memory. The unit increments the number of unit on events each time you supply AC power to the generator.</p> <p>Returns 4 data bytes (one 32-bit value).</p> <ul style="list-style-type: none"> • Bytes 0 through 3 = Number of unit on events. 	0	4

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned														
<p>202 report output on events</p>	<p>Reports the number of output on events. The unit increments the number of output on events each time you turn RF power on.</p> <p>Returns 4 data bytes (one 32-bit value).</p> <ul style="list-style-type: none"> • Bytes 0 through 3 = Number of output on events. 	0	4														
<p>203 report overtemperature events</p>	<p>Reports the number of overtemperature events stored in nonvolatile memory. The unit increments the number of overtemperature events each time the coldplate temperature exceeds the fault threshold.</p> <p>Returns 4 data bytes (one 32-bit value).</p> <ul style="list-style-type: none"> • Bytes 0 through 3 = Number of overtemperature events. 	0	4														
<p>204 report system control</p>	<p>Reports the IP address, default gateway, subnet mask, MAC ID, DHCP Enable, and fault or warning description.</p> <p>This command allows you to send subcommands. Send a value in the first two bytes that selects the parameter to report, and then send subcommands to report parameter values.</p> <table border="1" data-bbox="500 1241 1089 1612"> <thead> <tr> <th data-bbox="500 1241 708 1293">Byte 0 =</th> <th data-bbox="708 1241 1089 1293">Subcommand</th> </tr> </thead> <tbody> <tr> <td data-bbox="500 1293 708 1346">0</td> <td data-bbox="708 1293 1089 1346">Report IP address</td> </tr> <tr> <td data-bbox="500 1346 708 1398">1</td> <td data-bbox="708 1346 1089 1398">Report default gateway address</td> </tr> <tr> <td data-bbox="500 1398 708 1451">2</td> <td data-bbox="708 1398 1089 1451">Report subnet mask</td> </tr> <tr> <td data-bbox="500 1451 708 1503">3</td> <td data-bbox="708 1451 1089 1503">Report MAC ID</td> </tr> <tr> <td data-bbox="500 1503 708 1556">5</td> <td data-bbox="708 1503 1089 1556">Report DHCP client enable</td> </tr> <tr> <td data-bbox="500 1556 708 1612">92</td> <td data-bbox="708 1556 1089 1612">Report warning or fault description</td> </tr> </tbody> </table>	Byte 0 =	Subcommand	0	Report IP address	1	Report default gateway address	2	Report subnet mask	3	Report MAC ID	5	Report DHCP client enable	92	Report warning or fault description	1 to 4	Variable
Byte 0 =	Subcommand																
0	Report IP address																
1	Report default gateway address																
2	Report subnet mask																
3	Report MAC ID																
5	Report DHCP client enable																
92	Report warning or fault description																

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
204 report IP address (subcommand 0)	<p>Reports the unit network IP address. The unit stores the IP address in nonvolatile memory and restores it each time you turn the unit on. Note that the unit returns the IP address LSB first; that is, Byte 0 = least significant octet of the address.</p> <p>Send 1 data byte.</p> <ul style="list-style-type: none"> • Byte 0 = 0 (report IP address) <p>Returns 4 data bytes:</p> <ul style="list-style-type: none"> • Bytes 0 through 3 = Network IP address <p>Set this value with command 71; B0 = 0.</p>	1	4
204 report default gateway address (subcommand 1)	<p>This command reports the default gateway address. The unit stores the default gateway address in nonvolatile memory and restores it each time you turn the unit on. Note that the unit returns the default gateway address LSB first; that is, Byte 0 = least significant octet of the address.</p> <p>Send 1 data byte.</p> <ul style="list-style-type: none"> • Byte 0 = 1 (report default gateway address) <p>Returns 4 data bytes:</p> <ul style="list-style-type: none"> • Bytes 0 through 3 = Default gateway address <p>Set this value with command 71; B0 = 1.</p>	1	4
204 report subnet mask (subcommand 2)	<p>Reports the network subnet mask. The unit stores the subnet mask in nonvolatile memory and restores it each time you turn the unit on. Note that the unit returns the subnet mask LSB first; that is, Byte 0 = least significant octet of the mask.</p> <p>Send one data byte.</p> <ul style="list-style-type: none"> • Byte 0 = 2 (report subnet mask) <p>Returns 4 data bytes:</p> <ul style="list-style-type: none"> • Bytes 0 through 3 = Subnet mask <p>Set this value with command 71; B0 = 2.</p>	1	4

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
<p>204 report MAC ID (subcommand 3)</p>	<p>Reports the unit MAC ID. The unit stores MAC ID in nonvolatile memory; you cannot change it. The unit sends the MAC ID LSB first; that is, Byte 0 is the least significant byte.</p> <p>Send 1 data byte.</p> <ul style="list-style-type: none"> • Byte 0 = 3 (report MAC ID) <p>Returns 6 data bytes:</p> <ul style="list-style-type: none"> • Bytes 0 through 5 = MAC ID. <p>Set this value with command 71; B0 = 3.</p>	<p>1</p>	<p>6</p>
<p>204 report DHCP client enable (subcommand 5)</p>	<p>Reports the unit network DHCP client enable mode. The unit stores the DHCP client enable mode in nonvolatile memory and restores it each time you turn the unit on.</p> <p>Send 1 data byte:</p> <ul style="list-style-type: none"> • Byte 0 = 5 (report DHCP client enable mode) <p>Returns 1 data byte:</p> <ul style="list-style-type: none"> • Byte 0 = DHCP client enable mode: <ul style="list-style-type: none"> – 0 = Disabled – 1 = Enabled <p>Set this value with command 71.</p>	<p>1</p>	<p>1</p>

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
204 report warning or fault description (subcommand 92)	<p>Reports the description for a warning or fault that you specify.</p> <p>Send 4 data bytes:</p> <ul style="list-style-type: none"> • Byte 0 = 92 (report warning or fault description) • Byte 1 = Type of description. Values: <ul style="list-style-type: none"> – 1 or 3 = Fault – 2 or 4 = Warning • Bytes 2 and 3 = Fault code <p>When byte 1 = 1 or 2, returns as many as 250 ASCII characters.</p> <p>When byte 1 = 3 or 4, returns exactly 80 ASCII characters. This is the fixed length version of the command. It always returns exactly 80 characters. If the description string is less than 80 characters, the remainder of the response packet is padded with NULL characters. If the description string is more than 80 characters, the string is truncated to fit into the packet and will not be NULL terminated. If the description string is exactly 80 characters, the response packet will not be NULL terminated.</p>	4	Variable: as many as 250 ASCII characters Fixed: 80 ASCII characters
205 report unit run time	<p>Reports the unit run time in seconds. The unit increments the run time each second RF power is turned on. The unit stores the unit run time in nonvolatile memory.</p> <p>Returns 4 data bytes (one 32-bit value).</p> <ul style="list-style-type: none"> • Bytes 0 through 3 = Unit run time in seconds. 	0	4
206 report total energy output	<p>Reports the total energy output. The unit increments this number each time it delivers a full kWh of energy to the load. The unit also stores partial kWh internally in nonvolatile memory.</p> <p>Returns 4 data bytes (one 32-bit value).</p> <ul style="list-style-type: none"> • Bytes 0 through 3 = Total energy output in kWh 	0	4

Table 4-11. AE Host commands (Continued)


Command	Description	Data Bytes Sent	Data Bytes Returned
<p>212 report serial port address and baud rate</p>	<p>Reports the AE Bus address, baud rate, and RS-485 mode for the Host port. You can only issue this command from the Host port.</p> <p> Important The AE Bus broadcast mode is not supported. Therefore, if the AE Bus address is set to 0, the unit will report the default address of 1.</p> <p>Send 1 data byte.</p> <ul style="list-style-type: none"> • Byte 0 = Serial port selection. <ul style="list-style-type: none"> – 1= Unused – 2 = Host port <p>Returns 3 data bytes (32-bit value):</p> <ul style="list-style-type: none"> • Byte 0 = AE Bus address. 1 to 31 • Byte 1 = Baud rate. Reported values: <ul style="list-style-type: none"> – 0 = 2400 baud – 1 = 4800 baud – 2 = 9600 baud – 3 = 19200 baud – 4 = 38400 baud – 5 = 57600 baud – 6 = 115200 baud • Byte 2 = RS-485 mode. <ul style="list-style-type: none"> – 0 = Off – 1 = On <p>Set this value with command 69.</p>	<p>1</p>	<p>3</p>

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
<p>215 report real time clock</p>	<p>Reports the system real time clock time and date. The data received is encoded in Binary Coded Decimal (BCD) format; for example: if the value for seconds is 48, the data value received will be 0x48. The real time clock features automatic leap year compensation for years up to 2100.</p> <p>Returns 7 data bytes (8-bit values):</p> <ul style="list-style-type: none"> • Byte 0 = Seconds (valid values are 0 to 59) • Byte 1 = Minutes (valid values are 0 to 59) • Byte 2 = Hours (valid values are 0 to 23) • Byte 3 = Day of the week (valid values are 1 to 7) <ul style="list-style-type: none"> – 1 = Sunday – 2 = Monday – 3 = Tuesday – 4 = Wednesday – 5 = Thursday – 6 = Friday – 7 = Saturday • Byte 4 = Date (valid values are 1 to 31) • Byte 5 = Month (valid values are 1 to 12) • Byte 6 = Year (valid values are 00 to 99) <p>Set this value with command 70.</p>	0	7
<p>219 report condensed generator snapshot data</p>	<p>Reports a selected collection of data identical to the data reported by the individual commands.</p> <p>Returns 28 data bytes:</p> <ul style="list-style-type: none"> • Bytes 0 and 1 (16-bit value) = Forward power in watts (see command 165). • Bytes 2 and 3 (16-bit value) = Reflected power in watts (see command 166). • Bytes 4 and 5 (16-bit value) = Delivered power in watts (see command 167). <p>(Continued on next page)</p>	0	28

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
	<p>(Continued from previous page)</p> <ul style="list-style-type: none"> • Bytes 6 and 7 (16-bit value) = Power set point in tenths of watts (see command 8). • Bytes 8 through 11 (32-bit value) = Real impedance in hundredths of ohms (see command 225) • Bytes 12 through 15 (32-bit value) = Reactive impedance in hundredths of ohms (see command 225) • Bytes 16 through 19 (32-bit value) = Actual frequency in kHz (see command 147) • Bytes 20 through 23 (four 8-bit values) = Process status (see command 162) • Byte 24 (8-bit value) = Regulation mode (see command 154) • Byte 25 (8-bit value) = Control mode (see command 155) • Bytes 26 and 27 (16-bit value) = Coldplate temperature in degrees C (see command 228) 		
221 report PIN number	Returns a NULL-terminated ASCII string that represents the AE product identification number (PIN)	0	32 ASCII characters

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
223 report fault or warning code list	<p>Reports as many as 20 codes representing active or latched faults or warnings that exist within the unit.</p> <p>Send 1 data byte (8-bit value):</p> <ul style="list-style-type: none"> • 1 or 3 = Reports faults • 2 or 4 = Reports warnings <p>If no faults are active, the packet data length is 1, which is CSR code 0 (no faults).</p> <p>If the sent data byte value = 1 or 2, returns a variable number of data bytes based on the number of active or latched faults or warnings.</p> <p>If faults are active or latched, the response packet reports 2 data bytes for each error code. For example, if a single fault is active, the packet contains 2 data bytes; if two faults are active the packet data length is 4 data bytes; and so on.</p> <p>If the sent data byte value = 3 or 4, returns a fixed-length packet of 40 bytes. If faults are active or latched, the response packet reports 2 data bytes for each error code. If fewer than 20 faults or warnings are active or latched, the remainder of the packet is 0.</p>	1	Variable or CSR code 0, if no fault exists
225 report impedance	<p>Reports the real and reactive impedance in hundredths of ohms.</p> <p>Returns 8 data bytes (two 32-bit values):</p> <ul style="list-style-type: none"> • Bytes 0 through 3 = Signed long integer value of the real impedance • Bytes 4 to 7 = Signed long integer value of the reactive impedance 	0	8
228 report coldplate temperature	<p>Reports the coldplate temperature (in tenths of °C).</p> <p>Send 0 data bytes.</p> <p>Returns 2 data bytes = Specified signed temperature value in tenths of °C</p>	0	2

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
<p>231 report unit serial or part number</p>	<p>If you send 0 data bytes, reports the unit serial number; if you send 1 data byte, you can request either the unit serial number or the unit part number. Send 0 data bytes. Returns 4 data bytes (32-bit value) representing the unit serial number. Send 1 data byte.</p> <ul style="list-style-type: none"> • Byte 0 = Value to be returned. <ul style="list-style-type: none"> – 0 = Requests unit serial number – 1 = Requests unit part number <p>Returns as many as 12 ASCII characters representing the unit part number (315 ...) or the unit serial number.</p>	<p>0</p>	<p>4, or as many as 12</p>
<p>244 report diagnostic status</p>	<p>Reports the results of the diagnostic self test. Send 1 data byte.</p> <ul style="list-style-type: none"> • Byte 0 = 1 (report diagnostic status) <p>Returns 5 data bytes.</p> <ul style="list-style-type: none"> • Byte 0 = Status code. <ul style="list-style-type: none"> – 0 = Diagnostics in progress – 1 = Diagnostic test complete – passed – 2 = Diagnostic test complete – failed – 3 = Diagnostic test interrupted – 4 = Diagnostic mode disabled • Byte 1 = Failure status (bit flags) <ul style="list-style-type: none"> – Bit 0 = Forward power – Bit 1 = Rectified bus voltage – Bit 2 = Test voltage – Bits 3 through 7 = Unused • Bytes 2 through 4 = Unused 	<p>1</p>	<p>5</p>

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned	
248 report frequency tuning parameters	Reports frequency tuning parameter values. This command allows you to send subcommands. Send a value in the first two bytes that selects the parameter to set, and then send subcommands to set parameter values. The subcommands are 16-bit commands ranging in value from 1 to 65535. Your unit may not have all the features in this list. If you issue a command for a feature that your unit does not have, the unit returns CSR 12, Feature Not Available.	variable	variable	
	Byte 0 =			Subcommand
	1			Report frequency step minimum
	2			Report frequency step maximum
	3			Report step up gain
	4			Report step down gain
	6			Report gamma threshold high
	7			Report gamma threshold low
	8			Report maximum tuning count
	22			Report tuning step time
	23			Report tuning gain delay
248 report frequency step minimum (subcommand 1)	Reports the frequency step minimum used during the tuning process. This is the smallest step size used by the tuning algorithm when making frequency step changes. Send 2 data bytes. <ul style="list-style-type: none"> Bytes 0 and 1 = 1 (report frequency step minimum) Returns 4 data bytes: <ul style="list-style-type: none"> Bytes 0 through 3 = Frequency step minimum in Hz (unsigned long) Set this value with command 118 ; B0 = 1.	2	4	

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
248 report frequency step maximum (subcommand 2)	<p>Reports the frequency step maximum used during the tuning process. This is the largest step size used by the tuning algorithm when making frequency step changes.</p> <p>Send 2 data bytes.</p> <ul style="list-style-type: none"> • Bytes 0 and 1 = 2 (report frequency step maximum) <p>Returns 4 data bytes:</p> <ul style="list-style-type: none"> • Bytes 0 through 3 = Frequency step maximum in Hz (unsigned long) <p>Set this value with command 118; B0 = 2.</p>	2	4
248 report step up gain (subcommand 3)	<p>Reports the step up gain used during the tuning process. This parameter sets the magnitude of frequency step increase when the error is decreasing (frequency step size is increasing). A value of n sets the gain to 2^n.</p> <p>Send 2 data bytes.</p> <ul style="list-style-type: none"> • Bytes 0 and 1 = 3 (report step up gain) <p>Returns 4 data bytes:</p> <ul style="list-style-type: none"> • Bytes 0 through 3 = Step up gain (unsigned short) <p>Set this value with command 118; B0 = 3.</p>	2	4
248 report step down gain (subcommand 4)	<p>Reports the step down gain used during the tuning process. This parameter sets the magnitude of frequency step decrease when the error is increasing (frequency step size is decreasing). A value of n sets the gain to 2^{-n}.</p> <p>Send 2 data bytes.</p> <ul style="list-style-type: none"> • Bytes 0 and 1 = 4 (report step down gain) <p>Returns 4 data bytes:</p> <ul style="list-style-type: none"> • Bytes 0 through 3 = Step down gain (unsigned short) <p>Set this value with command 118; B0 = 4.</p>	2	4

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
248 report gamma threshold high (subcommand 6)	<p>Reports the gamma threshold high used during the tuning process. The generator uses the high threshold after first attempting (and failing) to achieve a tuning criteria less than the low threshold. The generator also uses it as the threshold to determine when to begin retuning.</p> <p>Send 2 data bytes.</p> <ul style="list-style-type: none"> Bytes 0 and 1 = 6 (report gamma threshold high) <p>Returns 2 data bytes:</p> <ul style="list-style-type: none"> Bytes 0 and 1 = Gamma threshold high (unsigned short) <p>Set this value with command 118; B0 = 6.</p>	2	2
248 report gamma threshold low (subcommand 7)	<p>Reports the gamma threshold low used during the tuning process. The generator first attempts to achieve a tuning criteria less than the low threshold. If it fails, it tries the high threshold next, after the maximum tuning counter has expired.</p> <p>Send 2 data bytes.</p> <ul style="list-style-type: none"> Bytes 0 and 1 = 7 (report gamma threshold low) <p>Returns 2 data bytes:</p> <ul style="list-style-type: none"> Bytes 0 and 1 = Gamma threshold low (unsigned short) <p>Set this value with command 118; B0 = 7.</p>	2	2
248 report maximum tuning count (subcommand 8)	<p>Reports the maximum tuning count used during the tuning process. This reports the number of attempts to tune to the low threshold before giving up and trying the high threshold.</p> <p>Send 2 data bytes.</p> <ul style="list-style-type: none"> Bytes 0 and 1 = 8 (maximum tuning count) <p>Returns 2 data bytes:</p> <ul style="list-style-type: none"> Bytes 0 and 1 = Maximum tuning count (unsigned short) <p>Set this value with command 118; B0 = 8.</p>	2	2

Table 4-11. AE Host commands (Continued)

Command	Description	Data Bytes Sent	Data Bytes Returned
248 report tuning step time (subcommand 22)	Reports tuning step time. Valid values range from 8 μ s to 4096 μ s. Send 2 data bytes. <ul style="list-style-type: none"> • Bytes 0 and 1 = 22 (tuning step time) Returns 2 data bytes. <ul style="list-style-type: none"> • Bytes 0 and 1 = Tuning step time in μs. Set this value with command 118 ; B0 = 22.	2	2
248 report tuning gain delay (subcommand 23)	Reports tuning gain delay, which is the delay before increasing the step size after a change in direction. Valid values range from 0 to 7. Send 2 data bytes. <ul style="list-style-type: none"> • Bytes 0 and 1 = 23 (tuning gain delay) Returns 2 data bytes. <ul style="list-style-type: none"> • Bytes 0 and 1 = Tuning gain delay Set this value with command 118 ; B0 = 23.	2	2

Installation, Setup, and Operation

PREPARING TO INSTALL THE UNIT

Spacing and Mounting Requirements

For proper cooling, mount the unit so that there is 1.3 cm (0.51") minimum clearance on the right side of the unit and 10.16 cm (4") minimum clearance at the rear. Any blockages could cause overheating to occur.

For rack installation, ensure that there are supports at the front and the rear of the unit. Do not use the rack ears to support the weight of the unit.

The lifting brackets can be removed before installation if you do not need them. Use care when removing them as the edges can be sharp.

**DANGER:**

RISK OF DEATH OR BODILY INJURY. Disconnect and lockout/tagout all sources of input power before working on this unit or anything connected to it.

Unit Drawings

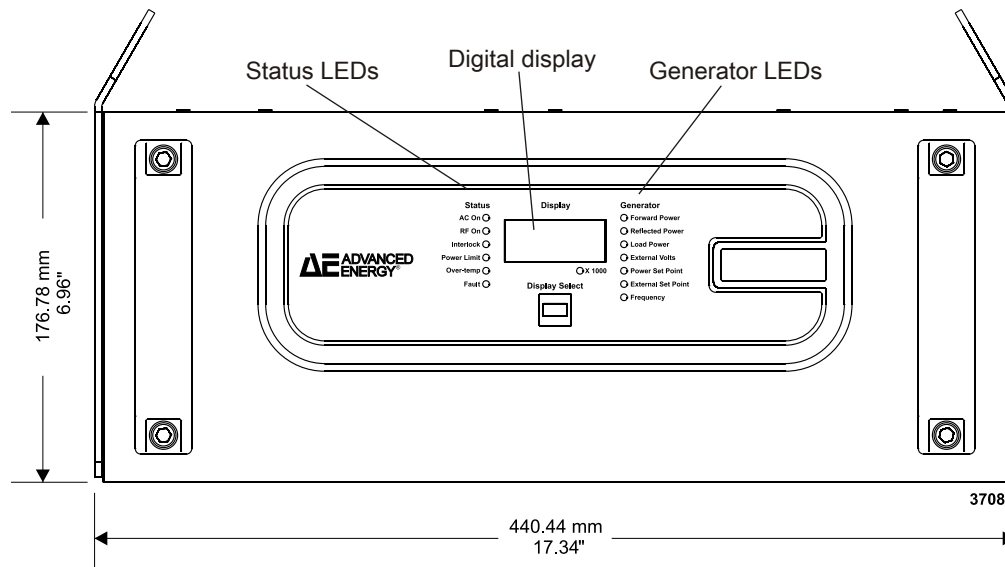


Figure 5-1. Front panel

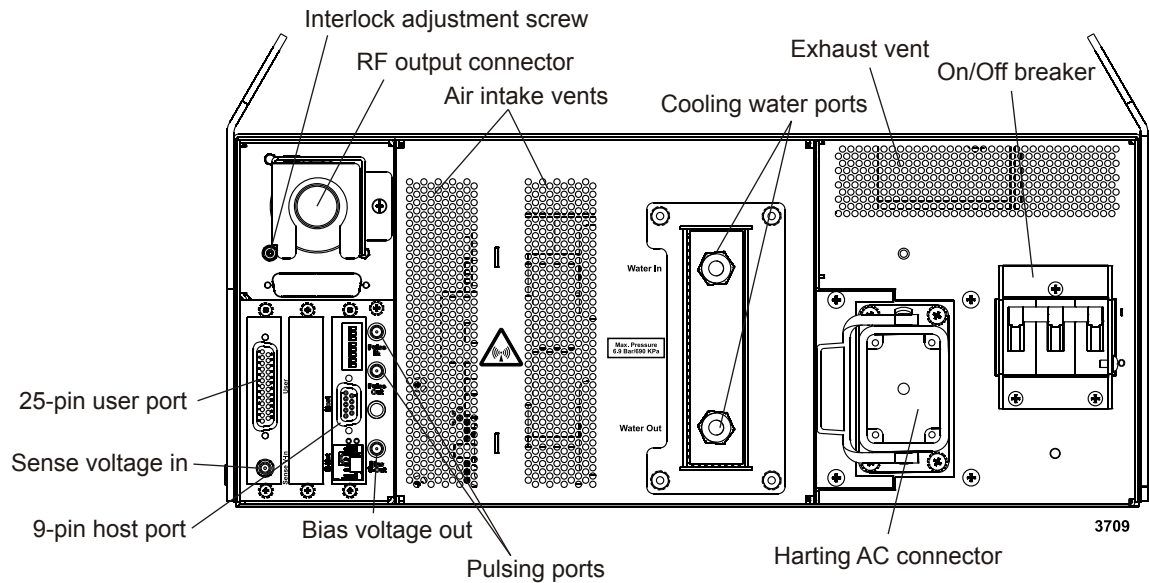


Figure 5-2. Rear panel

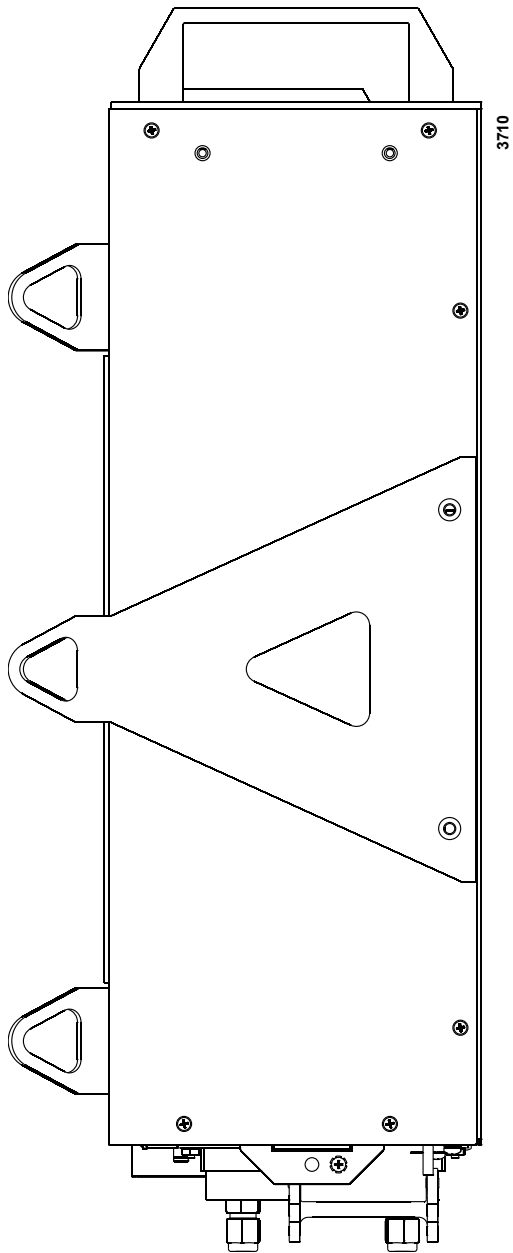


Figure 5-3. Left side

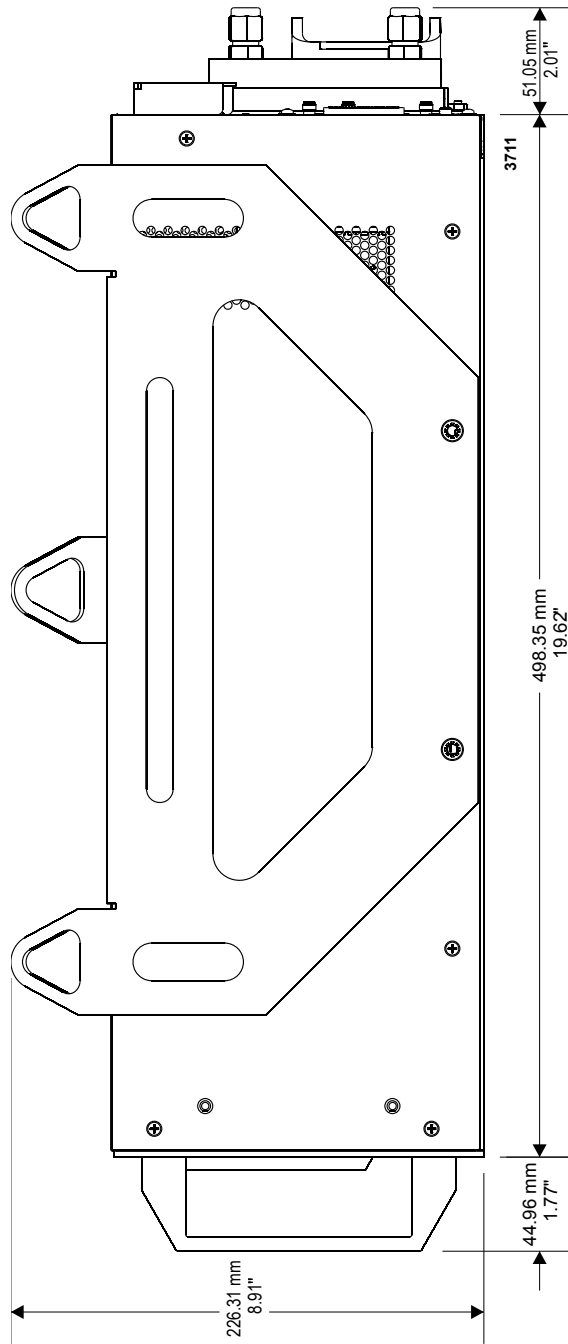


Figure 5-4. Right side

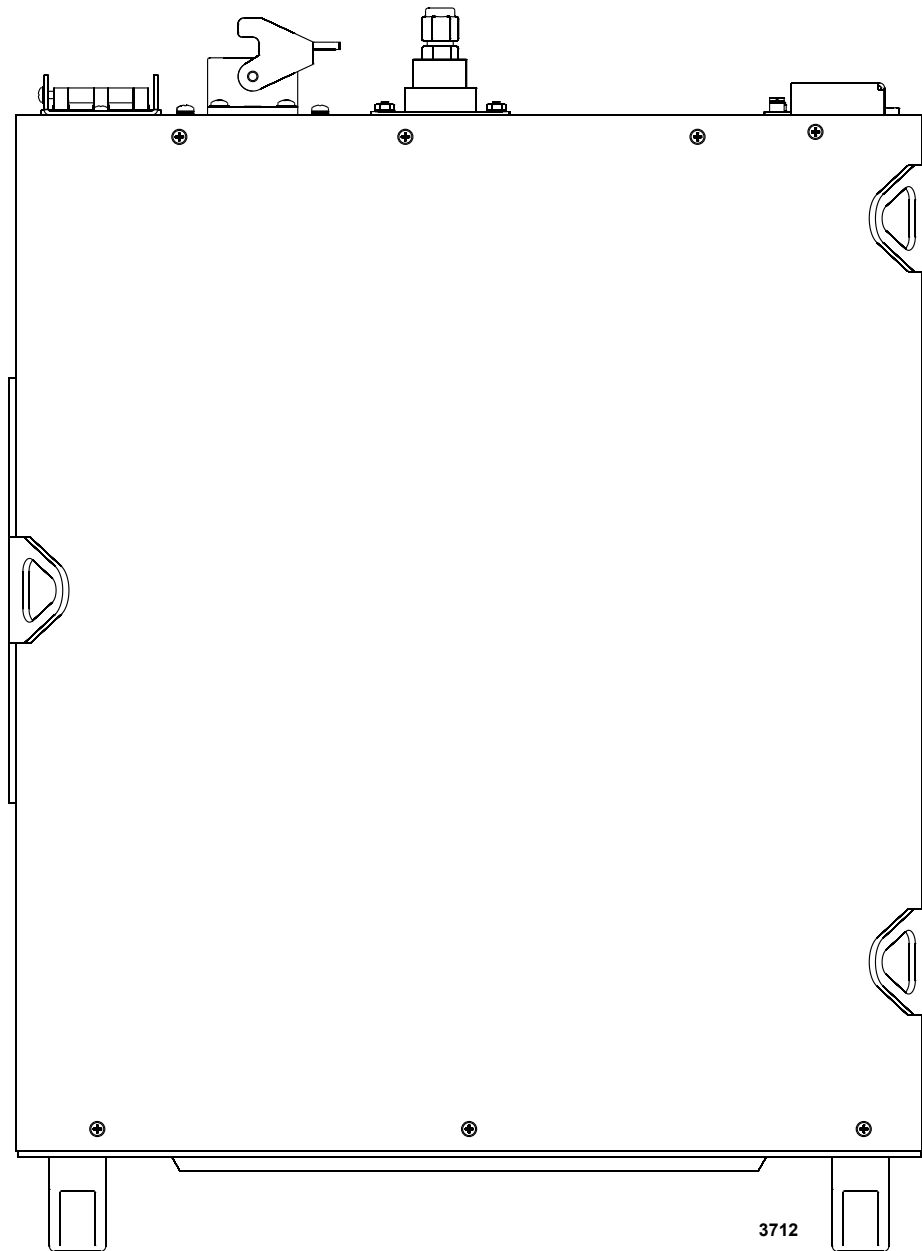


Figure 5-5. Top side

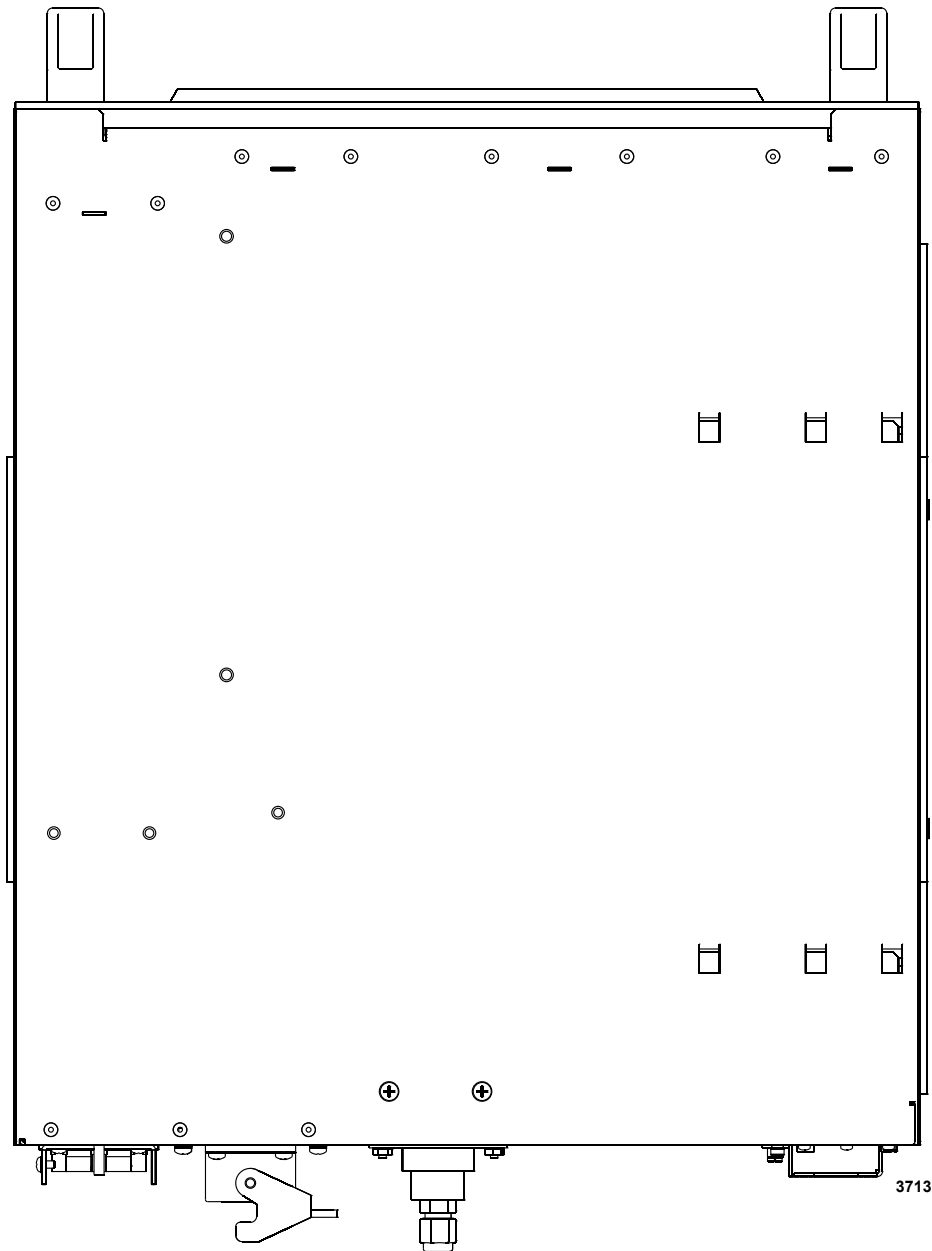


Figure 5-6. Bottom side

Installation Requirements

Install this unit according to the following requirements.



DANGER:

RISK OF DEATH OR BODILY INJURY. Disconnect and lockout/tagout all sources of input power before working on this unit or anything connected to it.

**WARNING:**

Maintenance personnel must receive proper training before installing, troubleshooting, or maintaining high-energy electrical equipment. Potentially lethal voltages could cause death, serious personal injury, or damage to the equipment. Ensure that all appropriate safety precautions are taken.

Unpacking the Unit

- Unpack and inspect the unit carefully, looking for obvious physical damage.

If no damage is apparent, proceed with the unit installation and setup. If you do see signs of shipping damage, contact Advanced Energy and the carrier immediately. Save the shipping container for submitting necessary claims to the carrier.

INSTALLING THE UNIT

Grounding

**WARNING:**

Do not attempt to turn on power until the PDX II 2000 generator is grounded.

TO GROUND THE UNIT

- You must make all ground connections before operating the PDX II 2000 generator. The unit provides one 10-32 stud with nut and star washer. A suitable chassis ground connection made to this stud prevents or minimizes radio frequency interference.

Connecting Cooling Water

This generator is water cooled. Do not operate the unit until you have connected cooling water and met the cooling requirements.

**CAUTION:**

If you connect the cooling water on multiple units in series, be sure that input water temperature to all units is less than the maximum input water temperature.



CAUTION:

If you connect the cooling water on multiple units in a series, be sure that the water flow rate to all units meets the unit specifications.



CAUTION:

Do not use de-ionized water for cooling purposes. De-ionized water causes both corrosion and erosion of cooling manifolds.



CAUTION:

Do not apply more than 54.2 N-m (40 ft-lb) to water fittings. Water leakage and damage to the unit could result.

The water fittings used on the PDX II 2000 generator are 3/8" NPT female.

TO CONNECT COOLING WATER

1. Make input and output water connections and tighten securely.
2. Turn on the water and ensure that there are no leaks.
3. Be sure that the flow rate, pressure, and temperature are within the minimum specifications required to operate the generator.

Connecting Output Power

CALIBRATING THE RF OUTPUT INTERLOCK

The PDX II 2000 generator is shipped with a blue tag on the rear panel of the unit that describes RF output interlock adjustment. The RF output interlock must be adjusted before beginning unit operation. Failure to perform this interlock adjustment on the generator output connector may have one of the following possible outcomes:

- Attachment of the RF output HN connector will not result in a satisfactory interlock condition.
- Attachment of the RF output HN connector will damage the interlock switch inside the generator (requiring it to be sent back for repair).

If there is any change of generator or HN connector on the system, the output interlock adjustment procedure will need to be repeated.



Important

The standard HN connector to be used for interlock adjustment in the AE factory is Pasternack PE9210.

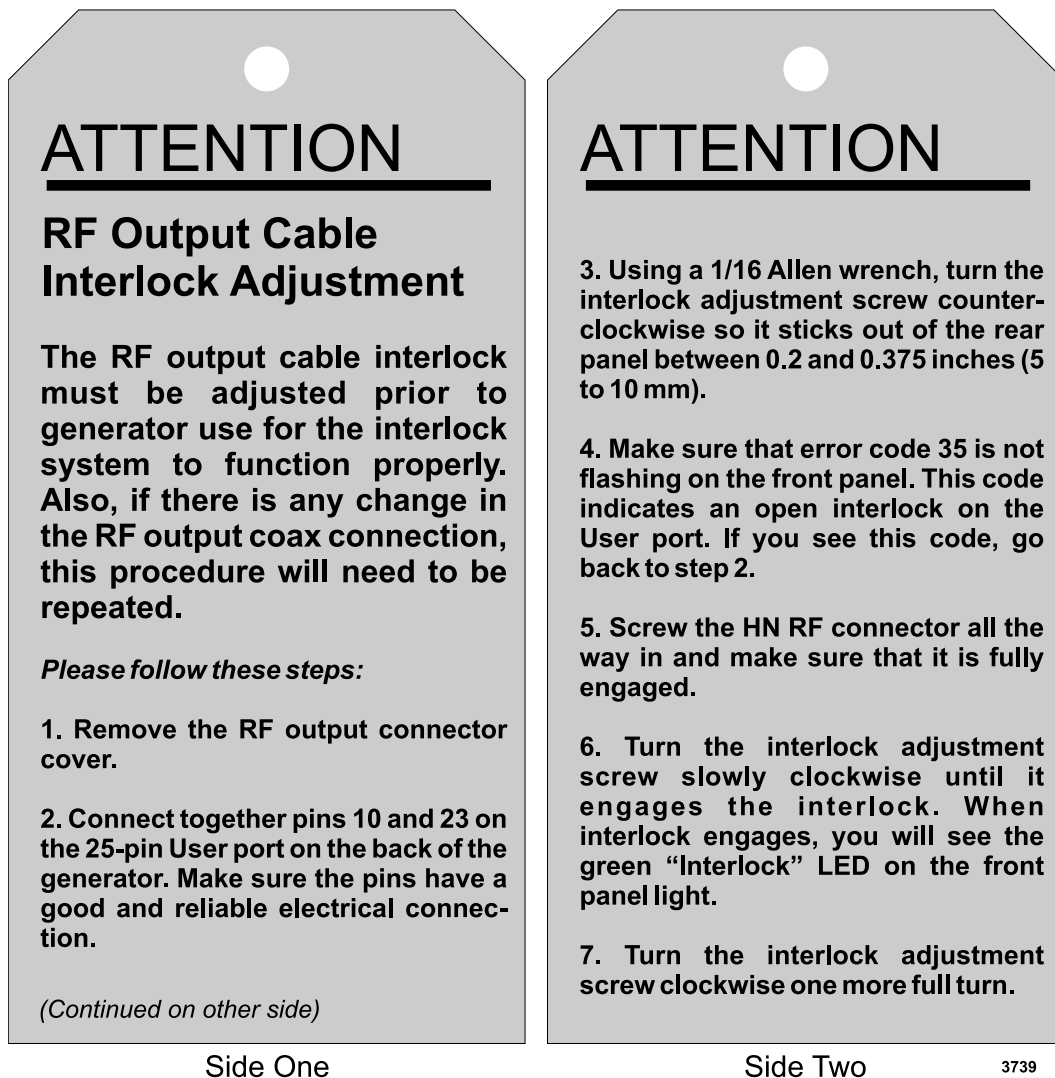


Figure 5-7. RF output connector interlock adjustment tag

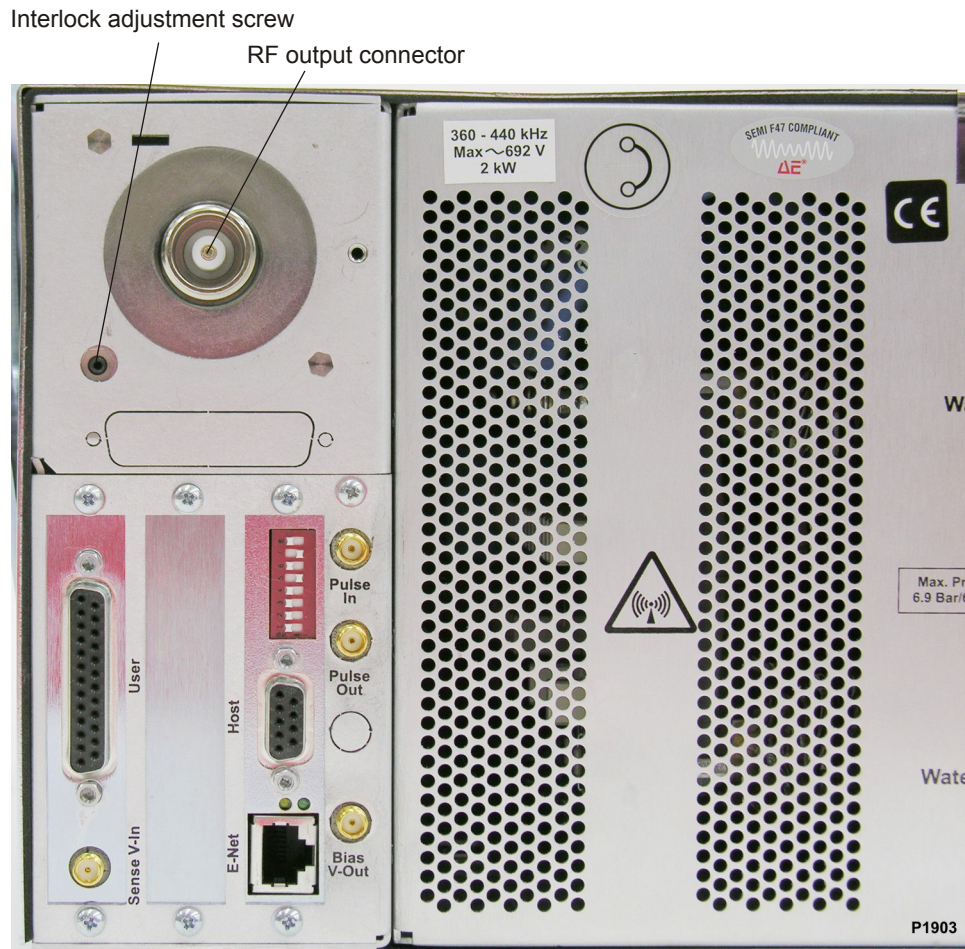


Figure 5-8. RF output connector and interlock adjustment screw

To Adjust the RF Output Cable Interlock:

1. Remove the RF output connector cover.
2. Connect together pins 10 and 23 on the 25-pin **User** port on the back of the generator. Make sure the pins have a good and reliable electrical connection.
3. Using a 1/16 Allen wrench, turn the interlock adjustment screw counterclockwise so it sticks out of the rear panel between 5 mm to 10 mm (0.2 and 0.375 inches).
4. Make sure that error code **35** is not flashing on the front panel. This code indicates an open interlock on the **User** port. If you see this code, go back to step 2.
5. Screw the HN RF connector all the way in and make sure that it is fully engaged.
6. Turn the interlock adjustment screw slowly clockwise until it engages the interlock.

When interlock engages, the green **INTERLOCK** LED on the front panel will light.

7. Turn the interlock adjustment screw clockwise one more full turn.


CONNECTING OUTPUT POWER AND SATISFYING RF CONNECTOR INTERLOCK



WARNING:

This device must be installed so that the output power connection is inaccessible to the user.

The PDX II 2000 generator output connector is a female HN coaxial. The center pin provides the RF output connection, while the outer cable provides a ground connection.

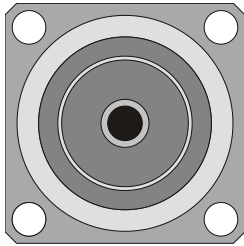

1711

Figure 5-9. RF output connector

To Connect Output Power and Satisfy Interlock



Important

Be certain to complete the RF output interlock calibration procedure before connecting output power.

1. Remove the output power connector cover from the rear of the generator.
2. Slide the output power cable through the output power connector cover, and connect the output power cable connector to the output power connector on the unit.

Make sure to thread the connection carefully and that the connector is fully mated.

3. Install the output power connector cover over the unit connectors.
4. Connect the output power cable to the load.

The output power cable should be a RG-393 cable terminated with an HN connector. Be sure to use as short a cable length as possible.

When the output power connector is secure, interlock is engaged and RF output can be enabled. If the cable connector interlock is not satisfied, the unit cannot turn on RF output.

Connecting AC Input Power

The PDX II 2000 generator provides a Harting Han-Modular 4-pin, 70 A male connector for AC power input.

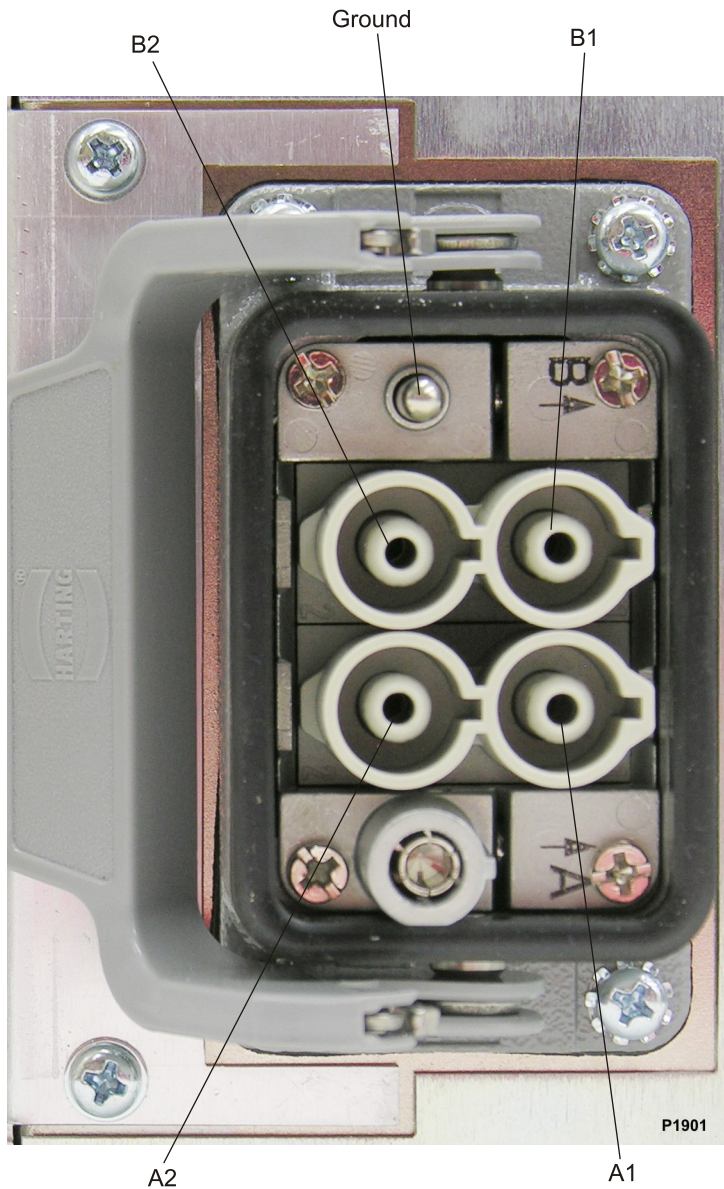


Figure 5-10. Harting Han modular 70 A AC power input connector

Table 5-1. Harting 70 A connector pin descriptions

Pin	Description
A1	Phase
A2	Phase
B1	Phase
B2	Not connected
Gnd	Ground

TO CONNECT AC INPUT POWER WITH THE HARTING CONNECTOR

1. Ensure that the AC line that you are connecting the unit to is a balanced, three-phase AC line.

Connection to an unbalanced line could negatively impact the dynamic performance of this device and its viable range of operation.

2. Ensure that the AC power circuit breaker to the connector is switched off (lockout/tagout procedures are strongly advised).
3. Connect a properly wired Harting female connector, and lock it in place by closing the latch.

Connecting I/O and Auxiliary Connectors



DANGER:

RISK OF DEATH OR BODILY INJURY. Disconnect and lockout/tagout all sources of input power before working on this unit or anything connected to it.



CAUTION:

Do not connect any power to this unit without first connecting cooling water and ensuring there are no leaks.

Depending on your process and the PDX II 2000 generator configuration, connect one or more of the I/O or auxiliary ports to communicate with the unit.

Table 5-2. I/O and auxiliary ports

Port	Description	For More Information, See ...
User	Allows analog/digital communication through voltage signals	25-Pin User Port
Host	Allows serial communications with a computer using AE Bus communications protocol	AE Bus Host Interface

Connecting For External Voltage Regulation Mode

In external voltage regulation mode (also referred to as DC bias regulation), the generator regulates on an external voltage rather than output power. The external voltage feeds into the generator through an SMA connector, **Sense V-In**, located on the back panel. The generator adjusts RF output voltage to make voltage coming to the **Sense V-In** connector to be equal to the voltage on pin 5, *SET POINT*, of the **User** port.

The PDX II 2000 generator is designed to be used with the AE Low Frequency Fixed Match. This match has an output where the RF output voltage is scaled so 10 VDC = 2000 V pk-pk.

If no connection on **Sense V-in** is present, the generator will read the peak to peak voltage as 2000 V. If you are in voltage control mode, this voltage will show on the front panel if you scroll to the **External volts** generator LED. You can also read peak to peak voltage on the **Sense V-in** connector with host port command **168**.

- Minimum voltage set point in this mode = 0.1 V
- Maximum forward power in the external voltage regulation mode = 1800 W

The external voltage scaling may be changed using host command **9**, **set maximum external feedback value**, when using a match other than the AE Low Frequency Fixed Match. The user can also limit the usable range of the bias voltage by using host command **6**, **set user external feedback limit**.

The output voltage at the **Bias Voltage Out** SMA connector is proportional to the input voltage of the **Sense V-In** connector. 0 V input voltage at the **Sense V-In** connector gives 0 V output at the **Bias Voltage Out** connector. 10 V input voltage gives -5 V output. If input voltage is pulsing (with pulsing RF), output voltage is constant (DC).

FRONT PANEL FUNCTIONS

Using the Front Panel to Monitor Unit Status and Unit Operating Data

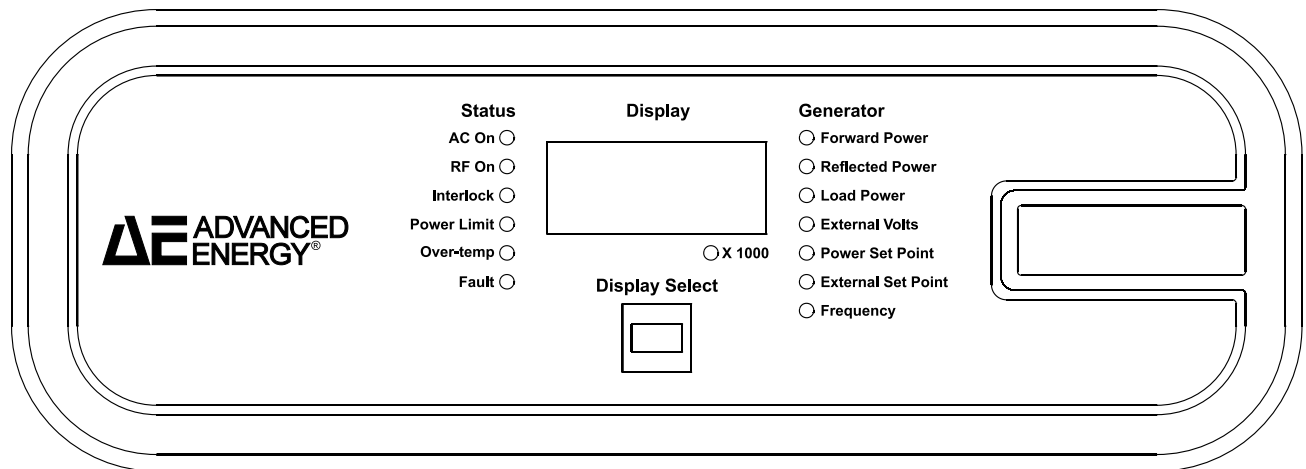


Figure 5-11. Front panel display with Status and Generator LEDs

The PDX II 2000 generator does not provide an operator control panel. All power, control, and water connections are made at the rear of the unit. Six **Status** LEDs are visible from the front of the unit for monitoring the status of the generator.

You can also monitor basic operating data on the front panel of your unit using the seven segment, 4-digit numeric display and the **Generator** LEDs. To change the display, push the **Display Select** button below the numeric display. Push the **Display Select** button multiple times to scroll through the **Generator** LED list. When a particular **Generator** LED is lit, the display screen will show the current operating data for that parameter.

LED and Numeric Display Behavior When a Fault is Present

When a fault is present the **Fault** LED lights. All LEDs in the **Generator** column are unlit. The **Display Select (Generator LED scroll)** button is disabled. Active error codes are displayed on the numeric display. The display scrolls through the active error codes, showing each for about one second. If there is only one active error code, it is displayed continuously.

LED and Numeric Display Behavior When Interlock is Not Satisfied

When interlock is closed, the **Interlock** LED lights. When interlock is open, the **Interlock** LED is unlit, and the **Fault** LED is lit. Depending on what is open in the interlock chain, you may see these error codes scroll on the numeric display:

- Error code **30**: Interlock is open (always displays when any interlock is open)
- Error code **35**: **User** port interlock is open (may display)
- Error code **36**: RF cable interlock is open (may display)

Status LED Indicators

Table 5-3. Status LED indicators

Status LED	Description
AC On	When lit, this green LED indicates that AC power is on.
RF On	When lit, this green LED indicates that RF power is enabled. Depending on the selected set point value, actual RF power may or may not be present at the output connector when this LED is lit.
Interlock	When lit, this green LED indicates that all interlock criteria are satisfied: <ul style="list-style-type: none"> • The interlock pins on the User port are connected. • The cable is firmly connected to the RF output connector. When this LED is lit, the unit is ready to supply output power.

Table 5-3. Status LED indicators (Continued)

Status LED	Description
Power Limit	When unlit, this yellow LED indicates that the unit is able to satisfy the requested set point power within $\pm 1\%$ and 3 W. When lit, this yellow LED indicates that the unit is unable to satisfy the requested set point due to a limit or alarm condition detected by the generator. Some of the conditions that can cause an out-of-set-point condition are high VSWR and output voltage or current limits.
Over-temp	When lit, this yellow LED indicates that the unit's internal temperature has exceeded its allowable level. The unit's output power will be disabled until the temperature falls below the internal temperature limit and the RF on command is toggled.
Fault	When lit, this yellow LED indicates that the unit has a fault condition. The display will scroll through all error codes which caused the fault. While fault conditions are active, the unit's output power will be disabled. Once the fault condition is cleared, send an RF off command and then an RF on command, and output will be enabled.

Generator LEDs

Table 5-4. Generator LEDs

Generator LED	Display Value Description
Forward Power	Displays forward power in watts.
Reflected Power	Displays reflected power in watts.
Load Power	Displays load power in watts.
External Volts	Displays voltage on the SMA connector Sense Voltage In in volts, multiplied by 200 (1 V is displayed as 200). If nothing is connected to the Sense Voltage In connector, the display shows 2000.
Power Set Point	Displays power set point in watts when the unit is in power control mode. When the unit is in voltage control mode, the display will be dark when you scroll to this LED.
External Set Point	Displays the voltage set point in volts, multiplied by 200 (1 V is displayed as 200) when the unit is in voltage control mode. When the unit is in power control mode, the display will be dark when you scroll to this LED.
Frequency	Displays output frequency in kHz.

FIRST TIME OPERATION

Minimum Operating Requirements

The PDX II 2000 generator provides two communication interfaces: a 25-pin **User** port and an RS-232 **Host** port. The **User** port provides only essential control capabilities. The RS-232 interface provides full control and read back capabilities. When the unit is operated through the **User** port, the RS-232 interface can be used to read back unit parameters.

Whether you control and monitor the unit through the **User** port or the RS-232 **Host** interface, you must satisfy the **User** port *INTERLOCK* (pins 10 and 23) signal to operate the PDX II 2000 generator. The RF output cable interlock must also be satisfied by firmly connecting the RF cable.

If the unit is operated through the RS-232 **Host** interface, positive voltage between 4 V and 24 V should be supplied to pins 4 (positive) and 17 (return) of the **User** port (the *RF POWER ON* signal).

For RF delivery, set point should be 5 W or more in power control mode or 20 V or more in voltage control mode.

To Operate the Unit for the First Time

1. Install the generator according to the installation procedures in this user manual.
2. Turn on the circuit breaker supplying AC input power to the generator.
3. Turn on the circuit breaker at the rear of the generator. The front panel numeric display should light.
4. Connect the RF cable to the output connector and make sure cable is connected all the way.

If the RF cable is not fully connected, the RF output cable interlock may not engage.

5. Establish interlock connection through the generator **User** port.

The **INTERLOCK** LED should light. This LED will only light if both the RF cable and **User** interlocks are satisfied.

6. Set the generator to operate in either host (through RS-232 **Host** port) or user control mode (through the **User** port).

The generator returns to user control mode every time that AC power is cycled. To change the control mode, use host command **14**.

7. If in the host control mode, make sure that a positive voltage between 4 V and 24 V is supplied to pins 4 (positive) and 17 (return) (*RF POWER ON*) of the **User** port.

See the **User** port *RF POWER ON* signal for more information.

8. Select regulation mode, which could be forward power, load power, or voltage regulation.
9. Make sure that set point is 5 W or more (in power control mode) or 20 V or more (in voltage control mode).

The requested set point should be accurately displayed on the front panel display.

10. Send the *RF POWER ON* signal.

The **RF ON** LED on the front panel should light.

In user control mode, the *RF POWER ON* signal transitions from low to high on pins 4 and 17 of the **User** port. If positive voltage was already applied to pins 4 and 17 when AC power to generator was enabled, there would be no output RF power. The user has to cycle voltage on pins 4 and 17 to low and then back to high to enable RF.

In host control mode, the *RF POWER ON* signal is **Host** port command **2**. To enable RF with command **2**, a high level signal should be present on pins 4 and 17 of the **User** port.

The unit is now ready for normal operation.

COMMAND SEQUENCE AND TIMING RECOMMENDATIONS

The recommended command sequence and timing provides guidelines to ensure that:

- Commands are issued in the correct order
- The delay between sending commands is long enough to allow the generator to respond to the previous command

If commands are issued in an incorrect order or the required time between issuing commands has not been met, the generator may not respond in the expected manner. This could appear to be a generator malfunction when it is not, and that can be avoided by using the recommended command sequence and timing.

Table 5-5. Recommended command sequence and timing

Sequence description	Command sequence
<p style="text-align: center;">1</p> <p>To set the unit to voltage control (DC bias) mode with a set point and turn RF on when:</p> <ul style="list-style-type: none"> • RF is off • Unit is set to power regulation mode • Set point is zero 	<p>Issue commands in this order from the indicated interface:</p> <ol style="list-style-type: none"> 1. Set to voltage control (DC bias) mode at the User port. 2. Wait 20 ms. 3. Turn RF ON at the User port. 4. Wait 10 ms. 5. Set voltage set point at the User port.
<p style="text-align: center;">2</p> <p>To set the unit to voltage control mode with a set point and turn RF on when:</p> <ul style="list-style-type: none"> • RF is off • Unit is set to power regulation mode • Set point is zero 	<p>Issue commands in this order from the indicated interface:</p> <ol style="list-style-type: none"> 1. Set to voltage control (DC bias) mode at the User port. 2. Wait 10 ms. 3. Set voltage set point at the User port. 4. Wait 20 ms. 5. Turn RF ON at the User port.
<p style="text-align: center;">3</p> <p>To set the unit to load power regulation with a set point and turn RF on when:</p> <ul style="list-style-type: none"> • RF is off • Unit is set to voltage control (DC bias) mode • Set point is zero • Forward power regulation setting is active 	<p>Issue commands in this order from the indicated interface:</p> <ol style="list-style-type: none"> 1. Set to power regulation mode at the User port. 2. Wait 10 ms. 3. Set to load power regulation at the User port. 4. Wait 10 ms. 5. Turn RF ON at the User port. 6. Wait 20 ms. 7. Set power set point at the User port.

Table 5-5. Recommended command sequence and timing (Continued)

Sequence description	Command sequence
<p style="text-align: center;">4</p> <p>To set the unit to load power regulation mode and with a set point and turn RF on when:</p> <ul style="list-style-type: none"> • RF is off • Unit is set to voltage control (DC bias) mode • Set point is zero • Forward power regulation setting is active 	<p>Issue commands in this order from the indicated interface:</p> <ol style="list-style-type: none"> 1. Set to power regulation mode at the User port. 2. Wait 10 ms. 3. Set to load power regulation at the User port. 4. Wait 10 ms. 5. Set power set point at the User port. 6. Wait 20 ms. 7. Turn RF ON at the User port.
<p style="text-align: center;">5</p> <p>To set the unit to load power regulation mode with a set point and leave RF off when:</p> <ul style="list-style-type: none"> • RF is on • Unit is set to voltage control (DC bias) mode • Forward power regulation setting is active 	<p>Issue commands in this order from the indicated interface:</p> <ol style="list-style-type: none"> 1. Send an RF OFF command at the User port. 2. Wait 10 ms. 3. Set to power regulation mode at the User port. 4. Wait 10 ms. 5. Set to load power regulation at the User port. 6. Wait 10 ms. 7. Set power set point at the User port.
<p style="text-align: center;">6</p> <p>To set the unit to voltage control (DC bias) mode with a set point and leave RF off when:</p> <ul style="list-style-type: none"> • RF is on 	<p>Issue commands in this order from the indicated interface:</p> <ol style="list-style-type: none"> 1. Send an RF OFF command at the User port. 2. Wait 10 ms. 3. Set to voltage control (DC bias) mode at the User port. 4. Wait 10 ms. 5. Set voltage set point at the User port.

Table 5-5. Recommended command sequence and timing (Continued)

Sequence description	Command sequence
<p style="text-align: center;">7</p> <p>To set the unit to voltage control (DC bias) mode with a set point, pulsing frequency, pulsing duty cycle, and turn RF on when:</p> <ul style="list-style-type: none"> • RF is off • Unit is in power regulation mode 	<p>Issue commands in this order from the indicated interface:</p> <ol style="list-style-type: none"> 1. Set to voltage control (DC bias) mode at the User port. 2. Wait 5 ms. 3. Set pulse frequency at the Host port. 4. Wait 10 ms. 5. Set pulse duty cycle at the Host port. 6. Wait 5 ms. 7. Set voltage set point at the User port. 8. Wait 20 ms. 9. Turn RF ON at the User port.
<p style="text-align: center;">8</p> <p>To set the unit to load power regulation mode with pulse frequency, pulse duty cycle, a set point, and turn RF on when:</p> <ul style="list-style-type: none"> • RF is off • Unit is in voltage control (DC bias) mode • Forward power regulation setting is active 	<p>Issue commands in this order from the indicated interface:</p> <ol style="list-style-type: none"> 1. Set to power regulation mode at the User port. 2. Wait 10 ms. 3. Set to load power regulation at the User port. 4. Wait 10 ms. 5. Set pulse frequency at the Host port. 6. Wait 10 ms or wait for CSR code before sending next command. 7. Set pulse duty cycle at the Host port. 8. Wait 5 ms. 9. Set power set point at the User port. 10. Wait 20 ms. 11. Turn RF ON at the User port.

UNIT FEATURES

The PDX II 2000 generator offers the following features for improved handling and operation:

- Automatic tuning
- Pulsing output

Related Links

- “Automatic Tuning” on page 5-22
- “Pulsing Output” on page 5-26

AUTOMATIC TUNING

Understanding Automatic Tuning and Sweep Frequency

The PDX II 2000 generator has an automatic tuning feature, which allows a generator to sweep through its frequencies until it optimizes power delivery and minimizes reflected power.

Different processes and chambers run with varying operating parameters. The PDX II 2000 generator delivers up to 2000 W from 360 kHz to 440 kHz (400 kHz \pm 10%). To optimize the power being delivered, the PDX II 2000 generator uses an automatic tuning algorithm.

During tuning, the PDX II 2000 generator minimizes load reflection coefficient D , where:

$$D = 3000 * \Gamma^2 = 3000 * (\text{reflected power})/(\text{forward power})$$

D is scaled to 3000 to allow using numbers without a decimal point. If generator is loaded to 50 Ω , $D = 0$. If the generator is loaded to open or short circuit, $D = 3000$.

RF ON TUNING



Important

This description gives only basic information about automatic tuning. For detailed information about automatic tuning, contact AE Global Services.

If automatic frequency tuning is enabled, the generator automatically tries to find the best operating frequency. The best operating frequency is the frequency at which the load reflection coefficient magnitude D is at its lowest possible value (a small load reflection coefficient magnitude corresponds to a load impedance that is close to 50 Ω , and to low reflected power).

At RF on, the generator starts at predefined frequency (start frequency) and waits a predefined amount of time (tuning delay) to let the process to stabilize. Actual waiting time is:

$$t = \text{tuning delay} + 10 \text{ msec}$$

After the initial delay, the generator starts to adjust the frequency to minimize the load reflection coefficient D for normal operation. The target for the D is the low tuning threshold (which can be numbers between 0 to 3000). The generator continues adjusting

the frequency until the D magnitude falls below the low tuning threshold. When the low tuning threshold is reached, tuning stops.

If the generator cannot reach the low tuning threshold and the tune time exceeds the tuning timeout, the generator delivers error code **200**, unable to tune.

If the generator cannot reach the low tuning threshold and it exceeds a maximum number of iterations (maximum tuning count), the target for the D changes to the high tuning threshold. Now the generator continues to adjust the frequency until the D magnitude falls below the high tuning threshold. When the high tuning threshold is reached, tuning stops.

If generator can't reach the high tuning threshold and tune time exceeds the tuning timeout, the generator delivers error code **200**, unable to tune.

RETUNING

As a process continues with RF on, conditions can change, and the changing conditions can affect the load reflection coefficient magnitude.

If generator is just tuned, $D = D_{\text{tuned}}$ and frequency is constant. Now, if because of a process change parameter D increases to this value:

$$D_{\text{retune}} = D_{\text{tuned}} + \text{retuning threshold}$$

then, the generator starts the retuning process. This algorithm works exactly the same way as for RF ON tuning, except there is no initial tuning delay.

Automatic Tuning Parameters

You can allow the tuning algorithm to sweep the entire range of generator frequencies, or you can optimize the automatic tuning by setting tuning parameters. For additional information on these parameters and how to use them, contact AE Global Services..

[Table 5-6](#) describes frequency tuning parameters and shows the AE Host command used to set or report each parameter value. See the AE Host for additional description of the commands and parameter ranges.

Table 5-6. Frequency tuning parameters

Parameter	Description	Command	Default value
Frequency tuning mode	Toggles between automatic tuning and manual frequency adjustment. <ul style="list-style-type: none"> • Fixed: Turns automatic tuning off, allowing to set or change generator frequency. • Sweep: Turns automatic tuning on. 	Set: 48 Report: 148	Sweep

Table 5-6. Frequency tuning parameters (Continued)

Parameter	Description	Command	Default value
Start frequency (kHz)	Sets the start frequency for automatic tuning.	Set: 46 Report: 146	400 kHz
Minimum frequency (kHz)	Sets the lowest frequency limit for automatic tuning.	Set: 44 Report: 144	360 kHz
Maximum frequency (kHz)	Sets the highest frequency limit for automatic tuning.	Set: 45 Report: 145	440 kHz
Frequency step maximum (Hz)	Sets the maximum single frequency step the generator uses as frequency is changing. This is also the starting step size. This step should be large enough to allow the frequency tuning algorithm to keep up with a dynamic load.	Set: 118 , subcommand 2 Report: 248 , subcommand 2	1000 Hz
Frequency step minimum (Hz)	Sets the minimum single frequency step the generator uses as frequency is changing. This step should be large enough to make the resulting change in load reflection coefficient significant when compared to system and measurement fluctuations and noise, while being small enough to allow the unit frequency to tune close to an optimum value.	Set: 118 , subcommand 1 Report: 248 , subcommand 1	100 Hz
Retuning threshold	If the load reflection coefficient (D) increases beyond its current value plus the retuning threshold value (D + retuning value), the tuning algorithm begins retuning unit frequency.	Set: 58 Report: 158	40
High tuning threshold	Sets the high tuning threshold. If the generator cannot reach the low tuning threshold and it exceeds a maximum number of iterations (maximum tuning count value), the target for the D changes to the high tuning threshold.	Set: 118 , subcommand 6 Report: 248 , subcommand 6	1300
Low tuning threshold	Sets the low tuning threshold. After an initial delay, the generator starts to adjust the frequency to minimize load reflection coefficient D for normal operation. The target for the D is the low tuning threshold.	Set: 118 , subcommand 7 Report: 248 , subcommand 7	1
Fixed frequency	Sets the unit frequency in Hz when the unit is in fixed frequency mode.	Set: 61 Report: 161	400000

Table 5-6. Frequency tuning parameters (Continued)

Parameter	Description	Command	Default value
Tuning time-out	If the generator cannot reach the low tuning threshold and the tune time exceeds the tuning timeout value, the generator delivers error code 200 , unable to tune. If tuning time-out is set to 0, the generator continues to tune indefinitely or until gamma threshold is reached.	Set: 38 Report: 138	0
Tune delay (μs)	Sets the time in ms the generator waits after RF is turned on before sweeping begins. RF remains fixed at start frequency until this time expires. Actual tune delay is 10 μs longer than the parameter value.	Set: 60 Report: 160	50
Tuning gain delay	Prevents the algorithm from increasing the frequency step size immediately after changing the size of the frequency step. Increasing this number increases the delay.	Set: 118 , subcommand 23 Report: 248 , subcommand 23	4
Maximum tuning count	Sets the number of steps that the generator uses when attempting to reach the low tuning threshold.	Set: 118 , subcommand 8 Report: 248 , subcommand 8	100
Step up gain	Sets the magnitude of frequency step increase when the error is decreasing. A value of n sets the gain to 2 ⁿ .	Set: 118 , subcommand 3 Report: 248 , subcommand 3	0
Step down gain	Sets the magnitude of frequency step decrease when the error is increasing. A value of 3 sets the gain to 2 ⁻³ = 0.125.	Set: 118 , subcommand 4 Report: 248 , subcommand 4	1
Scan step size (Hz)	This command is not active.	n/a	n/a

Table 5-6. Frequency tuning parameters (Continued)

Parameter	Description	Command	Default value
Tuning step	Sets the tuning step time. You cannot change this parameter while the RF output is on. The range of valid values is from 8 μ s to 4096 μ s. The resolution for setting tuning step time is currently 16 μ s. The unit rounds all values of tuning step time to the nearest multiple of 16 μ s; for example, the unit rounds the minimum value of 8 to 16.	Set: 118 , subcommand 22 Report: 248 , subcommand 22	800
Gamma threshold mode	This command is not active	n/a	n/a

PULSING OUTPUT

Understanding Pulsing

When pulsing is enabled, the PDX II 2000 generator pulses RF output on and off based on frequency and duty-cycle settings:

- The frequency defines the length of pulsing cycles, that is, the time from the beginning of one RF on event to the beginning of the next RF on event. You can set values from 10 Hz to 2000 Hz in 1 Hz increments.
- The duty cycle sets the percentage of each pulsing cycle for which output is on. You can set values from 10 to 90 percent in 1 percent increments with a minimum on time of 225 μ s. For example, if the pulsing frequency is set to 1000 Hz, the minimum duty cycle is 23 percent. If the duty cycle is set to 45 percent, the output will be on 45 percent of the time and off 55 percent of the time.

If either frequency or duty cycle is set to zero, pulsing is disabled.

An RF on event during pulsing is different than an RF on event when RF is enabled:

- When RF is enabled, the generator starts with the lowest power level and then ramps up the power until it meets the set point. The ramp up process lasts about 8 ms and is too slow for pulsing.
- During pulsing, when RF turns off, the generator remembers inverter settings. When the next RF on event happens, RF comes on with the same power setting as the end of the previous pulse. Power control loop becomes active 150 μ s after the start of the pulse, when the pulse transient process is over, and regulates power until RF is off again. Then all settings get frozen until the start of the next pulse.

This way of turning RF on and off allows for the much faster pulsing, but at the same time it results in more transients and overshoots. To minimize transients, RF always turns on and off in the correct phase of the RF clock. When an internal circuitry

command comes to start the next pulse, the generator waits up to one RF cycle for the correct phase of the internal RF clock, and then starts in this phase. The same event happens when the generator receives another internal circuitry command to end pulse. As a result, RF on length could be more than programmed by up to 2.5 μ s. RF off length also could be longer than programmed by up to 2.5 μ s.

For master/slave pulsing, the rear SMA **Sync Out** connector on the master unit should be connected to the rear SMA **Sync In** connector on a slave unit, using a coax cable. The slave unit receives a signal (*PSYNC*) from the master, and then matches its pulsing to the signal from the master. Configure the unit for master or slave operation with host command **26** (subcommand 1).

Pulsing Parameters

Pulsing and its master/slave mode operate on a series of parameters.

Table 5-7. Pulsing parameters

Parameter	Description	Valid Values	Command
Pulsing master/slave	Sets a PDX II 2000 generator to be a master unit or a slave unit.	Master or Slave	Set: 26 Report: 172
Pulse sync out	Enables a signal (<i>PSYNC</i>) from a master unit that synchronizes pulsing in slave units.	On or off	Set: 26 Report: 172
Pulsing frequency (Hz)	Sets the length of pulsing cycles; that is, the time from the beginning of one RF on event to the beginning of the next RF on event.	10 Hz to 2000 Hz in 1 Hz increments	Set: 93 Report: 193
Pulsing duty cycle (%)	Sets the percentage of each pulsing cycle for which output is on. For example, if you set the duty cycle percentage to 15%, then during each pulsing cycle, output will be on 15% of the time and off 85% of the time.	10% to 90% in 1% increments	Set: 96 Report: 196
Slave delay	Command not active	n/a	n/a

To Set Up Master/Slave Pulsing

To prepare for master/slave operation, you need a coaxial cable.

1. Make sure that RF output is off.
2. Connect one end of the coaxial cable to the **Pulse Out** connector (SMA) on the unit that will be the master unit.
3. Connect the other end of the coaxial cable to the **Pulse In** connector (SMA) on the unit that will be the slave unit. You can daisy-chain multiple units.

4. Using **AE Host** port command **26** , set the pulsing mode, master or slave mode, and pulse sync output for each unit.

You can use **AE Host** port command **172** to report these values.

To Enable/Disable Pulsing and Set Pulsing Parameters

If your PDX II 2000 generator has the pulsing option, you can enable or disable pulsing output. You can make pulsing settings through the **Host** port or Virtual Front Panel (VFP). If you are using VFP, see the VFP help system for an explanation of how to enable or disable pulsing.

1. Configure the unit as a master using Host port command **26**, subcommand 1.
2. To enable pulsing, send a valid set of frequency and duty cycle settings to the PDX II 2000 generator:
 - Command **93** – pulsing frequency
 - Command **96** – duty cycle.
3. To disable pulsing, send a value of zero to either the pulsing frequency command or the duty cycle command.

Host port commands **193** and **196** report the frequency and duty cycle settings. **Host** port command **172** reports the slave input delay setting.

The unit does not save pulsing settings when you turn it off. To return pulsing settings to default, cycle power to the unit.

If using master/ slave, you do not need to make identical pulsing settings for all units.

Troubleshooting and Global Services

Before calling AE Global Services, perform recommended checks and troubleshooting procedures. If you are still unable to resolve the issue and resume normal operation after following these checks and procedures, contact AE Global Services.

TROUBLESHOOTING THE UNIT

This troubleshooting procedure assumes that the unit was properly installed and operated. To install and operate the unit, follow installation procedures and the first time operation process.

If unit doesn't deliver output power or output power doesn't match set point, follow the procedure outlined below before calling AE Global Services.

1. Is the front panel numeric display or the **AC ON** LED lit?
 - If yes, go to the next step.
 - If no, the unit may have experienced an overtemperature condition (meaning that the internal temperature of the unit exceeds 65°C (149°F). Turn AC power off and let the unit cool down.
 - Also, there could be an external AC line fault. Verify that there is AC voltage on the pins of the connector that plugs into the PDX II 2000 generator.
2. Is the **INTERLOCK** LED lit?
 - If yes, go to the next step.
 - If no, the interlock is not satisfied.
 - 1) Ensure that there is a connection between the interlock pins 10 and 23 on the **User** port. You may try to remove the user connector and connect these interlock pins with separate piece of wire to see if it satisfies the interlock. If the user interlock is not satisfied, the front panel numeric display will show error code **35** (other interlock error codes may also be present).
 - 2) Make sure that the RF output cable is firmly attached. RF cannot be enabled if this cable is not securely attached. If the numeric display shows error code **36**, the RF output cable interlock is not satisfied.
 - 3) Make sure that the RF output interlock is properly calibrated as described in the installation procedures.
3. Is the **FAULT** LED lit?

- If no, go to the next step.
 - If yes, the unit has detected a fault. This fault will generate an error code which can be read on the front panel numeric display and is also provided through the serial port. [“Error Code Table”](#) on page 6-6.
4. Is the **RF ON** LED lit ?
- If yes, go to the next step.
 - If no, the unit may not have received an RF on command.
 - 1) Make sure you are in the correct communications mode (user or host).
 - 2) If unit is controlled through the RS-232 **Host** interface, make sure there is positive voltage between 4 V and 24 V supplied to pins 4 (positive) and 17 (return) of the **User** port. If this voltage is interrupted even for a short time, the unit will turn output off. To reset the unit, restore the voltage and through the serial port send an RF off command and then send a RF on command.
 - 3) Verify that set point is 5 W or more in power control mode or 20 V or more in voltage control mode
5. Is the **POWER LIMIT** LED lit?
- If no, go to next step.
 - If yes, see [“To Troubleshoot Set Point Problems”](#) on page 6-3.
6. Turn the unit off. Verify that the unit has been installed correctly and then follow the procedure for first time operation. If the problem persists, contact AE Global Services.

To Troubleshoot an Overtemperature Condition

If your unit has an overtemperature condition with the **OVERTEMP** LED lit, it means that either the cold plate temperature or the internal air temperature has exceeded the limit, disabling output. Usually, disabling RF output stops temperature rise and the unit starts to cool down.

However, if external air temperature or the temperature of the cooling water is extremely high (above overtemperature limits), the internal temperature will continue to rise, and when it reaches 65°C (149°F), it will disable the auxiliary power supply. In this case, the display and the internal fan will stop working and the unit will not communicate through the interface ports.

The overtemperature fault clears when the internal temperature falls below warning levels.

1. Make sure that the inlet cooling water is flowing at the specified rate.
2. Make sure that inlet water temperature does not exceed specifications.
3. Make sure that the ambient air temperature around the PDX II 2000 generator during operation does not exceed the specified limit, 40°C (104°F).

4. Make sure air inlet and outlet vents have proper clearance, 1.27 cm (0.5") at the right side and 10.16 cm (4") at the rear panel.
5. Check air inlet and outlet for debris.

To Troubleshoot Set Point Problems

When the **POWER LIMIT** LED is lit, the unit is unable to supply enough power to match the set point due to limiting conditions. When an internal protection limit is exceeded, the RF output is limited, but does not shut off. If this LED is lit along with a high reflected power reading, it is most likely that the generator is protecting itself in response to an external load condition.

1. Disable the output.
2. In the voltage control mode, make sure the cable from the connector **Sense V-in** is connected to the output of the peak detector. Check the value of **External Volts** on the **Generator** LEDs, front panel numeric display. If it is 2000 V, this indicates problem with the cable (open). If it is 0 V, the cable may have an internal short.
3. Inspect and evaluate the unit's RF output connector, output cable, tuner, and chamber. Look for signs of arcing and heat stress.
4. Make sure that RF cables are not shorted.
5. Verify cable continuity. Swap suspected cables or units with known good cables or units.

Also, if unit is in pulsing mode with the shortest RF ON time and load has very high Q, transients may last longer than the pulse length. In this case the power (or voltage) control loop may not have enough time to adjust the power level and may not be able to meet set point.

INTERNAL DIAGNOSTICS

PDX II 2000 generator units have self-diagnostics that indicate unit operational status. You can use these diagnostics to test a unit without removing it from a production system. For example, the system stops and you need to check all components to determine which of its components has a problem. You can quickly determine your PDX II 2000 generator unit's operational status.

You must change the unit's control mode to diagnostic before starting the diagnostic test. After you start the self-diagnostic test, the unit performs these tasks:

1. Turns RF on and operates into a shorted load condition.
2. Determines if the values of three parameters are within ranges set in a diagnostic tab file:
 - Rectified bus voltage

- Test voltage
 - Forward power
3. Turns RF off.

Once the self-diagnostic test is complete, you can send a command that will return test status codes.

To Run Internal Diagnostics

You can run this test by issuing AE Host commands.

1. Turn RF off.
2. Remove AC power from the unit by taking one or both of the following actions:
 - Turn off the circuit breaker.
 - Disconnect AC power.
3. Prepare the output connector for the test.
 - a. Remove the RF output connector cover on the RF output.
 - b. Disconnect the output cable.
 - c. Attach an RF shorting cap.

An RF shorting cap is a cap that provides an "short" RF connection. To obtain an RF shorting cap, contact AE Global Services.



Important

RF output cable interlock adjustment might be needed. See the procedure in the RF output installation section, or contact AE Global Services if you have questions.

- d. Install the RF output connector cover.
4. Restore AC power to the unit by taking one or both of the following actions:
 - Reconnect AC power.
 - Turn on the circuit breaker.
 5. Using command **14**, Byte 0 = 8, change the control mode to diagnostic.
 6. Issue command **95** with byte 0 = 1 (enable diagnostics mode and start diagnostics).

The unit turns RF on for a second, and then turns RF off. When it turns RF off, the unit disables the diagnostics mode.

7. Issue command **244**.

The unit returns a diagnostic status code that reports whether the diagnostic test passed or failed, and if it failed, which parameters failed. See host port command **244** for more details.

8. Remove AC power from the unit by taking one or both of the following actions:

- Turn off the circuit breaker.
 - Disconnect AC power.
9. Prepare the output connector for normal operation.
 - a. Remove the RF output connector cover on the RF output.
 - b. Connect the RF output cable.



Important

RF output cable interlock adjustment might be needed before you attach the RF output cable. See the procedure in the RF output installation section, or contact AE Global Services if you have questions.

- c. Install the RF output connector cover.
10. Restore AC power to the unit by taking one or both of the following actions:
 - Reconnect AC power.
 - Turn on circuit breaker.
 11. Issue command **14** to reset the control mode.

The unit is ready for normal operation.

TROUBLESHOOTING USING ERROR CODES

Accessing Error Codes

You can access PDX II 2000 generator error codes in two ways:

- You can view active error codes on the front panel display. The display will scroll through the active error codes, showing each for about one second. If there is only one error code, it is displayed continuously.
- You can use serial communication to request a report of active warning or fault error codes (command **223**). Once you have received a list of active errors, see the error code table to look up these error codes and troubleshoot the associated faults or warnings.



Important

Only active fault error codes will show on the front panel display. Warning error codes do not display on the front panel. Therefore, if you see an error code displayed on the front panel, it is a fault code, not a warning.

Fault and Warning Types and Clearing Faults

The unit can report one or more types of faults or warnings:

- **Unrecoverable Fault:** This type of fault can occur at initialization or after running. You can try to clear it by AC power cycling the unit. If the fault persists, contact AE Global Services.
- **Latching Faults:** When these faults occur, regardless of whether RF is off or on at the time that the fault occurs, they remain latched until the unit receives an RF off command. If the cause of the fault has not cleared, the fault will not clear.
- **Non-Latching Faults:** Faults that are self clearing when RF is off.
 - **Fault occurs when RF is off:** A fault is non-latching only if the fault occurs while RF is off. If the fault condition clears, the fault self clears. If the cause of the fault has not cleared, the fault does not clear. The unit does not require an RF off command before turning output on. As soon as the fault condition clears, you can turn output on.
 - **Fault occurs when RF is on:** If output was on when the fault occurred, output turns off and the fault latches. The unit requires an RF off command before turning output on.
- **Non-Latching Warnings:** Warnings self clear when the condition that caused the warning clears. If a warning occurs while output is on, output remains on.

Error Code Table

Table 6-1. Error codes

Error Code	Problem Description	Suggested Action
19 EEPROM CRC Fault	Internal, unrecoverable fault	Cycle AC power to the unit. If the fault persists, contact AE Global Services.
20 Hardware Initialization Fault	Internal, unrecoverable fault	Cycle AC power to the unit. If the fault persists, contact AE Global Services.
21 RTOS Initialization Fault	Internal, unrecoverable fault	Cycle AC power to the unit. If the fault persists, contact AE Global Services.
22 EEPROM Initialization Fault	Internal, unrecoverable fault	Cycle AC power to the unit. If the fault persists, contact AE Global Services.
23 A-D Converter Initialization Fault	Internal, unrecoverable fault	Cycle AC power to the unit. If the fault persists, contact AE Global Services.
24 Invalid Pin Number Fault	Internal, unrecoverable fault	Cycle AC power to the unit. If the fault persists, contact AE Global Services.

Table 6-1. Error codes (Continued)

Error Code	Problem Description	Suggested Action
25 Unexpected Error Fault	Internal, unrecoverable fault	Cycle AC power to the unit. If the fault persists, contact AE Global Services.
26 RTOS Runtime Fault	Internal, unrecoverable fault	Cycle AC power to the unit. If the fault persists, contact AE Global Services.
27 User Card Configuration Fault	Internal, unrecoverable fault	Cycle AC power to the unit. If the fault persists, contact AE Global Services.
28 NOVRAM Fixed Store Fault	Internal, unrecoverable fault	Cycle AC power to the unit. If the fault persists, contact AE Global Services.
29 NOVRAM Free Store Fault	Internal, unrecoverable fault	Cycle AC power to the unit. If the fault persists, contact AE Global Services.
30 Interlock Open Fault	Non-latching fault <ul style="list-style-type: none"> • An interlock is open. 	Verify interlock. If the fault persists, contact AE Global Services.
31 Coldplate Overtemperature Fault	Temperature is detected by a thermal switch. Latching fault <ul style="list-style-type: none"> • Coldplate temperature is hotter than 65°C (149°F). • Coolant is out of specification 	Take these actions: <ul style="list-style-type: none"> • Verify coolant specifications for flow-rate and maximum temperature are met. If the fault persists, contact AE Global Services.
32 Ambient Air Overtemperature: Warning and Fault	Non-latching warning <ul style="list-style-type: none"> • Air temperature is higher than 60°C (140°F). • Possible obstruction of the air inlet panel. Latching fault <ul style="list-style-type: none"> • Air temperature is higher than 70°C (158°F). • Possible obstruction at or near air inlet panel. 	Take these actions: <ol style="list-style-type: none"> 1. Verify ambient temperature at air inlet on the side panel. 2. Verify there is no obstruction within 13 mm (0.5") of the air inlet panel. If the warning or fault persists, contact AE Global Services.

Table 6-1. Error codes (Continued)

Error Code	Problem Description	Suggested Action
35 User Port Interlock Open Fault	Non-latching fault <ul style="list-style-type: none"> • Interlock at the User port is not satisfied. 	Verify interlock. If the fault persists, contact AE Global Services.
36 RF Output Cable Interlock Open Fault	Non-latching fault <ul style="list-style-type: none"> • The RF output cable interlock is open. 	Verify that the RF output cable is firmly attached. If the fault persists, contact AE Global Services.
39 Out Of Set Point Warning	Non-latching warning <ul style="list-style-type: none"> • This warning can occur anytime a nonfavorable (high VSWR) load is presented to the generator output such that the unit cannot produce the requested delivered power. The threshold for this warning is $\pm 1\%$ or 3 W, whichever is greater. 	Take these actions: <ol style="list-style-type: none"> 1. Ensure that you have set the correct regulation mode. 2. Check the RF output cable connections and integrity. 3. Ensure that your set point is neither above nor below power limits for the generator. If the warning persists, contact AE Global Services.
40 Coldplate Temperature Rate Fault	Latching fault <ul style="list-style-type: none"> • Coolant flow rate and temperature may be out of specification. • Water may be flowing in the wrong direction. • Water temperature is rising too fast. 	Take these actions: <ol style="list-style-type: none"> 1. Verify coolant specifications for flow-rate and maximum temperature are met. 2. Verify water is flowing in the correct direction. If the fault persists, contact AE Global Services.
47 AC Line Sag Fault	Latching fault <ul style="list-style-type: none"> • AC line voltage is not meeting specifications 	Verify that AC line voltage meets specifications. If the fault persists, contact AE Global Services.
48 DC Bus Low Fault	Latching fault <ul style="list-style-type: none"> • AC line voltage is low 	Verify that AC line voltage meets specifications. If the fault persists, contact AE Global Services.

Table 6-1. Error codes (Continued)

Error Code	Problem Description	Suggested Action
49 DC Bus High Fault	Non-latching fault <ul style="list-style-type: none"> AC line voltage is high 	Verify that AC line voltage meets specifications. If the fault persists, contact AE Global Services.
50 DC Bus Low Warning	Non-latching warning <ul style="list-style-type: none"> AC line voltage is low 	Verify that AC line voltage meets specifications. If the fault persists, contact AE Global Services.
51 Bad Temperature Sensor Fault	Latching fault <ul style="list-style-type: none"> A temperature sensor has failed 	Cycle AC power to the unit. If the fault persists, contact AE Global Services.
54 Onboard Power Fault	Latching fault <ul style="list-style-type: none"> A voltage regulator has failed 	Cycle AC power to the unit. If the fault persists, contact AE Global Services.
70 Auxiliary Temperature: Warning and Fault	Non-latching warning <ul style="list-style-type: none"> Auxiliary temperature is higher than 60°C (140°F). Air intake or exhaust vent may be blocked. Latching fault <ul style="list-style-type: none"> Auxiliary temperature is higher than 70°C (158°F). Air intake or exhaust vent may be blocked. 	Take these actions: <ol style="list-style-type: none"> Verify ambient temperature at air inlet on the rear panel. Verify there is no obstruction within 100 mm (4") of the air inlet panel on the back of the unit. If the warning or fault persists, contact AE Global Services.
71 Auxiliary Cap bank Temperature: Warning and Fault	Non-latching warning <ul style="list-style-type: none"> Cap bank temperature is higher than 60°C (140°F). Air intake or exhaust vent may be blocked. Latching fault <ul style="list-style-type: none"> Cap bank temperature is higher than 75°C (167°F) Air intake or exhaust vent may be blocked. 	Take these actions: <ol style="list-style-type: none"> Verify ambient temperature at air inlet on the rear panel. Verify there is no obstruction within 100 mm (4") of the air inlet panel on the back of the unit. If the warning or fault persists, contact AE Global Services.

Table 6-1. Error codes (Continued)

Error Code	Problem Description	Suggested Action
72 Auxiliary Coldplate Temperature: Warning and Fault	Non-latching warning <ul style="list-style-type: none"> • Auxiliary coldplate temperature is higher than 60°C (140°F). • Air intake or exhaust vent may be blocked. Latching fault <ul style="list-style-type: none"> • Auxiliary coldplate temperature is higher than 63°C (145.4°F). • Air intake or exhaust vent may be blocked. 	Take these actions: <ol style="list-style-type: none"> 1. Verify ambient temperature at air inlet on the rear panel. 2. Verify there is no obstruction within 100 mm (4") of the air inlet panel on the back of the unit. If the warning or fault persists, contact AE Global Services.
73 Coldplate Temperature: Warning and Fault	Temperature is detected by a thermistor. Non-latching warning <ul style="list-style-type: none"> • Coldplate temperature is hotter than 60°C (140°F). • Coolant may be out of specification. Latching fault <ul style="list-style-type: none"> • Coldplate temperature is hotter than 65°C (149°F). • Coolant is out of specification. 	Take these actions: <ul style="list-style-type: none"> • Verify coolant specifications for flow-rate and maximum temperature are met. If the warning or fault persists, contact AE Global Services.
101 Inverter Not Ready Fault	Internal, non-latching fault	Cycle AC power to the unit. If the fault persists, contact AE Global Services.

Table 6-1. Error codes (Continued)

Error Code	Problem Description	Suggested Action
200 Unable To Tune Fault	Latching fault This fault asserts when the auto-tuning algorithm is not successful based on the following criteria: <ul style="list-style-type: none"> • The lowest VSWR load within the frequency range must be < 3:1. • A load < 3:1 VSWR must be present within 3 seconds of the RF on command. This fault is typically an indicator of a problem external to the generator. Possible problems: <ul style="list-style-type: none"> • The plasma did not ignite • The match position is not correct 	<ol style="list-style-type: none"> 1. Check the RF output cable connections and integrity. 2. Ensure that process parameters are within limits. If the fault persists, contact AE Global Services.
201 Communication Watchdog Timer Fault	Latching fault <ul style="list-style-type: none"> • No communications. Timer timed out. 	Ensure that host communications meet minimum timeout value. If the fault persists, contact AE Global Services.
300 UART 0 Buffer Overflow Warning	Non-latching warning <ul style="list-style-type: none"> • Serial communication hardware problem 	Cycle AC power to the unit. If the warning persists, contact AE Global Services.
301 UART 1 Buffer Overflow Warning	Non-latching warning <ul style="list-style-type: none"> • Serial communication hardware problem 	Cycle AC power to the unit. If the warning persists, contact AE Global Services.
302 UART 2 Buffer Overflow Warning	Non-latching warning <ul style="list-style-type: none"> • Serial communication hardware problem 	Cycle AC power to the unit. If the warning persists, contact AE Global Services.
303 UART 3 Buffer Overflow Warning	Non-latching warning <ul style="list-style-type: none"> • Serial communication hardware problem 	Cycle AC power to the unit. If the warning persists, contact AE Global Services.

Table 6-1. Error codes (Continued)

Error Code	Problem Description	Suggested Action
320 UART 0 Receive Error Warning	Non-latching warning <ul style="list-style-type: none"> Serial communication hardware problem 	Cycle AC power to the unit. If the warning persists, contact AE Global Services.
321 UART 1 Receive Error Warning	Non-latching warning <ul style="list-style-type: none"> Serial communication hardware problem 	Cycle AC power to the unit. If the warning persists, contact AE Global Services.
322 UART 2 Receive Error Warning	Non-latching warning <ul style="list-style-type: none"> Serial communication hardware problem 	Cycle AC power to the unit. If the warning persists, contact AE Global Services.
323 UART 3 Receive Error Warning	Non-latching warning <ul style="list-style-type: none"> Serial communication hardware problem 	Cycle AC power to the unit. If the warning persists, contact AE Global Services.
998 Flash Mode Failure	Latching fault <ul style="list-style-type: none"> Unit failed to go into flash mode 	Cycle AC power to the unit. If the fault persists, contact AE Global Services.
999 Flash Mode Active	Latching fault <ul style="list-style-type: none"> Unit is in flash mode 	Cycle AC power to the unit. If the fault persists, contact AE Global Services.
1001 Message Queue Overflow	Internal, unrecoverable fault <ul style="list-style-type: none"> Serial communication hardware problem 	Cycle AC power to the unit. If the fault persists, contact AE Global Services.
1002 Network Configuration Fault	Latching fault <ul style="list-style-type: none"> Serial communication hardware problem 	Cycle AC power to the unit. If the fault persists, contact AE Global Services.
1003 UART Queue Fault	Internal, unrecoverable fault <ul style="list-style-type: none"> Serial communication hardware problem 	Cycle AC power to the unit. If the fault persists, contact AE Global Services.
1004 AEBus Master Message Queue Overflow Fault	Internal, unrecoverable fault <ul style="list-style-type: none"> Serial communication hardware problem 	Cycle AC power to the unit. If the fault persists, contact AE Global Services.

Table 6-1. Error codes (Continued)

Error Code	Problem Description	Suggested Action
1005 AEBus Master Communication Fault	Internal, unrecoverable fault <ul style="list-style-type: none"> Serial communication hardware problem 	Cycle AC power to the unit. If the fault persists, contact AE Global Services.
1006 AEBus Master Command Fault	Internal, unrecoverable fault <ul style="list-style-type: none"> Serial communication hardware problem 	Cycle AC power to the unit. If the fault persists, contact AE Global Services.

AE GLOBAL SERVICES

Please contact AE Global Services if you have questions or problems that cannot be resolved by working through the provided troubleshooting. When you call Global Services, make sure to have the unit serial number and part number. These numbers are available on unit labels.

Table 6-2. AE Global Services 24 X 7 contact information


Office	Contact
AE, World Headquarters 1625 Sharp Point Drive Fort Collins, CO 80525 USA  Important For returns and repairs, please call Global Services to get the correct shipping address.	Phone (24 hrs/day, 7 days/week): 800.446.9167 or 970.221.0108 Fax (M–F, 7:00 am – 5:30 pm MST): 970.407.5981 Email: (We will respond to email by the next business day.) technical.support@aei.com For Aera flow product support, call 800.MFC.AERA (800.632.2372). For Sekidenko thermal product support, contact by email: thermalapplications@aei.com

Table 6-2. AE Global Services 24 X 7 contact information (Continued)

Office	Contact
<p>If you would prefer to contact a local or regional sales or service office, visit the Advanced Energy web site for current contact information (click on Sales and Support):</p> <ul style="list-style-type: none">• http://www.advanced-energy.com	

RETURNING UNITS FOR REPAIR

Before returning any product for repair and/or adjustment, first follow all troubleshooting procedures. After following troubleshooting procedures, if your unit is unable to resume normal operation, contact AE Global Services and discuss the problem with a representative. Be prepared to give them the model number and serial number of the unit as well as the reason for the proposed return. This consultation call will allow Global Services to determine if the unit must actually be returned for the problem to be corrected. Such technical consultation is always available at no charge.

Index

25-pin User port
 introduction 4-1
 pin descriptions 4-2
 satisfying minimal requirements 4-1
 wiring diagrams 4-7

A

address
 AE Bus 4-12

AE Bus
 action commands 4-21
 address 4-12
 baud rate 4-12
 checksum byte 4-17
 command number byte 4-17
 communication mode 4-13
 data bytes 4-17
 DIP switch 4-13
 header byte 4-16
 ideal communication transaction 4-18
 interfaces, overview 4-11
 message packet 4-15
 optional length byte 4-17
 overview 4-11
 protocol 4-15
 report commands 4-21
 setting baud rate 4-13
 setting network address 4-13
 transmission parameters 4-12

AE customer services contact information
 6-13

AE Host
 command status response (CSR) 4-20
 commands 4-20

alert boxes in user manual 1-1

authorized returns 6-14

automatic tuning
 parameters 5-23
 understanding 5-22
 when retuning 5-22
 when turning RF on 5-22

B

baud rate
 AE Bus 4-12
 setting for AE Bus 4-13

C

cabling requirements
 25-pin User port 4-2

certification 1-3

checksum byte
 AE Bus 4-17

command number byte
 AE Bus 4-17

command sequence recommendation 5-18

command status response (CSR)
 AE Host 4-20

commands
 action 4-21
 AE Host 4-20
 command status response (CSR) in AE
 Host 4-20
 report 4-21

communications
 25-pin User port 4-1
 AE Bus protocol 4-15
 AE Bus transmission parameters 4-12
 ideal transaction in AE Bus 4-18
 mode, setting 4-13
 RS-232 with AE Bus 4-11

compliance
 directives and standards 1-4
 unit 1-3

conditions of use 1-5

conformity, letter and declaration 1-3

connecting output power 5-11

connector
 Bias Voltage Out 5-13

connectors
 25-pin User port 4-1
 Harting Han AC 70 A 5-11
 Host port 4-11
 I/O and auxiliary 5-13
 RF output power 5-8
 Sense V-In 5-13

cooling specifications 3-9

cooling water
 connecting 5-7

customer service contact information 6-13

D

data bytes
 AE Bus 4-17

- DIP switch
 - AE Bus 4-13
 - AE Bus communication mode, setting 4-13
 - setting bus baud rate 4-13
- directives 1-4
- drawings, unit 5-2

E

- electrical specifications 3-3
- electromagnetic compatibility
 - directives and standards 1-4
- environmental specifications 3-11
- error codes 6-6
 - accessing 6-5
 - troubleshooting 6-5

F

- faults
 - see* error codes
 - clearing 6-5
 - types 6-5
- features
 - automatic tuning 5-22
 - pulsing 5-26, 5-27
- forward power, theory 2-3
- front panel
 - LEDs 5-14
- front panel, drawing 5-2

G

- general description 2-1
- Global Services contact information 6-13
- grounding 5-7
- guidelines
 - safety 1-1
 - SEMI 1-4

H

- header byte
 - AE Bus 4-16
- Host port
 - connector 4-11
 - pin descriptions 4-12
 - transmission parameters 4-12

I

- icons
 - in user manual 1-1
- industry guidelines, compliance with 1-4
- input power
 - Harting Han 70 A connector 5-11

- installation
 - command sequence recommendation 5-18
 - connecting AC input power 5-11
 - connecting for external voltage regulation mode 5-13
 - connecting I/O 5-13
 - connecting output power 5-11
 - grounding 5-7
 - mounting requirements 5-1
 - preparing to install 5-1
 - requirements 5-6
 - RF output connector, interlock calibration 5-8
 - spacing requirements 5-1
 - unpacking 5-7

interfaces

- 25-pin User port 4-1
- 25-pin User port connector 4-1
- 25-pin User port pin descriptions 4-2
- AE Bus 4-11
- cabling requirements (25-pin User port) 4-2
- minimal requirements for 25-pin User port 4-1
- RS-232 4-11

interlock

- at RF output connector 5-11
- calibration at RF output connector 5-8
- overview 1-6

internal diagnostics

- diagnostic control mode 6-3
- results 6-4
- run 6-4
- unit operational status 6-3

L

- labels on unit 1-2
- LEDs
 - front panel monitoring 5-14
 - Generator 5-16
 - status 5-15
- length byte
 - AE Bus 4-17

M

- message packet
 - AE Bus 4-15
- minimal requirements for 25-pin User port 4-1

N

- network address
 - set for AE Bus 4-13

normal operation
 command sequence recommendation 5-18
 monitoring with front panel LEDs 5-16
 status LED states 5-15

O

operating data LEDs 5-16
 operation
see also theory of operation
 first time 5-17
 output
 pulsed 5-26
 standard 5-26
 overtemperature condition, troubleshooting 6-2

P

PDX II 2000 generator
see unit
 physical specifications 3-1
 pin descriptions
 25-pin User port 4-2
 Host port 4-12
 ports
 25-pin User port 4-1
 Host 4-11
 power regulation
 forward power 2-3
 load power 2-3
 product
 certification 1-3
 compliance 1-3
 labels icons on unit 1-2
 protocol
 AE Bus 4-15
 pulsing 5-27
 enabling and setting 5-28
 setting up 5-27

R

rear panel, drawing 5-2
 reflected power, theory 2-3
 returns
 authorized 6-14

S

safety
 conditions of use 1-5
 directives and standards 1-4
 guidelines 1-1

self diagnostics
see internal diagnostic
 SEMI guidelines 1-4
 set point, troubleshooting 6-3
 signal descriptions, User port 4-2
 spacing requirements 5-1
 specifications
 cooling 3-9
 electrical 3-3
 environmental 3-11
 physical 3-1
 standards 1-4
 status indicators 5-15
 symbols
 in user manual 1-1
 on unit 1-2

T

theory of operation 2-1
 transmission parameters
 AE Bus 4-12
 troubleshooting
 accessing error codes 6-5
 checklist 6-1
 clearing faults 6-5
 error codes 6-6
 fault and warning types 6-5
 overtemperature condition 6-2
 POWER LIMIT LED 6-3
 set point problems 6-3
 unit producing power when fault occurred 6-1
 using error codes 6-5

U

unit
 description 2-1
 grounding 5-7
 icons and symbols used 1-2
 preparing to install 5-1
 unpacking 5-7
 unpacking 5-7
 user manual
 alert boxes in 1-1
 symbols and icons used 1-1
 User port
 25-pin connector 4-1
 introduction 4-1
 signal descriptions 4-2

W

warning
see error codes

types 6-5
warning in user manual 1-1
warranty
authorized returns 6-14

water cooling
connecting 5-7
wiring diagrams
25-pin User port 4-7